

032



# ASD 开关柜综合测控装置

## ASD switch cabinet integrated measuring and control device

安装使用说明书 V3.6  
Installation and operation instruction V3.6

安科瑞电气股份有限公司  
Acrel Electric Co., Ltd.

# 申 明

## DECLARATION

版权所有，未经本公司之书面许可，此手册中任何段落，章节内容均不得被摘抄、拷贝或以任何形式复制、传播，否则一切后果由违者自负。

本公司保留一切法律权利。

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form by any means, electronic, mechanical photocopying, recording, or otherwise without prior permission of Acrel. All rights reserved.

本公司保留对本手册所描述之产品规格进行修改的权利，恕不另行通知。

订货前，请垂询当地代理商以获悉本产品的最新规格。

This company reserve power of revision of product specification described in this manual, without notice. Before ordering, please consult local agent for the latest specification of product.

# 目 录

## Contents

1 安装使用指南.....	1
1 Installation and operation guide.....	1
1.1 产品概述.....	1
1.1 Product overview.....	1
1.2 型号说明.....	1
1.2 Description of types.....	1
1.3 产品型号及功能.....	2
1.3 Product model and function.....	2
1.4 技术指标.....	3
1.4 Technical indexes.....	3
protocol.....	4
1.5 产品安装.....	4
1.5 Product installation.....	4
1.5.1 安装方法.....	5
1.5.1 Installation method.....	5
1.5.2 开孔尺寸 (单位: 毫米) .....	6
1.5.2 Hole size (unit: mm).....	6
1.5.3 温湿度传感器、无线温度收发器的安装.....	7
1.5.3 Installation of temperature and humidity sensor, wireless temperature transceiver.	7
1.5.4 无线温度传感器的安装.....	7
1.5.4 Installation of wireless temperature transceiver.....	7
1.6 接线方法.....	9
1.6 Wiring method.....	9
1.6.1 接线端子.....	9
1.6.1 Wiring terminal.....	9
1.6.2 典型接线图.....	11
1.6.2 Typical wiring diagram.....	11
2 产品操作指南.....	13
2 Product operation guide.....	13
2.1 显示介绍(ASD300).....	13
2.1 Display introduction (ASD300).....	13
2.2 操作介绍.....	14
2.2 Operation introduction.....	14
2.2.1 装置上电.....	14
2.2.1 Device power-on.....	14
2.2.2 动态模拟图.....	14
2.2.2 Dynamic mimetic diagram.....	14
2.2.3 高压带电显示及闭锁 (ASD100、ASD100G、ASD200、ASD300、ASD310、ASD320) .....	15
2.2.3 HV live displaying and lock (ASD100、ASD100G、ASD200、ASD300、ASD310、	

ASD320) .....	15
2.2.4 报警继电器输出 (ASD100G、ASD200、ASD300、ASD310、ASD320) ....	16
2.2.4 Alarm relay output (ASD100G、ASD200、ASD300、ASD310、ASD320) .	16
2.2.5 自动温湿度控制 (ASD100、ASD100G、ASD200、ASD300、ASD310、ASD320) .....	16
2.2.5 Auto temperature and humidity control (ASD100、ASD100G、ASD200、ASD300、ASD310、ASD320) .....	16
2.2.6 无线测温 (ASD300/ASD320 可选功能) .....	17
2.2.6 Wireless temperature measurement (ASD300/ASD320 optional functions).....	17
2.2.7 智能语音防误提示 (ASD200、ASD300、ASD310、ASD320) .....	19
2.2.8 柜内照明功能 (ASD200、ASD300、ASD310、ASD320) .....	19
2.2.8 Cabinet lighting function (ASD200, ASD300, ASD310, ASD320).....	19
2.2.9 人体感应(ASD200、ASD300、ASD310、ASD320).....	20
2.2.9 Human body induction (ASD200, ASD300, ASD310, ASD320).....	20
2.2.10 电力参数测量(ASD300).....	20
2.2.10 Electric power parameter measurement (ASD300).....	20
2.2.11 带电显示自检 (ASD100、ASD100G、ASD200、ASD300、ASD310、ASD320) .....	20
2.2.11 Self-inspection of live displaying (ASD100, ASD100G, ASD200, ASD300, ASD310, ASD320).....	20
2.2.12 核相功能 (ASD100、ASD100G、ASD200、ASD300、ASD310、ASD320) .....	21
2.2.12 Nuclear phase function (ASD100, ASD100G, ASD200, ASD300, ASD310, ASD320).....	21
2.3 ASD300 编程设置.....	21
2.3 ASD300 programming setting.....	21
2.4 ASD200 编程设置.....	24
2.4 ASD200 programming setting.....	24
3 通讯指南.....	25
3 Communication guide.....	25
3.1 通讯格式详解.....	25
3.1 Detailed explanation of communication format.....	25
3.1.1 读取数据 (功能码 03H/04H) .....	25
3.1.1 Reading data (function code 03H/04H).....	25
3.1.2 预置单个寄存器 (功能码 06H) .....	26
3.1.2 Preset single register (function code 06H).....	26
3.1.3 预置多个寄存器 (功能码 10H) .....	27
3.1.3 Preset several registers (function code 10H).....	27
3.2 参量地址表.....	27
3.2 Parameter address table.....	27
4 常见故障的诊断分析与排除方法.....	34
4 Diagnostic analysis and troubleshooting of common faults.....	34
4.1 辅助电源故障.....	34
4.1 Fault of auxiliary power supply.....	34

4.2 环境温湿度显示故障.....	34
4.2 Fault of environment temperature and humidity display.....	34
4.3 告警继电器动作故障.....	35
4.3 Fault of alarm relay operation.....	35
4.4 一次模拟状态指示灯故障.....	35
4.4 Fault of primary simulated status indicator light.....	35
4.5 通信故障.....	35
4.5 Communication fault.....	35
4.6 节点温度值显示故障.....	36
4.6 Fault of node temperature value display.....	36
附 A LW42 凸轮开关安装说明.....	37
Annex A Installation instructions of LW42 cam switch.....	37
附 B 储能开关安装说明.....	39
Annex B Installation specification of stored energy switch.....	39

# 1 安装使用指南

## 1 Installation and operation guide

### 1.1 产品概述

#### 1.1 Product overview

ASD 系列开关柜综合测控装置用于 3~35kV 户内开关柜，适用于中置柜、手车柜、固定柜、环网柜等多种开关柜。具有一次回路模拟图及开关状态指示，高压带电显示及核相，自动温湿度控制，加热回路故障告警，无线测温，人体感应自动照明，语音提示，电参数测量及 RS485 通讯接口等众多功能，集操作、显示于一体。产品按功能分为 ASD100、ASD100L、ASD100G、ASD200、ASD300、ASD310、ASD320 七种型号。

ASD series switch cabinet integrated measuring and control device is used for 3-35kV indoor switch cabinet, applying to centrally installed switchgear, trolley cabinet, fixed switchgear, ring main unit and other various switch cabinets. With primary circuit mimetic diagram and switch status indicator, HV live displaying and nuclear phase, automatic temperature and humidity control, heating circuit fault alarm, wireless temperature measurement, body induction auto lighting, voice prompt, electrical parameter measurement and RS485 communication interface and other numerous functions, it has integrated operation and display into one. The product is classified into ASD100, ASD100L, ASD100G, ASD200, ASD300, ASD310, ASD320 seven models according to its function.

### 1.2 型号说明

#### 1.2 Description of types

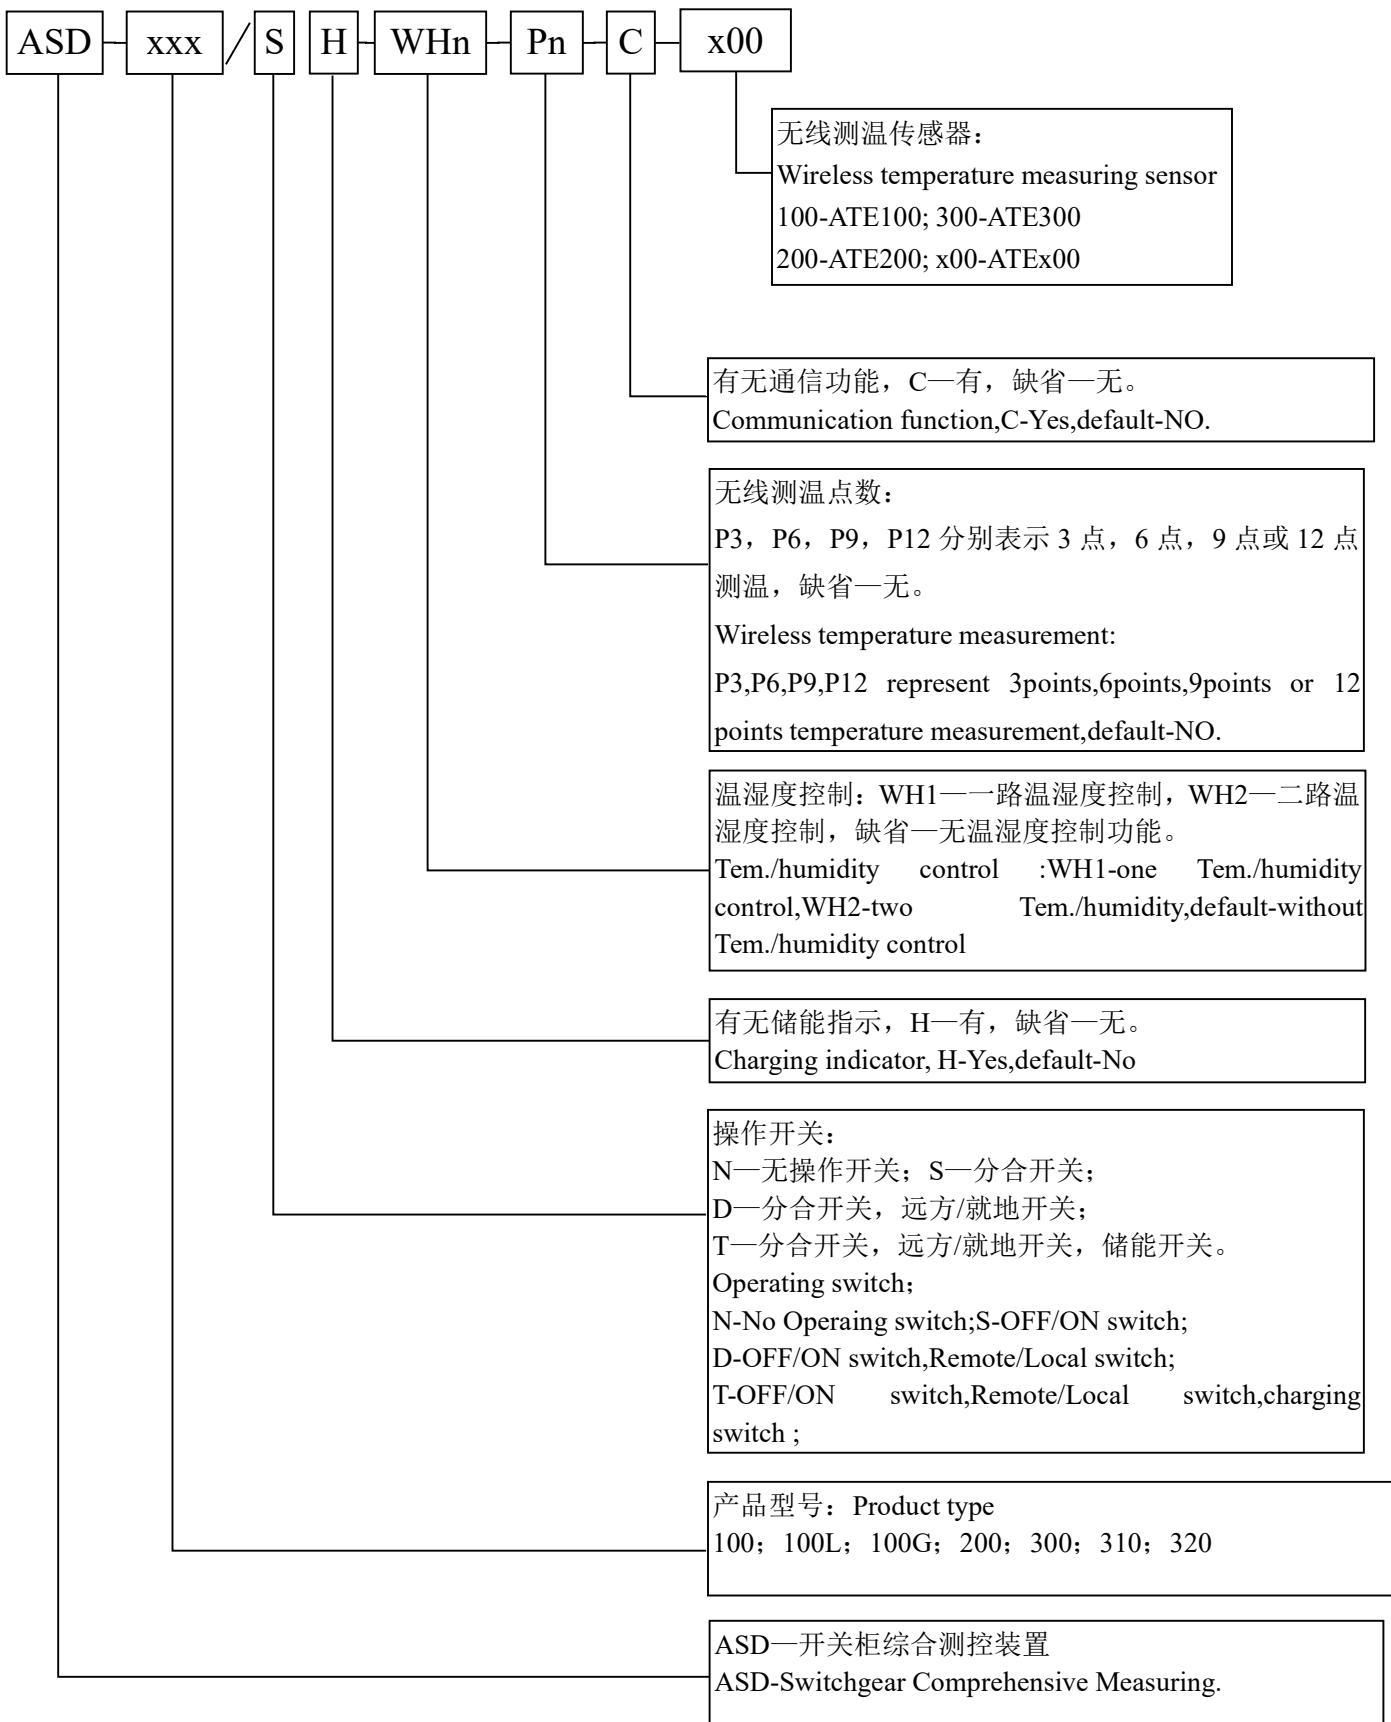


图 1.1 ASD 系列产品命名规则



Figure1.1 ASD Series Product naming rule

### 1.3 产品型号及功能

#### 1.3 Product model and function

表 1 ASD 系列产品型号及功能

Table1 ASD Series Product specification and functions

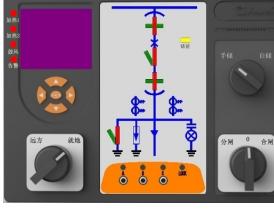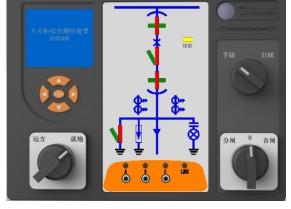型号 Type 功能项 function	ASD100L	ASD100/ASD100G		ASD200	ASD300	ASD310	ASD320
产品图片 Product picture							
开孔尺寸 Catout	73mm×161mm	112mm×172mm			220mm×165mm		
一次模拟图 Primary circuit analog chart				标配 Standard			
带电显示 及自检/核相 Live display and self-test/nuclear phase	无 None			可选, 需订购前说明 Optional,need to order instructions			
电磁闭锁出口 Electromagnetic lockout outlet	无 None	一路 Configuration 1	两路 Configuration 2		一路 Configuration 1		
温湿度控制 Temp./humidity control	无 None	标配 1 路传感器,线长 4 米 Standard 1 sensor,line length 4meters					
		两路加热 一路鼓风 TWO heating One blowing	两路加热 TWO heating		两路加热, 一路鼓风 TWO heating, One blowing		
强制加热 Forced heating	无 None	标配 Standard			标配 Standard		
加热回路 故障告警 Heating circuit Fault alarm	无 None	无 None	标配 Standard		无 None		
语音提示 Voice prompts	无 None	无 None			标配 Standard		
人体感应探头 Sensing probe for humanbody	无 None	无 None			标配 Standard		
操作旋钮 Operating knob	无 None	无 None			可选 Optional		
断路器分合 次数显示 Beaker frequency shows	无 None	无 None			标配 Standard		

无线测温 Wireless temperature measurement	无 None	无 None	无 None	可选 Optional	无 None	可选 Optional
主回路电力参数测量 Measure and display of power parameter	无 None	无 None	无 None	标配 Standard	无 None	
RS485 通讯接口 Communication port	无 None	无 None		标配 Standard		

## 1.4 技术指标

### 1.4 Technical indexes

表 2 ASD 系列技术指标

Table2 ASD Series Technical data

项目 Item		指标 Value					
		ASD100L	ASD100/ ASD100G	ASD200	ASD300	ASD310	ASD320
额定输入 Rated input	接线方式 Wiring mode	—	—	—	3P3L 或 3P4L 3P3L or 3P4L	—	—
	电压 Voltage	—	—	—	100V	—	—
	电流 Current	—	—	—	5A	—	—
	频率 frequency	—	—	—	50Hz	—	—
准确度 Accuracy rating	电流、电压 Voltage、 Current	—	—	—	0.5 级 0.5 class	—	—
	有功功率 Active power 无功功率 Reactive power	—	—	—	1 级 1 class	—	—
	电能 Energy	—	—	—	1 级 1 class	—	—
	环境温度 Environment temperature	—	±2°C		±1°C		
	相对湿度 Relative humidity	—	±10%		±5%		
装置工作电源 Device Working power		AC 85~265V, DC 100~300V					
功耗 Power consumption	辅助电源 Auxiliary power	≤5VA	≤5VA	≤6VA	≤8VA		
	电压输入 Voltage input	—	—	—	≤0.5VA	—	

	电流输入 Current input	---	---	---	≤1VA	---		
通讯 Communication	协议 protocol	---	---	MODBUS-RTU				
	波特率(bps) Baud rate(bps)	---	---	2400、4800、9600、19200				
无线测温 Wireless temperature measurement	测温范围 Temperature measurement range	---	---		0℃~+125℃	---		
	测温精度	---	---		±2℃	---		
	传感器电池寿命 Sensor battery life	---	---		≥5 年 ≥5 year	---		
	传感器启动电流	---	---		≥8A	---		
环境要求 Environmental requirement	工作温度 Operating temperature	-10℃~55℃						
	相对湿度 Relative humidity	≤95%						
平均无故障工作时间 Average work time without stoppage		≥50000 小时 ≥50000 hour						

## 1.5 产品安装

### 1.5 Product installation

ASD 系列开关柜综合测控装置采用面板嵌入式安装，首先柜体盘面上制作规定尺寸的长方形槽孔，装置取下支架后嵌入槽孔，再用支架固定即可。

Panel embedded installation is adopted for ASD series switch cabinet integrated measuring and control device: firstly fabricate rectangular slot with stipulated size on cabinet face; embed the device into the slot after taking down the support and then fix by support.

### 1.5.1 安装方法

#### 1.5.1 Installation method

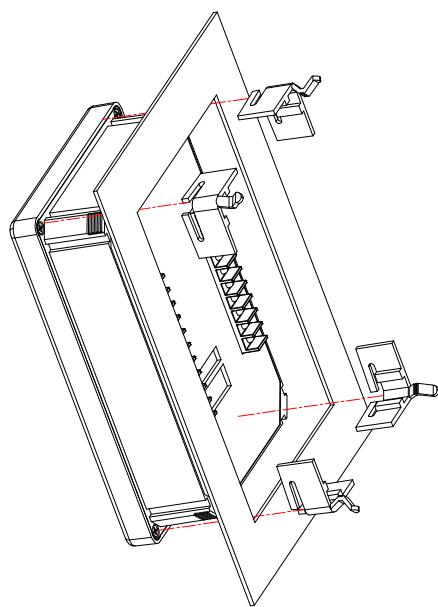


图 1.2 ASD100/ASD100L/ASD100G 安装方法

Figure 1.2 Installation method of ASD100/ASD100L/ ASD100G

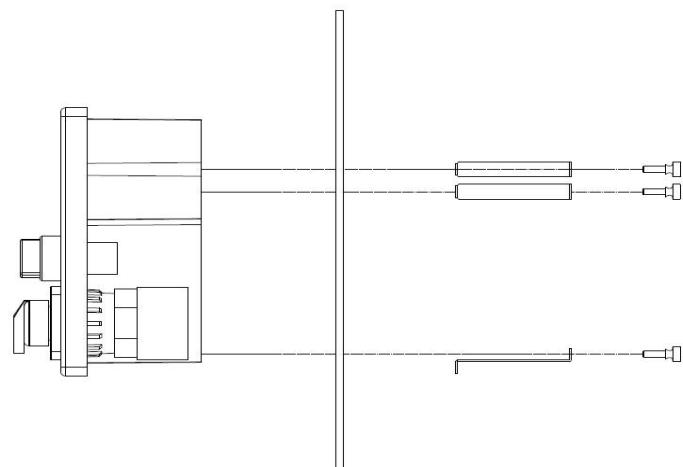


图 1.3 ASD200、ASD300、ASD310、ASD320 安装方法

Figure 1.3 Installation method of ASD200, ASD300, ASD310, ASD320

### 1.5.2 开孔尺寸 (单位: 毫米)

1.5.2 Hole size (unit: mm)

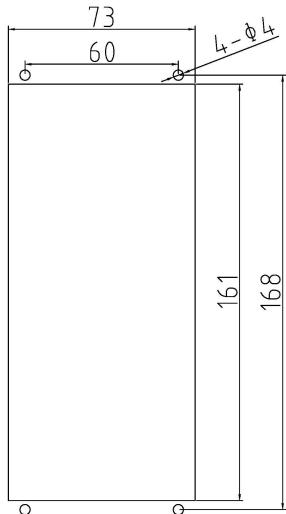


图 1.4 ASD100L 安装开孔尺寸

Figure 1.4 Hole size diagram of ASD100L

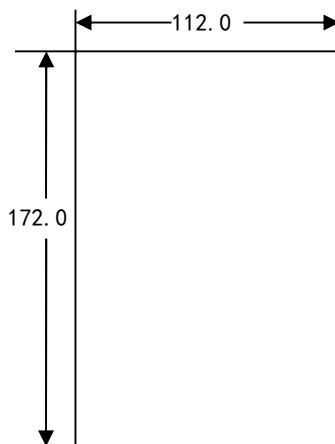


图 1.5 ASD100、ASD100G 开孔尺寸图

Figure 1.5 Hole size diagram of ASD100, ASD100G

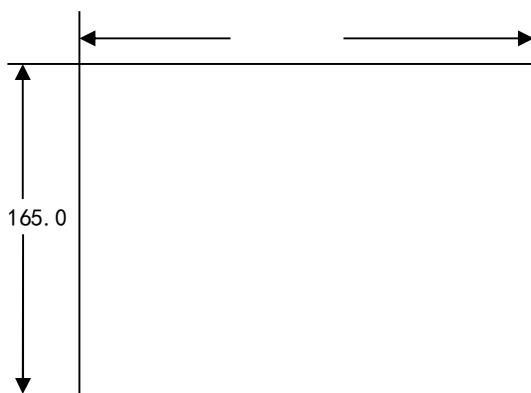


图 1.6 ASD200、ASD300、ASD310、ASD320 开孔尺寸

Figure 1.6 Hole size diagram of ASD200, ASD300, ASD310, ASD320

### 1.5.3 温湿度传感器、无线温度收发器的安装

#### 1.5.3 Installation of temperature and humidity sensor, wireless temperature transceiver

与 ASD 系列产品配套使用的温湿度传感器和无线测温接收器，可以采用导轨（DIN35mm）安装方式，也可以使用螺栓固定方式，如图 1.7 所示。

The temperature and humidity sensor and wireless temperature transceiver used as ancillary with ASD series products can adopt guide rail (DIN35mm) installation or bolt fixing, as shown in Figure 1.7.

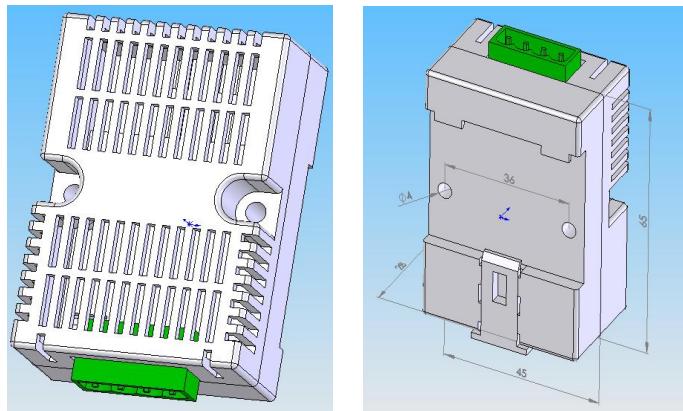


图 1.7 温湿度传感器和无线温度收发器安装方式

Figure 1.7 Installation methods of temperature and humidity sensor and wireless temperature transceiver

### 1.5.4 无线温度传感器的安装

#### 1.5.4 Installation of wireless temperature transceiver

无线温度传感器有表带固定和螺栓固定两种方式。表带式适用于手车式动触头的安装；螺栓式适用于母排搭接处，电缆与母排搭接处，隔离刀闸搭接处等用螺栓固定的电气搭接点的安装。

There are watch strap fixing and bolt fixing for the installation of wireless temperature sensor. The watch strap is applicable to the installation of trolley moving contact, while bolt fixing is applicable to the installation of busbar bonding point, cable and busbar bonding point, isolating switch bonding point and other electric bonding points fixed by bolt.

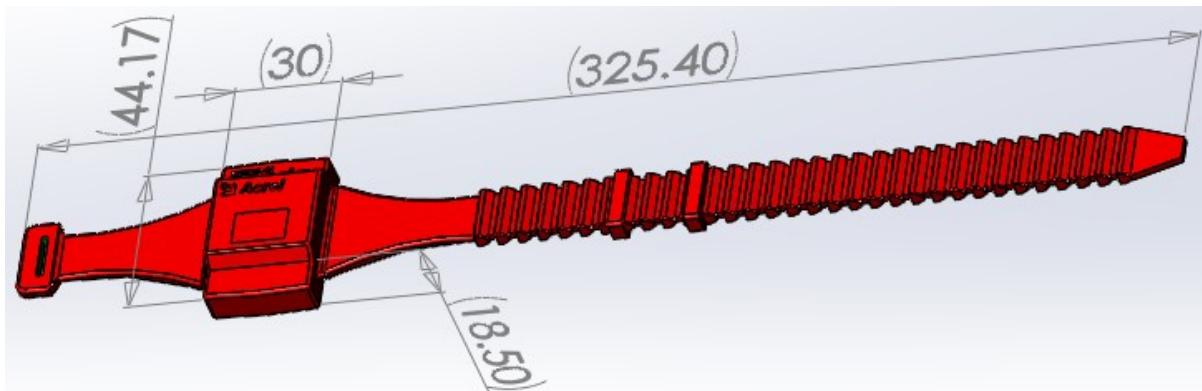


图 1.8 表带式无线温度传感器

Figure 1.8 Watch strap wireless temperature sensor

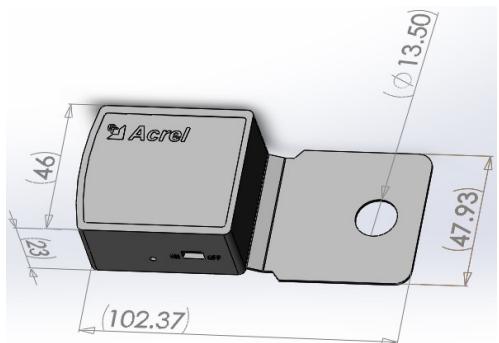


图 1.9 螺栓式无线温度传感器

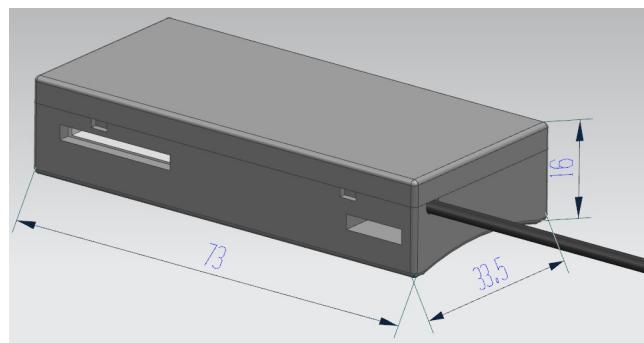


图 1.10 无源无线温度传感器 ATE300

Figure 1.9 Bolt wireless temperature sensor

Figure 1.10 Passive wireless temperature sensor ATE300

捆绑式无源无线温度传感器 ATE300 结构说明:

Tied type passive temperature sensor structure introduction of ATE300:

- 1 —— 无源无线温度传感器主体 (Body of wireless temperature sensor)
- 2 —— 温度探头, 用扎带固定在测温处 (probe, tied to temperature measuring point)
- 3 —— 扎带, 用于固定传感器主体 (tie, used to fix the sensor body)
- 4 —— 取电合金片, 用于感应取电 (alloy chip, for CT-powered)

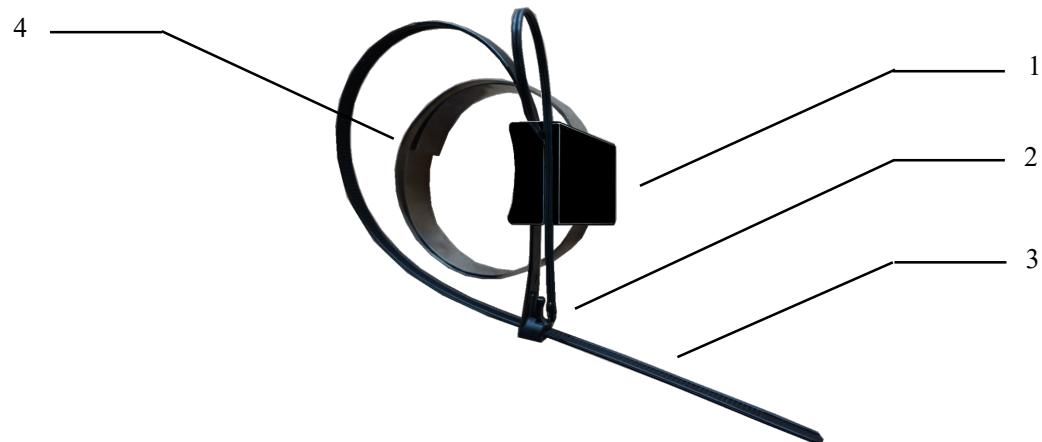


图 1.11 ATE300 结构说明

Figure 1.11 structure introduction of ATE300

## 1.6 接线方法

### 1.6 Wiring method

#### 1.6.1 接线端子

##### 1.6.1 Wiring terminal

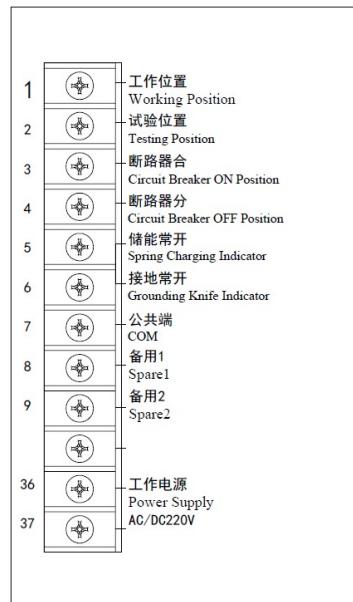


图 1.12 ASD100L 背面端子图

Figure 1.12 ASD100L back terminal diagram

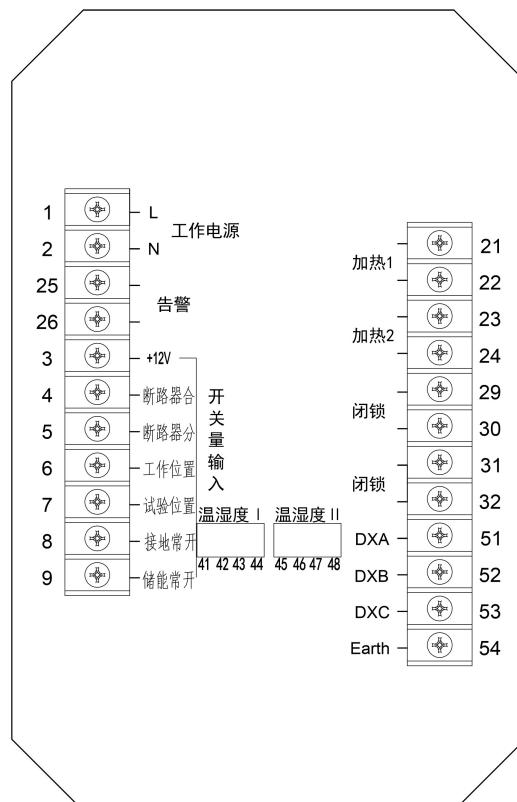


图 1.13 ASD100G 背面端子图

Figure 1.13 ASD100G back terminal diagram

注：ASD100 背面端子图中 29、30 端子为鼓风，其他端子与 ASD100G 相同。

Note: The 29, 30 terminal in ASD100 back terminal diagram are blast and the other terminals are the same as ASD100G.

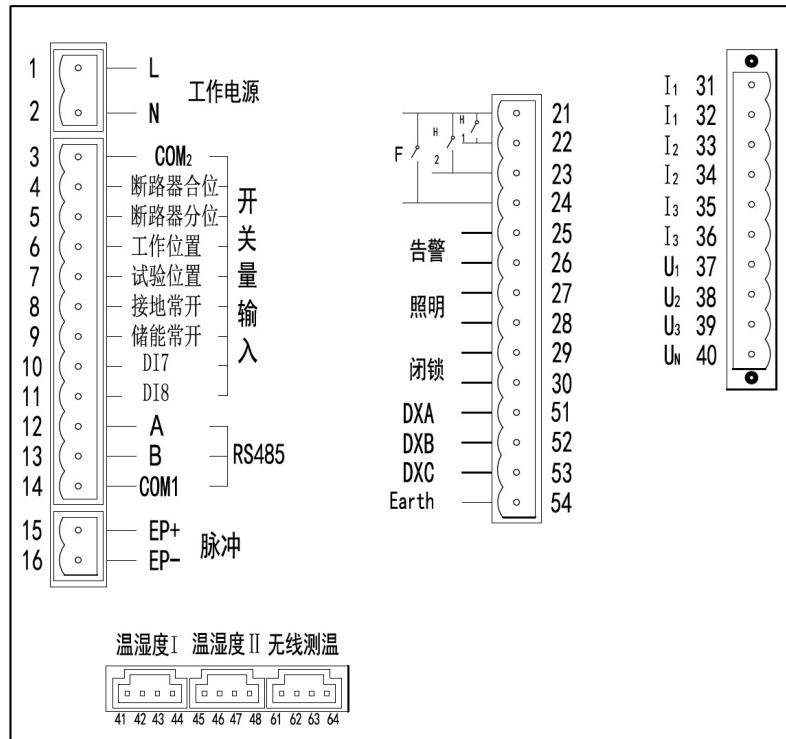


图 1.14 ASD300 背面端子图

Figure 1.14 ASD300 back terminal diagram

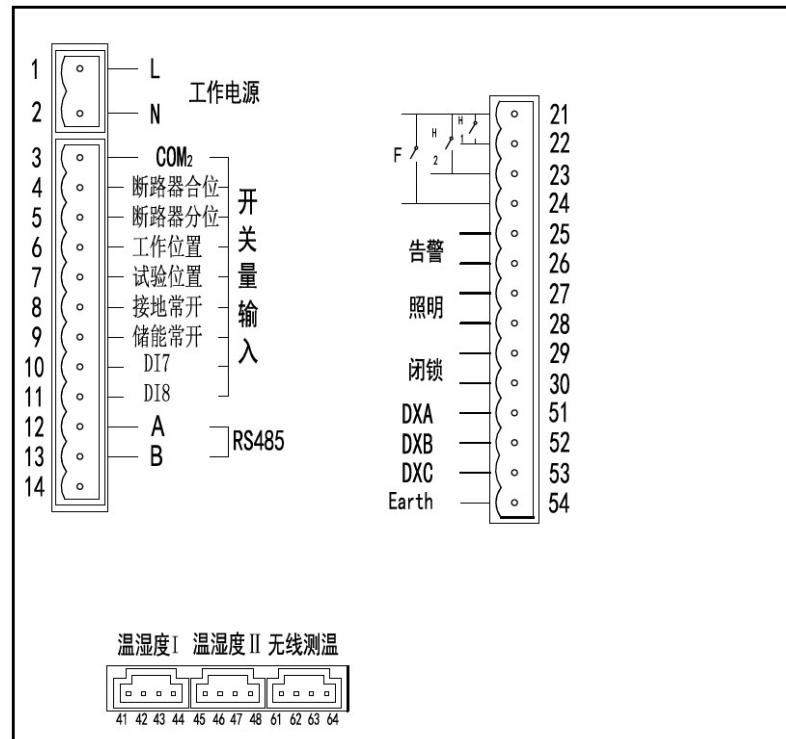


图 1.15 ASD320 背面端子图

Figure 1.15 ASD320 back terminal diagram

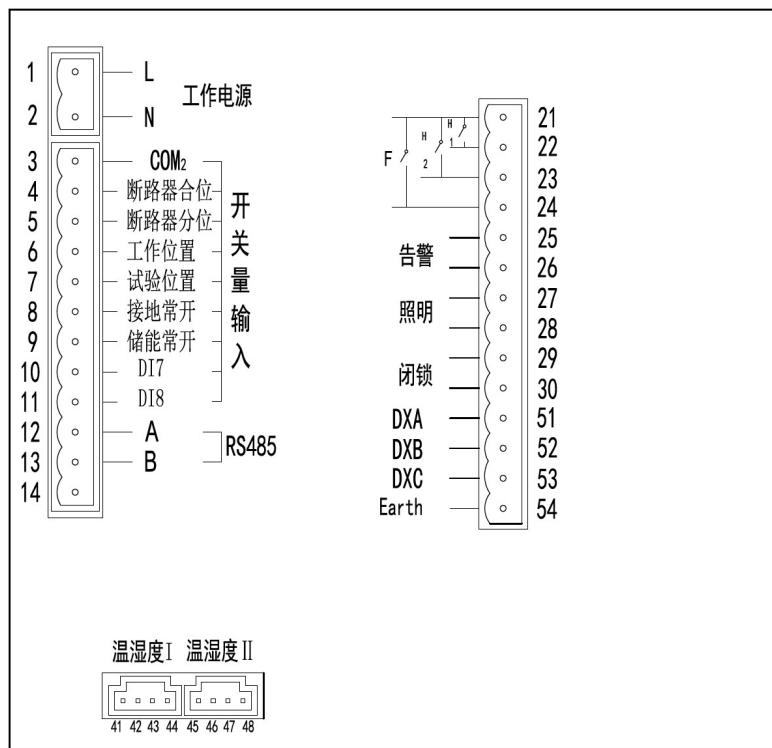


图 1.16 ASD200/310 背面端子图  
Figure 1.16 ASD200/310 back terminal diagram

### 1.6.2 典型接线图

#### 1.6.2 Typical wiring diagram

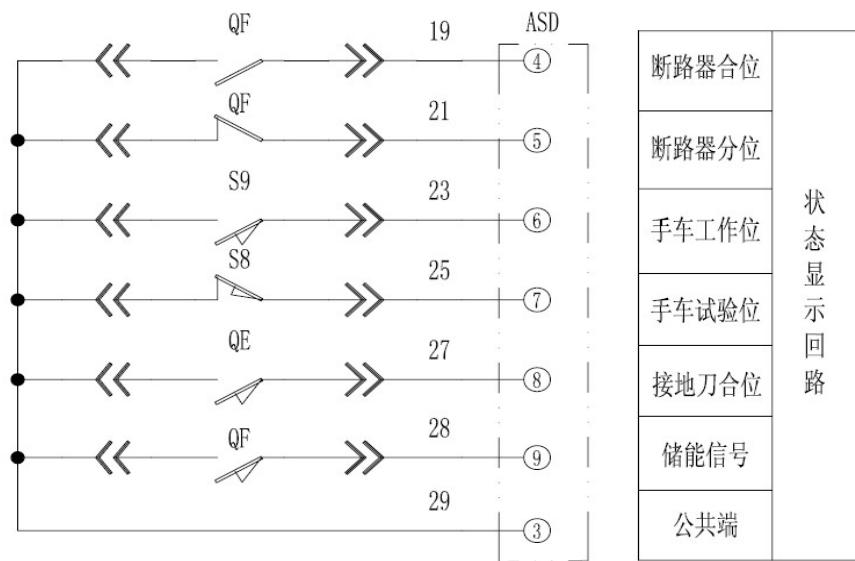


图 1.17 ASD 开关量输入回路典型接线图  
Figure 1.17 Typical wiring diagram of ASD switch input circuit

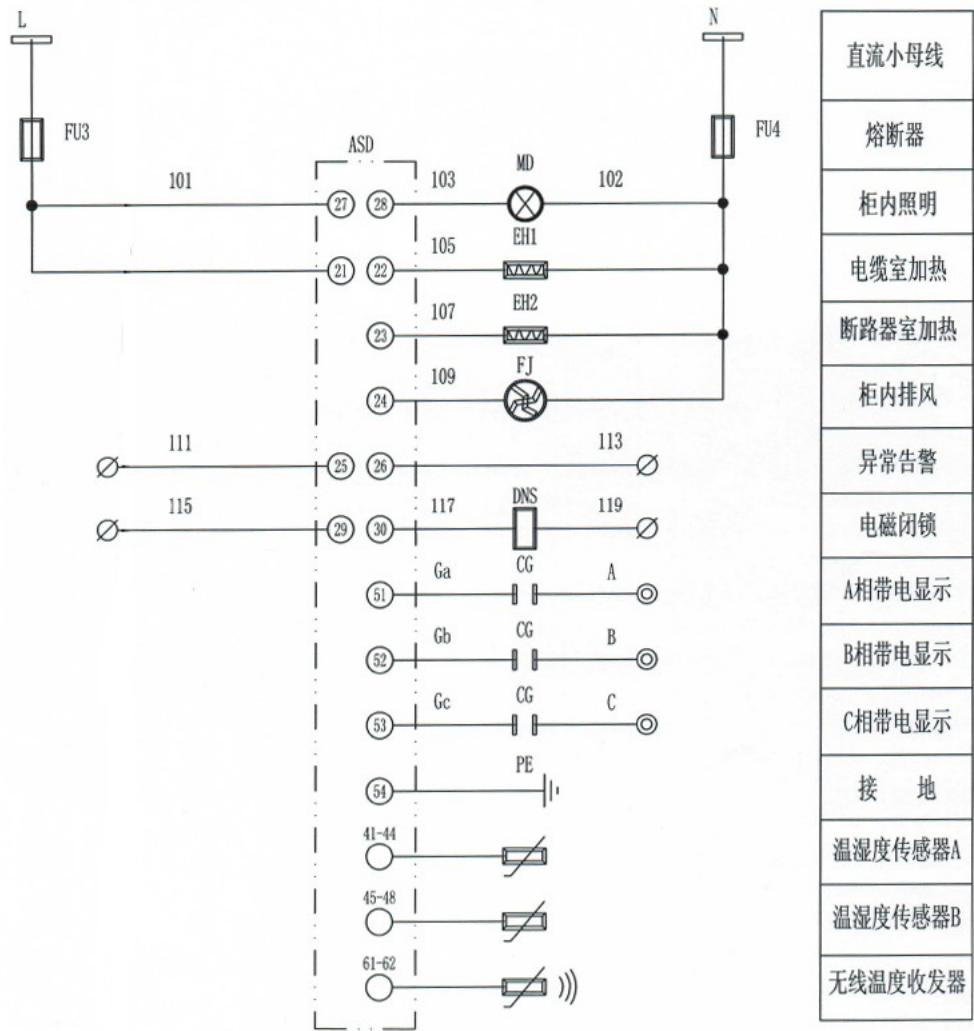


图 1.18 ASD 开关量输出、高压带电显示回路及传感器典型接线图

Figure 1.18 Typical wiring diagram of ASD switch output, HV live displaying circuit and sensor

## 2 产品操作指南

### 2 Product operation guide

本操作说明主要针对 ASD300 型开关柜综合测控装置，通用功能的描述同样适用于 ASD320、ASD310、ASD200、ASD100、ASD100G、ASD100L 型产品。

The operation instruction mainly aims at ASD300 switch cabinet integrated measuring and control device and the description of general function is also applicable to ASD320, ASD310, ASD200, ASD100, ASD100G and ASD100L products.

#### 2.1 显示介绍(ASD300)

#### 2.1 Display introduction (ASD300)

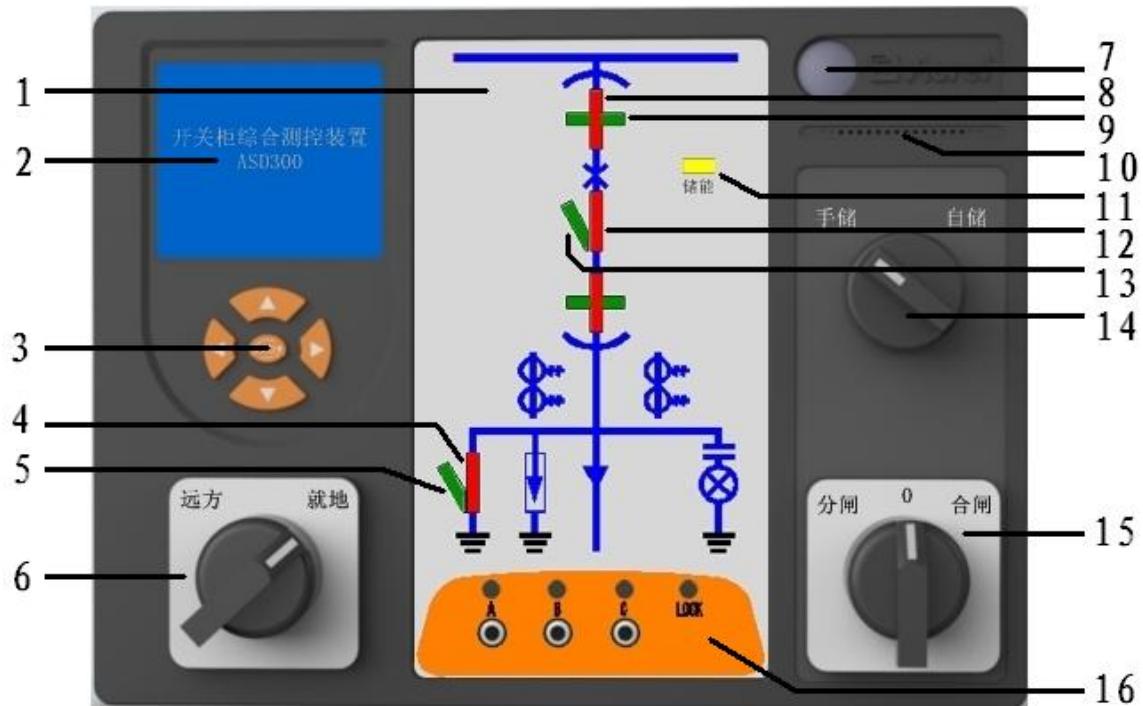


图 2.1 ASD300 前面板图

Figure 2.1 ASD300 front panel diagram

表 3 ASD300 前面板功能说明

Table 3 Function description of ASD300 front panel

编号 No.	说明 Description	编号 No.	说明 Description
1	一次方案图(电气原理图) Primary scheme diagram (electrical schematic diagram)	9	手车试验位置, 绿色 Testing position of trolley: green

2	液晶显示屏 LCD	10	语音提示 Voice prompt
3	按键 Key	11	弹簧储能指示 Spring energy storage instructions
4	接地刀闸合, 红色 Earthing knife-switch closing: red	12	断路器合位置, 红色 Breaker closing position: red
5	接地刀闸分, 绿色 Earthing knife-switch opening: green	13	断路器分位置, 绿色 Breaker tripping position: green
6	远方/就地操作开关 Remote/local operating switch	14	储能旋钮 Stored energy knob
7	人体感应探测口 Human body induction detection port	15	分闸/合闸操作开关 Tripping/closing operating switch
8	手车工作位置, 红色 Operating position of trolley: red	16	高压带电显示及闭锁 HV live displaying and lock

## 2.2 操作介绍

### 2.2 Operation introduction

#### 2.2.1 装置上电

##### 2.2.1 Device power-on

接通符合要求的工作电源，装置即进入工作状态。

Connect the working power supply conforming to requirements and the device will enter working state.

#### 2.2.2 动态模拟图

##### 2.2.2 Dynamic mimetic diagram

###### 1) 断路器分、合闸指示

###### 1) Breaker tripping/closing instructions

将断路器的分、合位置的辅助接点正确接入装置，装置上电正常工作后：

After the auxiliary contact of breaker tripping/closing position is correctly connected to device and the device is powered on for normal operation:

断路器处于合闸状态时，红色发光条 12 亮；

When the breaker is under close position, the red light bar 12 will be on;

断路器处于分闸状态时，绿色发光条 13 亮；

When the breaker is under open position, the green light bar 13 will be on;

###### 2) 手车位置指示

###### 2) Trolley position instructions:

将手车位置的辅助接点正确接入装置，装置上电正常工作后：

After the auxiliary contact of trolley position is correctly connected to device and the device is powered on for normal operation:

手车工作位置接点闭合时，红色发光条 8(上下两条)亮，指示小车位于工作位置；

When the operating position contact of trolley is closed, the red light bar 8 (upper and lower ones) will be on and it indicates that the trolley is under operating position;

手车试验位置接点闭合时，绿色发光条 9(上下两条)亮，指示小车位于试验位置。

When the testing position contact of trolley is closed, the green light bar 9 (upper and lower ones) will be on and it indicates that the trolley is under testing position.

### 3) 接地开关位置指示

#### 3) Earthing switch position instructions

将接地开关的辅助接点正确接入装置，装置上电正常工作后：

After the auxiliary contact of trolley position is correctly connected to device and the device is powered on for normal operation:

输入接点闭合时，红色发光条 4 亮，表示接地开关处于合闸状态；

When the input contact is closed, the red light bar 4 will be on and it indicates that the earthing switch is under close position;

输入接点断开时，绿色发光条 5 亮，表示接地开关处于分闸状态。

When the input contact is disconnected, the green light bar 5 will be on and it indicates that the earthing switch is under open position;

### 4) 弹簧储能指示

#### 4) Spring energy storage instructions

将储能机构的辅助接点正确接入装置，装置上电正常工作后，输入接点闭合，指示灯 11 亮，表示已储能。

After the auxiliary contact of energy storage mechanism is correctly connected in the device and the device is powered on for normal operation, the input contact will be closed and the indicator light 11 will be on and it indicates that energy has been stored.

**注：开关量与指示灯对应关系可根据用户需求灵活设定！**

**Note: The correspondence of switch quantity and indicator light can be flexibly set according to user needs.**

### 2.2.3 高压带电显示及闭锁（ASD100、ASD100G、ASD200、ASD300、ASD310、ASD320）

### 2.2.3 HV live displaying and lock (ASD100、ASD100G、ASD200、ASD300、ASD310、ASD320)

装置的高压带电显示功能适用于 3.6-40.5kV/50Hz 系统，与相应电压等级的传感器配合使用，显示主回路的带电情况。若传感器为用户自行配置，须保证其对地短路输出电流大于 200μA。

The HV live displaying function of device is applicable to 3.6-40.5kV/50Hz system, which is used

cooperatively with corresponding voltage classes to display the live condition of main circuit. If the sensor is allocated by the user itself, it must guarantee that the earthing short circuit output current shall be larger than 200 $\mu$ A.

在母线各相电压均小于额定电压的 15%时，强制闭锁处于“解锁”状态，前面板上“LOCK”指示灯不亮，“闭锁”接点闭合；母线任意相电压大于额定电压的 40%时，强制闭锁处于“闭锁”状态，“LOCK”指示灯亮，“闭锁”接点断开。

When the voltage of all phases of busbar is less than 15% of rated voltage, the forced lock is under “unlock” status and the “LOCK” indicator light on front panel will not be on and the “Lock” contact will be closed; when any phase voltage of busbar is larger than 40% of rated voltage, the forced lock is under “lock” status and “LOCK” indicator light will be on, the “lock” contact will be disconnected.

#### 2.2.4 报警继电器输出（ASD100G、ASD200、ASD300、ASD310、ASD320）

#### 2.2.4 Alarm relay output (ASD100G、ASD200、ASD300、ASD310、ASD320)

自动定值越限告警继电器输出包括：过压、欠压、过流、温控 1 超温、温控 2 超温、无线温度传感器组 1 高温、无线温度传感器组 2 高温、无线温度传感器组 3 高温、无线温度传感器组 4 高温。

The auto definite value threshold crossing alert relay output includes: overvoltage, undervoltage, over current, temperature control 1 over temperature, temperature control 2 over temperature, wireless temperature sensor group 1 high temperature, wireless temperature sensor group 4 high temperature.

**注意：需将相应的控制字选择为“投入”才有效！(ASD200、ASD300、ASD310、ASD320)**

**Note: It is valid only corresponding control word is selected as “input”. (ASD200、ASD300、ASD310、ASD320)**

#### 2.2.5 自动温湿度控制（ASD100、ASD100G、ASD200、ASD300、ASD310、ASD320）

#### 2.2.5 Auto temperature and humidity control (ASD100、ASD100G、ASD200、ASD300、ASD310、ASD320)

1) 模拟式温湿度控制 (ASD100/ASD100G)，当环境相对湿度 $\geq 85\%$ ，启动加热，当相对湿度 $\leq 77\%$ ，停止加热；当环境温度 $\geq 40^{\circ}\text{C}$ ，启动风扇鼓风，当温度 $\leq 35^{\circ}\text{C}$ ，停止鼓风。当环境温度 $\leq 5^{\circ}\text{C}$ ，启动加热，当环境温度 $\geq 13^{\circ}\text{C}$ ，停止加热。(无显示，工作定值不可整定)。

1) Simulated temperature and humidity control (ASD100/ASD100G). When the environment relative humidity is  $\geq 85\%$ , start heating; when the relative humidity is  $\leq 77\%$ , stop heating; when the environment temperature is  $\geq 40^{\circ}\text{C}$ , start fan blast; when the temperature is  $\leq 35^{\circ}\text{C}$ , stop blasting. When the environment temperature is  $\leq 5^{\circ}\text{C}$ , start heating; when the environment temperature is  $\geq 13^{\circ}\text{C}$ , stop heating. (No display and the working definite value cannot be set).

2) 数字式温湿度控制，可测量并采用 LED(ASD200)或 LCD(ASD300、ASD310、ASD320)显示现场环境的温度和湿度，带有加热、鼓风控制接点，可根据需要，自行设定加热、除湿、鼓风的上下限。传感器及其相关的参数及控制接点关系如图 2.2 所示。

2) Digital temperature and humidity control. It can measure and adopt LED (ASD200) or LCD

(ASD300, ASD310, ASD320) to display the temperature and humidity of site environment. With heating, blast control contact, the upper and lower limit of heating, dehumidification and blast can be set according to requirements. The sensor and related parameters and the relationship between control contact are shown in Figure 2.2.

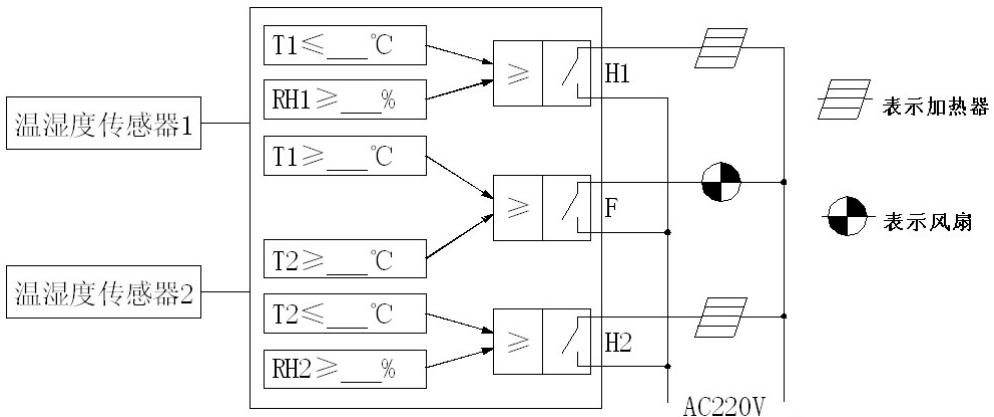


图 2.2 温湿度控制关系

Figure 2.2 Temperature and humidity control relationship

温湿度传感器 1	Temperature and humidity sensor 1
温湿度传感器 2	Temperature and humidity sensor 2
表示加热器	Meaning heater
表示风扇	Meaning fan

## 2.2.6 无线测温（ASD300/ASD320 可选功能）

### 2.2.6 Wireless temperature measurement (ASD300/ASD320 optional functions)

ASD300 和 ASD320 可选无线测温功能，装置通过无线温度接收器和各无线温度传感器直接进行温度值的传输，并采用液晶显示各无线温度传感器所测温度。通过菜单可设置无线温度传感器组的高温告警值，当测得温度值超出设定值时，装置报警继电器输出触点闭合。

ASD300 and ASD320 optional wireless temperature measurement functions. The device can directly transmit temperature values through wireless temperature receiver and all wireless temperature sensors and adopt LCD to display the temperature measured by all wireless temperature sensors. Through menu, the high temperature alarm value of wireless temperature sensor can be set. When the measured temperature value exceeds the set value, the device alarm relay output contact will be closed.

#### ASD 主体与无线温度传感器的配对及校准：

##### Matching and calibration of ASD main body and wireless temperature sensor:

- 1) ASD 主体液晶操作进入“调试—>节温（密码 1008）”下的节温设置菜单。
- 1) ASD main body LC operation enters the thermostat setting menu under “debugging --->thermostat (password: 1008).
- 2) 输入对应无线温度传感器 ID 进行绑定，如查看标签为 TA1 的无线温度传感器的 ID，将此

ID 输入到节温 1A，输入完全部要配对传感器，按左键退出保存设置。

2) Enter the ID of the wireless temperature sensor corresponding to the wireless temperature sensor, such as the ID of the wireless temperature sensor with the tag TA1, enter this ID into the section temperature 1A, enter all the sensors to be matched, and press the left button to exit the save setting.

3) ASD 主体液晶操作进入“调试—>节温校准（密码 1008）”下的节温校准菜单。

3) ASD main body LC operation enters the thermostat calibration menu under “debugging --->thermostat (password: 1008).

4) 更改需校准的节温值为准确值，按 OK 键进行校准。

4) Change the section temperature to be calibrated to the exact value, press the OK key to calibrate.

**警告！** 出厂时包装箱内无线温度传感器与 ASD 主体已配对和校准！安装时不可以与其他 ASD 主体或无线温度传感器混用，无线温度传感器按其标签 TA、TB、TC 分别对应安装到 A、B、C 相。

**Warning!** When it is delivered, the wireless temperature sensor in the packing case has already been matched with ASD main body and calibrated. When it is installed, it cannot be mixed with any other ASD main body or wireless temperature sensor. The wireless temperature sensor shall be respectively installed to A, B and C-phase according to its label TA, TB and TC.

ASD 主体与无线温度传感器可按以下方法进行配套识别：

The ASD body and the wireless temperature sensor can be identified in the following ways



ASD 标签

ASD Tag



ATE200 标签

ATE200 Tag



ATE300 标签

ATE300 Tag

例如左图为一台 ASD 主体的标签，如果此 ASD 配套的传感器为 ATE100/ATE200，则传感器的标签的条码完全和 ASD 主体条码一样；如果此 ASD 配套的传感器为 ATE300，则传感器的标签的“组号”和 ASD 主体条码的最后 3 位数值一样。

For example, the left image is a label of an ASD body; if the sensor associated with the ASD is the ATE100/ ATE200, the barcode of the tag of the sensor is the same as the ASD body barcode; if the sensor associated with the ASD is the ATE300, the “Group No.” of the tag of the sensor is the same as the last 3-bit value of the ASD body barcode.

## 2.2.7 智能语音防误提示（ASD200、ASD300、ASD310、ASD320）

### 2.2.7 Intelligent voice error-preventing prompt (ASD200, ASD300, ASD310, ASD320)

智能语音防误提示共有三种方式可选择。

Three methods can be selected for intelligent voice error-preventing prompt.

方式一：断路器、接地开关处于合闸状态，若误将小车从试验位置推至工作位置，装置语音提示“请分断路器，请分接地开关”；断路器处于合闸状态，若误将小车从试验位置推至工作位置，装置语音提示“请分断路器”；接地开关处于合闸状态，若误将小车从试验位置推至工作位置，装置语音提示“请分接地开关”。

Method I: When the breaker and earthing switch are under close position, if the trolley is pushed to operating position from testing position by mistake, the device voice will prompt “please disconnect the breaker and earthing switch”; when the breaker is under open position, if the trolley is pushed to operating position from testing position by mistake, the device voice will prompt “please disconnect the breaker”; when the earthing switch is under open position, if the trolley is pushed to operating position from testing position by mistake, the device will voice prompt “please disconnect the earthing switch”.

方式二：断路器、接地开关处于合闸状态，若误将小车从试验位置/ 工作位置推开，装置语音提示“请分断路器，请分接地开关”；断路器处于合闸状态，若误将小车从试验位置/ 工作位置推开，装置语音提示“请分断路器”；接地开关处于合闸状态，若误将小车从试验位置/ 工作位置推开，装置语音提示“请分接地开关”。

Method II: When the breaker and earthing switch are under close position, if the trolley is pushed away from testing position/operating position by mistake, the device will voice prompt “please disconnect the breaker and earthing switch”; when the breaker is under close position, if the trolley is pushed away from testing position/operating position by mistake, the device will voice prompt “please disconnect the breaker”; when the earthing switch is under close position, if the trolley is pushed away from testing position/operating position by mistake, the device will voice prompt “please disconnect the earthing switch”.

方式三：断路器处于合闸状态，若误将小车从试验位置/ 工作位置推开，装置语音提示“请分断路器”。

Method III: When the breaker is under close position, if the trolley is pushed away from testing position/operating position by mistake, the device will voice prompt “please disconnect the breaker”.

## 2.2.8 柜内照明功能（ASD200、ASD300、ASD310、ASD320）

### 2.2.8 Cabinet lighting function (ASD200, ASD300, ASD310, ASD320)

在装置默认主界面下，按向上键，将打开柜内照明；再次按向上键，将关闭柜内照明。

Press the Up key under the default main interface of device to open the lighting in the cabinet; then press the Up key again to close the lighting in the cabinet.

**按键说明：**

**Key instruction:**

- “◀”“▶”菜单切换，可编辑数值数据位移动；
- “◀”“▶” menu switch and the editable numeric data bit will move;
- “▲”“▼”可编辑数值数据位加减，其中“▲”又是菜单退出键（非编辑状态）；
- “▲”“▼” editable numeric data bit will be added or subtracted; in which “▲” is also menu esc key (non-edit status);
- “OK”数值编辑确认及菜单进入键。
- “OK” numeric value edit affirmation and menu enter key.

## 2.2.9 人体感应(ASD200、ASD300、ASD310、ASD320)

### 2.2.9 Human body induction (ASD200, ASD300, ASD310, ASD320)

LCD 背光自动控制开启（背光延时设置不为 0），人离开装置一段时间后，自动关闭柜内照明和液晶背光；当有人接近装置时，装置通过感知到周围红外场的变化感知有人接近，自动打开柜内照明及液晶背光。

LCD backlight auto control open (backlight delay shall not be set as 0): after leaving the device for a while, it will automatically close the lighting and LC backlight in the cabinet; when someone approaches the device, the device will perceive that someone is approaching through the change of surrounding infra-red field and automatically open the lighting and LC backlight in the cabinet.

## 2.2.10 电力参数测量(ASD300)

### 2.2.10 Electric power parameter measurement (ASD300)

ASD300 型开关柜综合测控装置可以测量主回路的电流、电压、有功功率、功率因数、电能等电力参数，可在装置“电量”菜单中查看，通过左/右键切换显示内容，无功功率、视在功率等可以通过通讯口读出。

ASD300 switch cabinet integrated measuring and control device can measure the current, voltage, active power, power factor, electric energy and other electric parameters of main circuit and check in the “electric quantity” menu of device. By left/right key switch display content, the active power, apparent power can be read out through communication port.

电参数的显示均为一次侧值，用户需选择正确的信号接入方式及 CT、PT 变比，以便正确显示测量值。

The display of electric parameter is all primary side value and the user shall select correct signal access way and CT, PT no-load voltage ratio to correctly display the measured value.

## 2.2.11 带电显示自检 (ASD100、ASD100G、ASD200、ASD300、ASD310、ASD320)

### 2.2.11 Self-inspection of live displaying (ASD100, ASD100G, ASD200, ASD300, ASD310, ASD320)

ASD 系列开关柜综合测控装置具有带电显示自检功能，可在装置面板的下方按键进行自检操作。按下按钮，对应指示灯亮，闭锁继电器端子断开（闭锁继电器端子不工作时处于常闭状态），说明带电显示灯正常。

ASD series switch cabinet integrated measuring and control device has live displaying self-inspection function, which can take self-inspection operation through the key under device panel. Press the button and corresponding indicator light will be on and the lock relay terminal will be disconnected (it is normally

closed when lock relay terminal is not working) and it indicates that the live displaying light is normal.

#### 2.2.12 核相功能 (ASD100、ASD100G、ASD200、ASD300、ASD310、ASD320)

#### 2.2.12 Nuclear phase function (ASD100, ASD100G, ASD200, ASD300, ASD310, ASD320)

ASD 系列开关柜综合测控装置具有带电显示核相功能，在装置接入高压信号经带电显示传感器后的信号后，可通过外接核相器接入装置的核相孔中，进行核相操作。该核相功能适用于市面上大多数的核相器（门槛电压 $\geq 60V$ ）。

ASD series switch cabinet integrated measuring and control device has live displaying nuclear phase function. After connecting the signal of live displaying sensor through HV signal, it can take nuclear phase operation by connecting the nuclear phase into the nuclear phase hole of device. This nuclear phase function is applicable to great majority nuclear phase testers in the market (with threshold voltage $\geq 60V$ ).

**注：本公司不配置核相器。**

**Note: Nuclear phase tester is not configured in our company.**

### 2.3 ASD300 编程设置

#### 2.3 ASD300 programming setting

- 1) 上电后，装置自检，若自检通过，则进入电力参数显示界面，通过左键（或右键）切换查看电流、电压、功率、电能等各类电力参数（均为一次侧值）。
- 1) After power on, take self-inspection to the device. If the self-inspection passes, enter electric parameter display interface and check the current, voltage, power, electric energy and various kinds of electric parameters (all primary side values) through left key (or right key) switching.
- 2) 测量参数显示界面下，按 OK 键，装置进入主菜单页面，该页面下，每一个子菜单项都由图标和相应的文字组成，四个方向键选择（被选中的菜单为反显状态）所需菜单项，然后按 OK 键进入相应的子菜单。
- 2) Press OK key under measurement parameter display interface and the device will enter the main menu page. Under this page, every submenu is composed of icon and corresponding characters. Four direction keys can be used to select (the selected menu is reverse display status) the required menu item and then press OK key to enter corresponding submenu.
- 3) 主菜单页面下，选择并确认“电量”菜单，可返回到电量参数显示界面。
- 3) Under main menu page, select and confirm “Electric quantity” menu to return the electric quantity parameter display interface.
- 4) 主菜单页面下，选择并确认“温湿”菜单，即进入温湿度控制信息显示页面，如下图所示。该页面左右两侧分别显示通道 1 和通道 2 所测得的环境温度和湿度。
- 4) Under main menu page, select and confirm “temperature and humidity” menu to enter the temperature and humidity control information display interface, as shown in the figure below. The left and right side of the page respectively display the environment temperature and humidity measured through channel 1 and channel 2.

- 5) “参数”菜单可以设置装置工作的各类参数，包括电流电压信号的输入方式、变比，各类报警阈值、控制字，通讯参数等。该菜单下的内容需要用户口令才可以查看或修改，出厂设置口令为“0008”。
- 5) “Parameter” menu can set various kinds of operating parameters of device, including the input mode, no-load voltage ratio of current and voltage signal, various kinds of alarm threshold value, control word, communication parameters, etc. The content under the menu can be checked or modified only by user password. The factory set password is “0008”.

**参数修改方法：**进入子菜单，通过上下键先选中要设置项的名称，然后按“OK”键等光标定位到对应的值时，按上下键修改值，再按 OK 键确认（光标会定位到项目名称上），最后按左键退出时，界面会提示是否保存修改过的参数，然后再按“OK”键保存即可。

**Parameter modification method:** enter the submenu and select the name of setting items through up and down key and then press “OK” key and other cursors to position to corresponding values. Press the up and down key to modify the value and then press OK key to confirm (the cursor will position to project name). Lastly, when pressing left key to exit, the interface will prompt whether to save the modified parameters and then press “OK” key to save.

“定值”子菜单下可设置如电流电压接线方式，变比报警阀值等（电参数告警定值均采用二次侧值）。例如，过压投退设置为“投入”，则当装置测得的电压值高于过压定值时，报警继电器输出触点闭合。

The current and voltage wiring mode and no-load voltage ratio alarm threshold value (electric parameter alarm definite values all adopt secondary side value) can be set under “definite value” submenu. For example, set the overvoltage in-service and out-of-service as “in-service”, when the measured voltage value of device is higher than the overvoltage definite value, the alarm rely output contact will be closed.

“状态指示”子菜单下可设置 LED 灯与开入的对应关系，也可设置 LED 灯常亮（ON）或者是常灭（OFF）。

The correspondence of LED lamp and opening-in can be set under “status indicator” submenu and LED lamp can be set as normally on (ON) or normally off (OFF).

“通信”子菜单下可设置设备的通讯地址及串口波特率。

The communication address and series rate can be set under “communication” submenu.

“继电控制”子菜单下可设置开出模式，模式分为：

Opening-out mode can be set under “relay control” submenu and the mode is classified into:

**ON:** 设备上电后，继电器常闭触点为断开，常开触点为闭合（适用于手动控制）。

**ON:** After the device is powered on, the relay normally-closed contact will be disconnected and the normally-open contact will be closed (applicable to manual control).

**OFF:** 设备上电后，继电器常闭触点为闭合，常开触点为断开（适用于手动控制）。

**OFF:** After the device is powered on, the relay normally-closed contact will be closed and

the normally-open contact will be disconnected (applicable to manual control).

**Def.:** 由内部逻辑控制继电器的闭合或断开。

**Def:** The interior logic will control the relay opening or closing.

“其它”子菜单下可进行“清电能”，“次数清零”和“恢复出厂”操作，出厂设置口令为“1008”。

“Clearing electric energy”, “Time reset” and “factory reset” operation can be taken under “others” submenu and the factory setting password is “1008”.

**注意:**

**Note:**

1、恢复出厂后，除电参量校准数据，无线温度配对和校准数据外，其他所有参数都将恢复为出厂默认设置。恢复出厂后设备须重新上电后才生效！

1. After factory reset, except electric parameter calibration data, wireless temperature matching and calibration data, all the other parameters will be reset as factory default.

After factory reset, the equipment must be powered on before it is effective.

2、电能清零后无法恢复，请谨慎使用此功能！

2. The electric energy will not be recovered after resetting, please be cautious to use this function!

“液晶背光”子菜单下可设置液晶背光点亮时长。

LC backlight lightening length can be set under “LC backlight” submenu.

注意：对有人体感应的装置，该时间值也是人体感应控制照明输出的时间。

**Note: For device with human body induction, the time value is also the time that human body induction controls lighting output.**

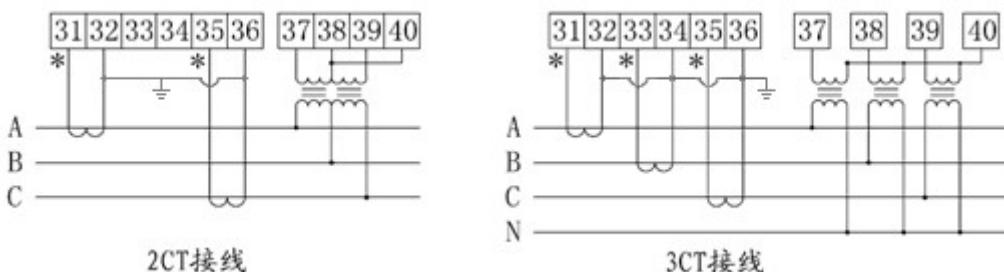


图 2.3 接线方式

Figure 2.3 Wiring mode

- 6) 主菜单页面下，选择并确认“节温”菜单，即进入无线温度测量显示界面。
- 7) Under main menu page, select and confirm “thermostat” menu to enter the wireless temperature measurement display interface.
- 6) 主菜单页面下，选择并确认“告警”菜单，即进入告警信息显示界面。
- 7) Under main menu page, select and confirm “alarm” menu to enter alarm information display interface.

- 8) 主菜单页面下，选择并确认“调试”菜单，可校准电参量，绑定无线温度传感器，查看开入开出，断路器分合次数统计及其版本信息。
- 8) Under main menu page, select and confirm “debugging” menu to calibrate the electric parameter, bind wireless temperature sensor and check the switch in-out, breaker on-off time statistics and version information.

## 2.4 ASD200 编程设置

### 2.4 ASD200 programming setting

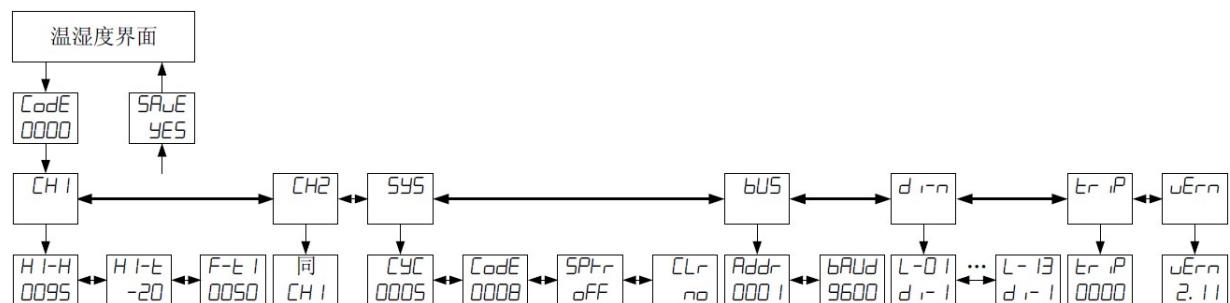


图 2.4 ASD200 菜单结构

Figure 2.4 ASD200 menu structure

表 4 ASD200 菜单功能

Table 4 ASD200 menu function

图例 Legend	说明 Description	图例 Legend	说明 Description
Code	密码/设置新密码 Password/set new password	bus	通讯总线参数 Communication bus parameter
CH1	温湿度通道 1 Temperature and humidity channel 1	Addr	本机地址 Local address
H I-H	加热 1, 湿度启动定值 Heating 1, definite value for humidity starting	BAUD	波特率 Baud rate
H I-T	加热 1, 温度启动定值 Heating 1, definite value for temperature starting	d in	开入配置 Opening-in configuration
F-T 1	鼓风, 温度 1 启动定值 Blast, definite value for temperature 1	L-01	待配灯号 (1~13) Lamp signal to be configured (1-13)
CH2	温湿度通道 2	d in 1	可配开入号 (1~8)

	Temperature and humidity channel 2		Configurable opening-in number (1-8)
SYS	系统设置 System setting	on	常开 Normally open
CYC	循环显示切换时间 Circulation display switching time	off	常闭 Normally closed
SPr	语音防误类型设置 Voice error-preventing type setting	Er iP	断路器分合次数 Break on-off times
CLR	断路器分合次数清零 Breaker on-off time resetting	uErrn	软件版本 Software version

### 3 通讯指南

#### 3 Communication guide

在本章主要讲述如何利用软件通过通讯口来操控该系列仪表。本章内容的掌握需要您具有 MODBUS 协议的知识储备并且通读了本册其他章节所有内容，对本产品功能和应用概念有较全面的了解。

In this chapter, it mainly introduces how to use software to control this series of instrument through communication port. To master this chapter, you must possess the knowledge reserve of MODBUS and have read all the contents in other chapters and have comprehensive understanding to the function and application concept of the product.

本章内容包括：通讯应用格式详解，本机的应用细节及参量地址表。

The content of the chapter includes: detailed explanation of communication application format, application details and parameter address table.

##### 3.1 通讯格式详解

###### 3.1 Detailed explanation of communication format

本节所举实例将尽可能的使用如下表所示的格式，数据为十六进制。

The format shown in table below will be used as much as possible for the examples in this section and the data is hexadecimal.

###### 3.1.1 读取数据（功能码 03H/04H）

###### 3.1.1 Reading data (function code 03H/04H)

此功能允许用户获得设备采集与记录的数据及系统参数。主机一次请求的数据个数没有限制，

但不能超出定义的地址范围。

The function allows user to obtain the data and system parameters collected and recorded by equipment. There is no restriction to the data number primarily requested by main engine, but it shall not exceed the defined address scope.

例如，主机发送查询数据帧：

For example, main engine will send the query data frame:

地址 Addr	功能码 Fun	起始地址		寄存器数量		CRC16 校验码	
		Start Addr		Register number		CRC 16 check code	
		高 High	低 Low	高 High	低 Low	高 High	低 Low
01H	03H	00H	30H	00H	03H	05H	C4H

装置返回响应数据帧：

The device will return the response data frame:

地址 Addr	功能码 Fun	字节数 byte	数据 1		数据 2		数据 3		CRC16 校验码	
			Date 1		Date 2		Date 3		CRC 16 check code	
			高 High	低 Low	高 High	低 Low	高 High	低 Low	高 High	低 Low
01H	03H	06H	00H	00H	00H	00H	00H	00H	21H	75H

### 3.1.2 预置单个寄存器（功能码 06H）

#### 3.1.2 Preset single register (function code 06H)

此功能码允许用户改变单个寄存器的内容，可通过此功能码将工作参数写入装置。

The function code allows user to change the content of single register and operating parameters can be written into device through the function code.

例如，主机发送：

For example, the main engine sends:

地址 Addr	功能码 Fun	寄存器地址		预置值		CRC16 校验码	
		Register address		Preset value		CRC 16 check code	
		高 High	低 Low	高 High	低 Low	高 High	低 Low
01H	06H	00H	03H	03H	E8H	74H	79H

装置返回响应数据帧：

The device returns to response data frame:

地址 Addr	功能码 Fun	寄存器地址		预置值		CRC16 校验码	
		Register address		Preset value		CRC 16 check code	
		高 High	低 Low	高 High	低 Low	高 High	低 Low
01H	06H	00H	03H	03H	E8H	74H	79H

### 3.1.3 预置多个寄存器（功能码 10H）

#### 3.1.3 Preset several registers (function code 10H)

此功能码允许用户改变多个寄存器的内容，可通过此功能码将工作参数写入装置。

The function code allows user to change the content of several registers and operating parameters can be written into device through the function code.

例如，主机发送：

For example, the main engine sends:

地址 Addr	功能 码 Fun	起始地址 Start Addr		寄存器数 Register number	字节 数 byte	预置值 1 Preset value 1		预置值 2 Preset value 1		CRC16		
		高 High	低 Low			高 High	低 Low	高 High	低 Low	高 High	低 Low	
01H	10H	00H	03H	00H	02H	04H	00H	28H	00H	64H	59H	32H

装置返回响应数据帧：

The device returns to response data frame:

地址 Addr	功能码 Fun	起始地址 Start Addr		寄存器数量 Register number		CRC16 校验码 CRC 16 check code	
		高字节 High byte	低字节 Low byte	高字节 High byte	低字节 Low byte	高字节 High byte	低字节 Low byte
01H	10H	00H	03H	00H	02H	B1H	C8H

## 3.2 参量地址表

### 3.2 Parameter address table

地址 Addr	参数 Parameter	属性 Read/ Write	数值范围 Data range		数据类 型 Data Type
0000H	通讯地址 Communication Addr	R/W <sup>[1]</sup>	001-247		Word
0001H	通讯波特率 Communication Baud rate	R/W	2400、4800、9600、19200		Word
0002H	电量输入方式 Electric parameter Input mode	R/W	0: 3P3L, 1: 3P4L		Word
0003H	CT 变比 CT transformation	R/W	电流互感器比值, 0.1-999.9 ( $\times 10^{[2]}$ ) Current transformer radtio, 0.1-999.9 ( $\times 10^{[2]}$ )		Word

	ratio			
0004H	PT 变比 PT transformation ratio	R/W	电压互感器比值, 0.1-999.9 ( $\times 10$ ) Voltage transformer radtio 0.1-999.9 ( $\times 10$ )	Word
0005H 高 High	控制字 Control word	R/W	报警继电器控制字: 0-off, 1-on。Bit0-bit6: 节温组 1, 节温组 2, 节温组 3, 节温组 4 Alarm relay control word:0-off, 1-on。Bit0-bit6: The section temperature group 1, The section temperature group 2, The section temperature group 3, The section temperature group 4,	Word
0005H 低 Low	控制字 Control word	R/W	报警继电器控制字: 0-off, 1-on。Bit0-bit5: 过压, 欠压, 过载, 温湿控 1 启用, 温湿控 2 启用, 语音提示启用 Alarm relay control word:0-off, 1-onBit0-bit5: Over voltage,under voltage,over load, Temp./humidity control 1 enabling, Temp./humidity control 2 enabling, Voice Alert enabled.	Word
0006H	通道 A 低温设定值 (加热 I) Channel A Lo.temp.setting (heating I)	R/W	-45-125 (°C)	Word
0007H	通道 A 高温设定值 Channel A Hi.temp.setting	R/W	0-125(°C)	Word
0008H	通道 A 超温设定值 (鼓风) Channel A over-temp setting(air blowing)	R/W	0-125 (°C)	Word
0009H	通道 A 高湿度设定 值 (加热 I) Channel A Hi humidity setting(heating I)	R/W	10-99(%)	Word
000AH	通道 B 低温设定值 (加热 II) Channel B Lo humidity setting(heating II)	R/W	-45-125 (°C)	Word
000BH	通道 B 高温设定值	R/W	0-125 (°C)	Word

	Channel B Hi.temp.setting			
000CH	通道 B 超温设定值 (鼓风) Channel B over-temp setting(air blowing)	R/W	0-125 (°C)	Word
000DH	通道 B 高湿度设定 值 (加热 II) Channel B Hi humidity setting(heating II)	R/W	10-99 (%)	Word
000EH	过压定值 Overvoltage setting	R/W	二次侧, 与接线方式相关, 1-999(V) Secondary side,related to the method	Word
000FH	欠压定值 Undervoltage setting	R/W	二次侧, 与接线方式相关, 1-999(V) Secondary side,related to the method	Word
0010H	过流定值 Overcurrent setting	R/W	二次侧, 0-99.9 (× 10) Secondary side	Word
0011H	液晶背光自动关闭 时间(ASD300) Liquid crystal back light Automatic closed time (ASD300)	R/W	0-999s, 0—背光常亮 0-999s, 0—Always bright backlight	word
0012H	继电器输出 Relay output	R/W	Bit0-bit4: 加热 I, 加热 II, 鼓风, 告警, 照明 Bit0-bit4: Heating I,heating II,air blowing,alarming,lighting	Word
0013H	开关量输入 Switching input	R	Bit0-bit7 对应 DI1-DI8 Bit0-bit7 corresponding DI1-DI8	Word
0014H	定值类报警状态 Value class alarm status	R	0-未告警, 1-已告警。Bit0-bit12 分别对应: 通道 A 低温, 通道 A 高温, 通道 A 超温, 通 道 A 高湿, 通道 B 低温, 通道 B 高温, 通道 B 超温, 通道 B 高湿, 过压, 欠压, 过载, 传 感器 1 故障, 传感器 2 故障。 0-no alarm,1-alarmed. Bit0-bit 12 corresponding: Channel A Lo.temp,Channel A Hi.temp,Channel A over temp,Channel A Hi humidity,Channel B Lo.temp,Channel B Hi.temp,Channel B over temp,Channel B Hi humidity,over voltage,under voltage,over load,sensor 1 failure ,sensor 2 failure.	Word

0015H	无线温度传感器报警状态 Wirless temperature sensor alarm status	R	0-未告警， 1-已告警。Bit0-bit11 分别对应： 节温 1A~节温 4C 高温。 0-no alarm,1-alarm. Bit0-bit 11 corresponding: Section temperature 1A~ Section temperature 4C Hi.temp.	Word
0016H	无线温度传感器报警状态 Wirless temperature sensor alarm status	R	0-未告警， 1-已告警。Bit0-bit11 分别对应： 节温 1A~节温 4C 传感器低电压。 0-no alarm,1-alarm. Bit0-bit 11 corresponding: Section temperature 1A~ Section temperature 4C sensor low voltage.	Word
0017H	语音防误提示方式 Wrong voice prompts	R/W	0~2	Word
0018H	年份 Year	R/W	2010-2050	Word
0019H	月份 Month	R/W	1-12	Word
001AH 高 High	天 Day	R/W	1-31	Word
001AH 低 Low	时 Hour	R/W	0-23	
001BH 高 High	分 Minute	R/W	0-59	Word
001BH 低 Low	秒 Second	R/W	0-59	
001CH	无线温度传感器组 1 高温定值 Wireless temperature sensor group 1 high temperature setting	R/W	0-125	Word
001DH	无线温度传感器组 2 高温定值 Wireless temperature sensor group 2 high temperature setting	R/W	0-125	Word
001EH	无线温度传感器组 3 高温定值 Wireless temperature sensor group 3 high	R/W	0-125	Word

	temperature setting			
001FH	无线温度传感器组 4 高温定值 Wireless temperature sensor group 4 high temperature setting	R/W	0-125	
0020H	无线温度传感器组 1 A 相温度值 Wireless temperature sensor group 1A phase temperature value	R	0-125.0 ( $\times 10$ )	Word
0021H	无线温度传感器组 1 B 相温度值 Wireless temperature sensor group 1B phase temperature value	R	0-125.0 ( $\times 10$ )	Word
0022H	无线温度传感器组 1 C 相温度值 Wireless temperature sensor group 1C phase temperature value	R	0-125.0 ( $\times 10$ )	Word
0023H	无线温度传感器组 2 A 相温度值 Wireless temperature sensor group 2A phase temperature value	R	0-125.0 ( $\times 10$ )	Word
0024H	无线温度传感器组 2 B 相温度值 Wireless temperature sensor group 2B phase temperature value	R	0-125.0 ( $\times 10$ )	Word
0025H	无线温度传感器组 2 C 相温度值 Wireless temperature sensor group 2C phase temperature value	R	0-125.0 ( $\times 10$ )	Word

0026H	无线温度传感器组 3 A 相温度值 Wireless temperature sensor group 3A phase temperature value	R	0-125.0 ( $\times 10$ )	Word
0027H	无线温度传感器组 3 B 相温度值 Wireless temperature sensor group 3B phase temperature value	R	0-125.0 ( $\times 10$ )	Word
0028H	无线温度传感器组 3 C 相温度值 Wireless temperature sensor group 3C phase temperature value	R	0-125.0 ( $\times 10$ )	Word
0029H	无线温度传感器组 4 A 相温度值 Wireless temperature sensor group 4A phase temperature value	R	0-125.0 ( $\times 10$ )	Word
002AH	无线温度传感器组 4 B 相温度值 Wireless temperature sensor group 4B phase temperature value	R	0-125.0 ( $\times 10$ )	Word
002BH	无线温度传感器组 4 C 相温度值 Wireless temperature sensor group 4C phase temperature value	R	0-125.0 ( $\times 10$ )	Word
002CH	通道 A 温度值 Channel A temperature value	R	-45.0-125.0 ( $\times 10$ )	Word
002DH	通道 A 湿度值 Channel A humidity value	R	10-99(%)	Word
002EH	通道 B 温度值 Channel B	R	-45.0-125.0 ( $\times 10$ )	Word

	temperature value			
002FH	通道 B 湿度值 Channel B humidity value	R	10-99(%)	Word
0030H	相电压 UA Phase voltage UA	R	一次侧: 0-6553.5(×10) Primary side:0-6553.5(×10)	Word
0031H	相电压 UB Phase voltage UB	R	一次侧: 0-6553.5(×10) Primary side:0-6553.5(×10)	Word
0032H	相电压 UC Phase voltage UC	R	一次侧: 0-6553.5(×10) Primary side:0-6553.5(×10)	Word
0033H	线电压 UAB Line voltage UAB	R	一次侧: 0-6553.5(×10) Primary side:0-6553.5(×10)	Word
0034H	线电压 UBC Line voltage UBC	R	一次侧: 0-6553.5(×10) Primary side:0-6553.5(×10)	Word
0035H	线电压 UAC Line voltage UAC	R	一次侧: 0-6553.5(×10) Primary side:0-6553.5(×10)	Word
0036H	IA	R	一次侧: 0-6553.5(×10) Primary side:0-6553.5(×10)	Word
0037H	IB	R	一次侧: 0-6553.5(×10) Primary side:0-6553.5(×10)	Word
0038H	IC	R	一次侧: 0-6553.5(×10) Primary side:0-6553.5(×10)	Word
0039H	PA	R	0-6553.5kW (×10)	Word
003AH	PB	R	0-6553.5kW (×10)	Word
003BH	PC	R	0-6553.5kW (×10)	Word
003CH	P 总 P total	R	0-6553.5kW (×10)	Word
003DH	QA	R	0-6553.5kvar (×10)	Word
003EH	QB	R	0-6553.5kvar (×10)	Word
003FH	QC	R	0-6553.5kvar (×10)	Word
0040H	Q 总 Q total	R	0-6553.5kvar (×10)	Word
0041H	PFA	R	0.0-1.0 (×1000)	Word
0042H	PFB	R	0.0-1.0 (×1000)	Word
0043H	PFC	R	0.0-1.0 (×1000)	Word
0044H	PF 总 PF total	R	0.0-1.0 (×1000)	Word
0045H	SA	R	0-6553.5 kVA (×10)	Word

0046H	SB	R	0-6553.5 kVA ( $\times 10$ )	Word
0047H	SC	R	0-6553.5 kVA ( $\times 10$ )	Word
0048H	S 总 S total	R	0-6553.5 kVA ( $\times 10$ )	Word
0049H	频率 Freq Frequency Freq	R	45.0-65.0( $\times 10$ )	Word
004AH	电能 (高 16 位) Electrical energy(Hi 16)	R	0.0-99999999.99 kWh ( $\times 100$ )	Long

注: [1] R—只读; R/W—可读, 可写。

[2]  $\times 10$ ,  $\times 100$ ,  $\times 1000$ —读取时实际值乘以相应的倍数上传, 写入时应乘以相应的倍数写入。

Note: [1] R-Read only; R/W-Readable, writable.

[2]  $\times 10$ ,  $\times 100$ ,  $\times 1000$ -When reading, upload with practical value multiply corresponding times;  
when writing, write in by multiplying corresponding times.

## 4 常见故障的诊断分析与排除方法

### 4 Diagnostic analysis and troubleshooting of common faults

#### 4.1 辅助电源故障

##### 4.1 Fault of auxiliary power supply

装置接通辅助电源后屏幕不亮?

The screen does not light after connecting the auxiliary power supply.

可能原因: 外接端子线序错误。

Possible cause: the external terminal line sequence is wrong.

处理方法: 拔出“温湿度 I”, “温湿度 II”, “无线测温”接口处的外接模块, 重新上电装置判断。

Handling method: pull out the external module at the joint of “temperature and humidity I”, “temperature and humidity II”, “wireless temperature measuring” and re-power on to judge.

#### 4.2 环境温湿度显示故障

##### 4.2 Fault of environment temperature and humidity display

温湿菜单下环境温湿度值无显示或显示“rupt”?

The environment and humidity value under temperature and humidity menu has no display or displays “rupt”?

可能原因: 温湿度控制字未投入或温湿度模块未接好。

Possible cause: The temperature and humidity control word is not input or temperature and humidity module is not well connected.

处理方法:

Handling method:

- 1) 无显示时：“参数->定值”菜单将“温湿 1 投退”或“温湿 2 投退”设置为投入。
- 1) When there is no display: “parameter -->definite value” menu will set the “temperature and humidity 1 out-of-service” or “temperature and humidity 2 out-of-service” as in-service.
- 2) 显示“rupt”时：检查“温湿度 I”，“温湿度 II”接口处的温湿度模块接入是否正确？
- 2) When displaying “rupt”: check whether the temperature and humidity module is correctly connected at the joint of “temperature and humidity I”, “temperature and humidity II”.

#### 4.3 告警继电器动作故障

##### 4.3 Fault of alarm relay operation

欠压，过压，过流，环境温度超温，无线节点温度高温定值越限而告警继电器不动作？

Undervoltage, overvoltage, environment temperature exceeds, wireless node high temperature definite value is out-of-limit and alarm relay does not work.

可能原因：相应的控制字未投入。

Possible cause: corresponding control word is not input.

处理方法：“参数->定值”菜单将相应的控制字设置为投入。

Handling method: “Parameter-->” menu should set corresponding control word as input.

#### 4.4 一次模拟状态指示灯故障

##### 4.4 Fault of primary simulated status indicator light

开关量输入与状态指示灯不对应或状态指示灯不亮？

Switch input and status indicator light is not corresponding or status indicator light is not on.

可能原因：状态指示灯设置错误。

Possible cause: status indicator light setting is wrong.

处理方法：“参数->状态指示”设置状态指示灯对应的开关量，如需常亮的设置为“ON”，未使用的设置为“OFF”。

Handling method: “Parameter--> status indicator” should set corresponding switch quantity of status indicator light. For example, if it needs normally on, set it as “ON”; if it is not used, set it as “OFF”.

#### 4.5 通信故障

##### 4.5 Communication fault

上位机或后台软件与装置通信错误？

There is something wrong with communication between upper computer or background software with device.

可能原因：装置地址或串口参数设置错误。

Possible cause: Device address or serial port parameter setting is wrong.

处理方法：“参数->通信”设置正确的装置地址或串口参数。

Handling method: “Parameter--> communication” should set correct device address or serial port parameters.

## 4.6 节点温度值显示故障

### 4.6 Fault of node temperature value display

ASD 主体“节温”菜单无温度值显示或无某一路温度值显示？

ASD main body “thermostat” menu has no temperature value display or no temperature value display of some path.

可能原因：电池开关未打开或传感器不配对。

Possible cause: battery switch is not opened or sensor is mismatched.


处理方法：


Handling method:

- 1) 查看无线温度传感器的电池开关是否拨到“ON”端？（电池开关从 OFF 端拨到 ON 端后，无线温度传感器上的绿灯亮灭闪烁 2 次表示开关接通正常，否则重复拨动）。  
1) Check whether the battery switch of wireless temperature sensor is dialed to “ON” terminal (after battery switch is dialed to ON terminal from OFF terminal, the green light on wireless temperature sensor will flicker twice and it means that the switch is connected normally; otherwise, re-dial it).
- 2) 查看 ASD 主体上的条码与无线温度传感器上的条码是否一致，不一致时找到对应的无线温度传感器更换或重新配对无线温度传感器（详见本说明书 2.2.6 章节下的“ASD 主体与无线温度传感器的配对及校准”部分）。  
2) Check whether the code on ASD main body and wireless temperature sensor is consistent. When it is inconsistent, find out corresponding wireless temperature sensor to replace or rematch wireless temperature sensor (See “Matching and calibration of ASD main body and wireless temperature sensor” part under Section 2.2.6 of the specification).

## 附 A LW42 凸轮开关安装说明

### Annex A Installation instructions of LW42 cam switch

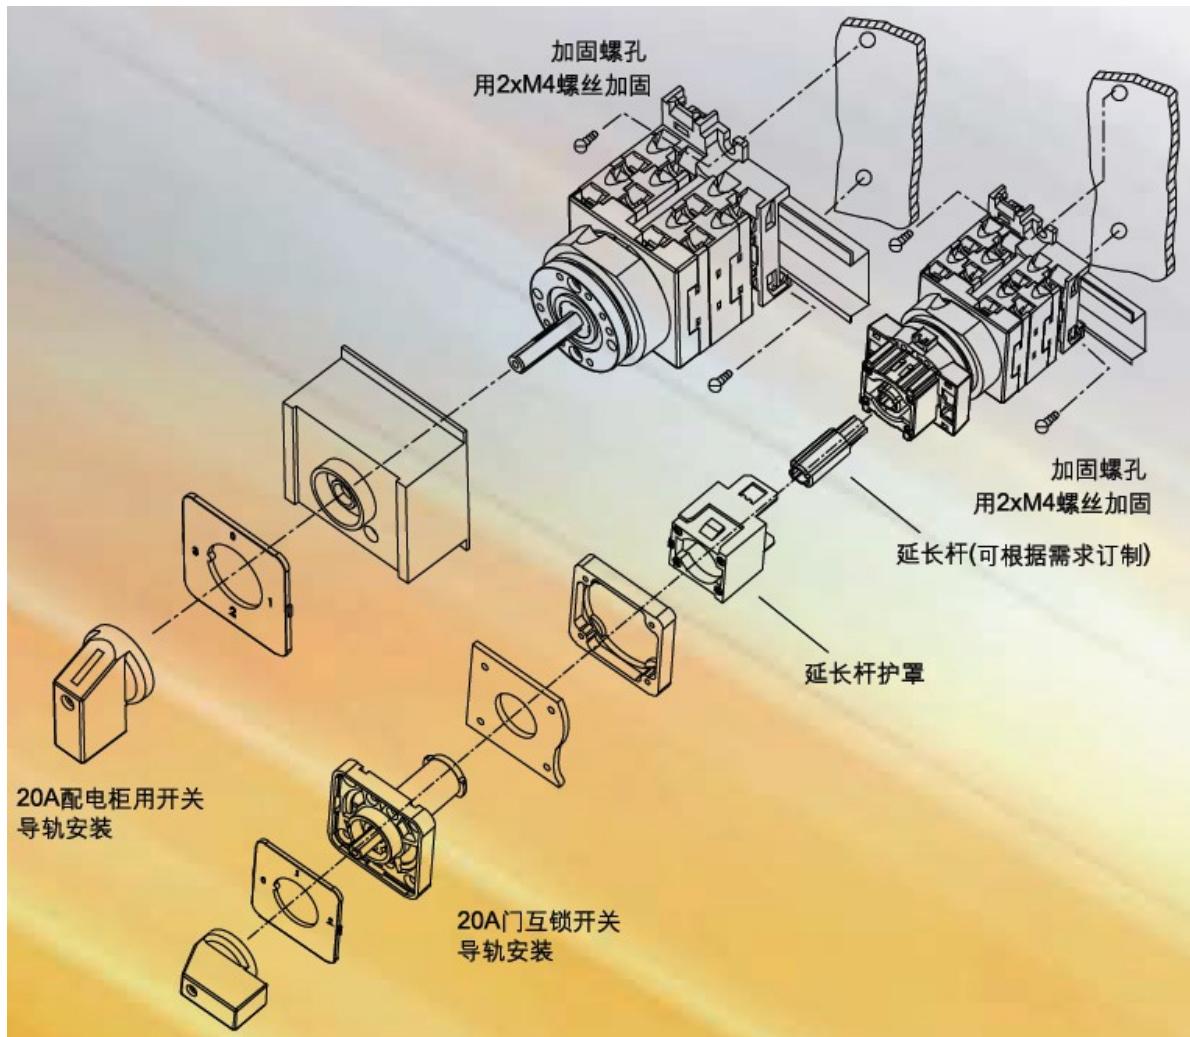

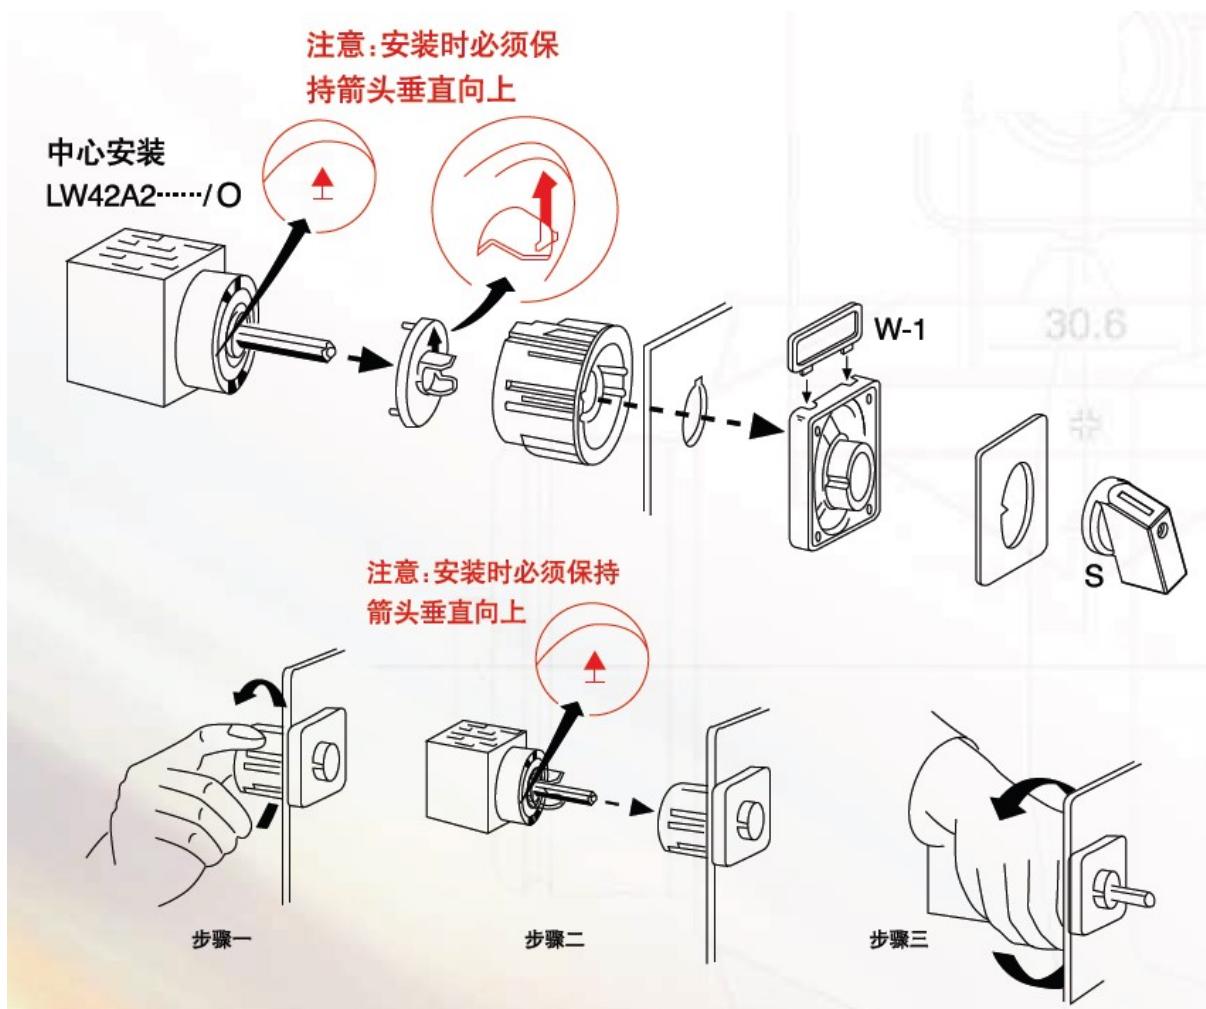


注：详细说明请到上海天逸电器股份有限公司官网：<http://www.tayee.com.cn>下载相应的文档查看。

Note: For detailed specification, please go to Shanghai Tayee Electrical Co., Ltd. official website: <http://www.tayee.com.cn> to download corresponding documents.

## 附 B 储能开关安装说明

### Annex B Installation specification of stored energy switch

#### LA39系列按钮安装使用说明

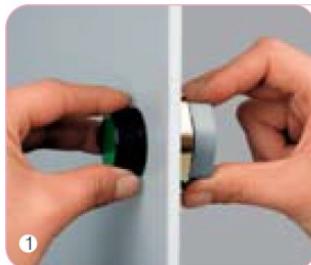

将操作头部由面板前方插入安装孔，于面板后旋入中座，然后均匀拧紧两端紧定螺钉（切不可用力过猛，最大扭力25N·cm），如面板为塑料等其他非金属材料，可在面板后垫上一块安装板（见附件F5）后再安装，如安装孔的直径为25mm时，可在面板后垫上一块Ø25的安装板（见附件F6）后再安装。

Z<sub>1</sub>中座按钮开关元件可连同中座一起安装。

Z<sub>2</sub>中座按钮，应先卸下开关元件，再安装中座。


Z<sub>3</sub>中座按钮，应先卸下开关元件。把中座插入头部，然后顺时针转动一下中座再把中座上的螺母拧紧即可。

**注意：**如安装后发现按钮有卡滞现象，应调节中座的两颗紧定螺钉，保持松紧一致，即可消除。



开关元件直接扣上即可，头部的符号片可直接在前部进行安装（一般在出厂时已装好）。如安装带灯按钮时，即先扣上灯座，然后再扣上开关元件。

**注意：**安装完毕后，应检查开关元件的搭扣是否完全扣入。

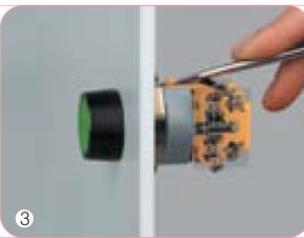

**拆除开关元件或灯座：**  
用螺丝刀抬起锁扣安装系统的搭扣，即可随意简便地拆卸已紧扣安装的组件。

**提示：**旋钮按装时应将短柄的白点，长柄的尖头方向朝上。

**注：**详细说明请到 APT 官网：<http://www.china-apt.com> 下载相应的文档查看。

**Note:** For detailed specification, please go to APT official website: <http://www.china-apt.com> to download corresponding documents.

总部：安科瑞电气股份有限公司  
地址：上海市嘉定区育绿路 253 号  
电话：(86)021-69158300 69158301 69158302  
传真：(86)021-69158303  
服务热线：800-820-6632  
网址：[www.acrel.cn](http://www.acrel.cn)  
邮箱：ACREL001@vip.163.com  
邮编：201801  
Headquarters: Acrel Co., Ltd.  
Address: Yulv Road 253, Madong Industrial Park, Jiading, Shanghai  
Tel.: (86)021-69158300 69158301 69158302  
Fax: (86)21-69158303  
Service hotline: 800-820-6632  
Website: [www.acrel.cn](http://www.acrel.cn)  
E-mail: ACREL001@vip.163.com  
P.C.: 201801

生产基地：江苏安科瑞电器制造有限公司  
地址：江阴市南闸街道东盟路 5 号  
电话(传真): (86)0510-86179970  
邮编：214405  
邮箱：JY-ACREL001@vip.163.com  
Production base: Jiangsu Acrel Electric Appliances Manufacturing Co., Ltd,  
Address: Dongmeng Road 5, Nanzha Street, Jiangyin City  
Tel./fax: (86)0510-86179970  
P.C.: 214405  
E-mail: JY-ACREL001@vip.163.com