

PZ Series programmable intelligent meters

Electric energy

Installation and Operation Instruction V3.0

ACREL Co., Ltd.

Declaration

No part of this publication may be reproduced, stored in a retrieval System, or transmitted in any form by any means, electronic, mechanical photocopying, recording, or otherwise without prior permission of Acrel.

All rights reserved.

This company reserve power of revision of product specification described in this manual, without notice. Before ordering, please consult local agent for the new specification of product.

CONTENTS

目录

| | |
|---|-----------|
| 1.General..... | 1 |
| 2.Type and specification of products..... | 1 |
| 3. Technical parameters..... | 2 |
| 4.Installation wiring instructions..... | 3 |
| 4.1 Outline and mounting cut-out size (Unit: mm)..... | 3 |
| 4.2 Installation method..... | 5 |
| 4.3 Wiring method..... | 6 |
| 5. Operating instructions..... | 9 |
| 5.1 Explanation for keypad functionality..... | 9 |
| 5.2 Display Example..... | 10 |
| 5.3 Programming menu..... | 15 |
| 5.4 Programming example..... | 17 |
| 6 Communication..... | 22 |
| 6.1 Register listing(MODBUS-RTU)..... | 22 |
| 6.2 Communication application..... | 32 |
| 7 Common fault analysis..... | 35 |

1.General

PZ series programmable intelligent meter is a smart meter designed for power monitoring needs of power systems, industrial and mining enterprises, utilities, and intelligent buildings. It integrates measurement of power parameters (such as single-phase or three-phase current, voltage, and active power). Power, reactive power, apparent power, frequency, power factor) and power monitoring and assessment management. At the same time, it has a variety of peripheral interface functions for users to choose: with RS485 communication interface, MODBUS-RTU protocol can meet the needs of communication network management; 4-20mA analog output can correspond to measured electrical parameters, meet DCS Such interface requirements; with switch input and relay output can realize the function of "remote signal" and "remote control" of circuit breaker switch. High-brightness LED/LCD display interface, parameter setting and control through buttons, ideal for real-time power monitoring systems. Can directly replace conventional power transmitters and measuring instruments. As an intelligent, digital front-end acquisition component, the instrument has been widely used in various control systems, SCADA systems and energy management systems.

2.Type and specification of products

Table 1

| Meter type | Basic function | Optional function | Co-selection function |
|---------------------------|--|---|-----------------------|
| PZ72-E4/KC PZ72L-E4/KC | Three phase voltage, Zero sequence voltage Three phase current, Zero sequence current Three phase active power, Total active power | ①2DI+2DO+1Ep(K) ②4DI+2DO(K) ③Event record (SOE) ④T2-31 th and total harmonics measurement (H) ⑤2DI+2DO+1M(KM) | ①③④ ②③④ ③④⑤ |
| PZ80-E4/KC PZ80L-E4/KC | Three phase reactive power, Total reactive power Three phase apparent power, Total apparent power Three phase Power factor, Total power factor Frequency, Voltage phase angle, Voltage and current imbalance, Forward and reverse power Four quadrant energy metering, System time display | ①2DI+2DO+1Ep(K) ②4DI+2DO(K) ③Event record (SOE) ④T2-31 th and total harmonics measurement (H) | ①③④ ②③④ |
| PZ96-E3/KC PZ96L-E3/KC | 1 channel RS485 interface / Modbus-RTU protocol . | ①4DI+2DO+1Ep(K) ②2DI+2DO+1Ep(K) ③Event record (SOE) ④2-31th harmonic measurement (H) ⑤2-channel analog output (M) | ①③④ ②③④⑤ |
| PZ96-E4/KC PZ96L-E4/KC | | | |
| PZ72-E/KC PZ72L-E/KC | single-phase voltage, single-phase current active power, reactive power, apparent power Power factor Frequency Four quadrant energy metering, System time display 1 channel RS485 interface / Modbus-RTU protocol . | ①2DI+2DO+1Ep(K) ②4DI+2DO(K) ③Event record (SOE) ④Total harmonic measurement (H) ⑤2DI+2DO+1M(KM) | ①③④ ②③④ ③④⑤ |

Note:1.DI--Switching input, DO--Switching output, M--Analog output, SOE--Event recording, H--Harmonic

measurement, Ep--Electric energy pulse.

2. When the digital tube is displayed, the harmonic data is not displayed, and the data is read only by communication.

3. K is a required function, Choose from ①②.

4. When Event record (SOE) is selected, Extreme value and maximum demand (D) are available at the same time.

3. Technical parameters

Table 2

| Technical parameters | | Value |
|--|-----------------------------------|--|
| Input | Connection | Single phase-2-wire, 3-phase-3-wire, 3-phase-4-wire |
| | Frequency | 45-65Hz |
| | Voltage | Rating: single-phase :AC 100V、 400V Three-phase: AC 3×57.7V/100V(100V)、 3×220V/380V(400V)、 3×380V/660V(660V)(96 size only) Note: 72 profile not suitable for high voltage applications |
| | | Overload:1.2 fold rating(continuous);2 fold rating for 1 second |
| | | Power consumption:< 0.5VA |
| | Current | Rating: AC IA、 5A |
| Overload:1.2 fold rating(continuous);10 fold rating for 1 second | | |
| Power consumption:< 0.5VA | | |
| Output | Electric energy | Output mode:open-collector photo-coupler pulse Pulse constant: 10000imp/kWh(settable), see wiring diagram for details; |
| | Communication | RS485port, Modbus -RTU protocol baud rate 1200 ~ 38400 |
| Function | Switching input | Dry contact input, built-in power supply; |
| | Switching output | Output mode: Relay normally open contact output |
| | | Contact capacity: AC 250V/3A、 DC 30V/3A |
| Analog output | 1-5V,4 - 20mA | |
| Accuracy class | | Frequency:0.05Hz,Current、 Voltage:0.2 class,Reactive power:l .0class, active power:0.5class,active electric energy: 0.5class,2-31th harmonic measurement:±1.0% |
| Power supply | | AC/DC 85-265V or DC24V (±20%) or DC48V(±20%) power consumption≤10VA |
| Security | Power frequency withstand voltage | Between Power supply//Switching Output// Current Input//voltage Input and Transmitting// Communication //Pulse Output//switching input AC 2 kV 1min; Between Power supply、 switching output、 Current Input、 voltage Input AC 2 kV 1min; Between Transmitting、 Communication、 Pulse Output、 switching input AC 1kV 1 min; |
| | Insulation resistance | Input、 Output end to machine enclosure >100MΩ |
| Environment | Temperature | work: -10°C~+55°C storage: -25°C ~+70°C |
| | Humidity | ≤95%RH Non-condensing |
| | Altitude | ≤2500m |

Note: The instrument Modbus RTU is compatible with dlt645 and only needs to set the corresponding address. See Chapter 6.3 for details.

4.Installation wiring instructions

4.1 Outline and mounting cut-out size (Unit: mm)

Table 3

| Outline | Panel | | Housing | | | Cut out | |
|-----------|-------|--------|---------|--------|-------|---------|--------|
| | width | height | width | height | depth | width | height |
| 72 square | 75 | 75 | 66.5 | 66.5 | 94.3 | 67 | 67 |
| 80 square | 84 | 84 | 75 | 75 | 94.3 | 76 | 76 |
| 96 square | 96 | 96 | 86.5 | 86.5 | 77.8 | 88 | 88 |

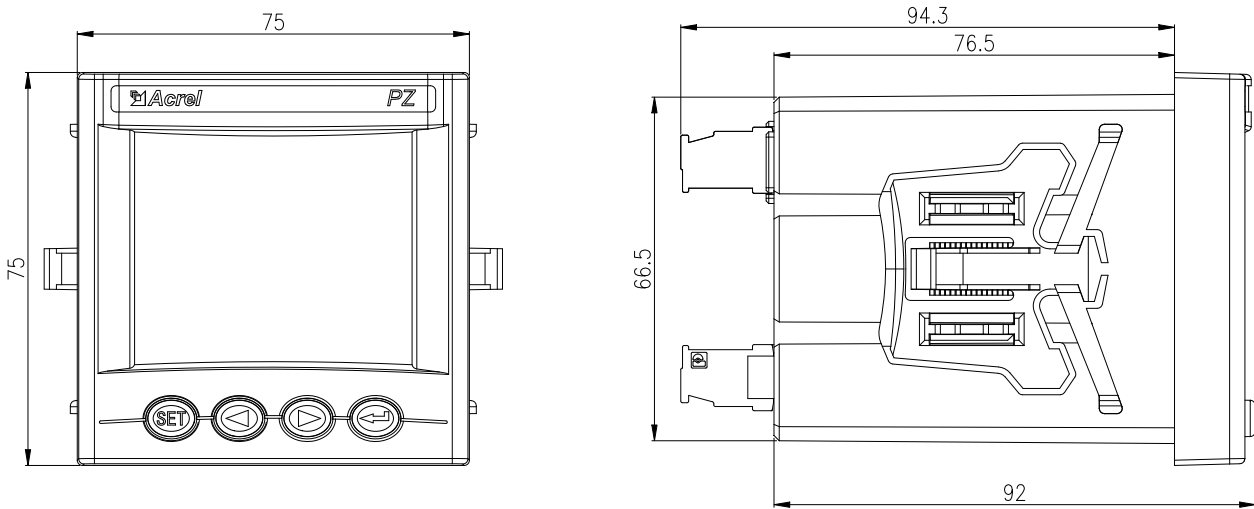


Figure 1 PZ72 appearance size

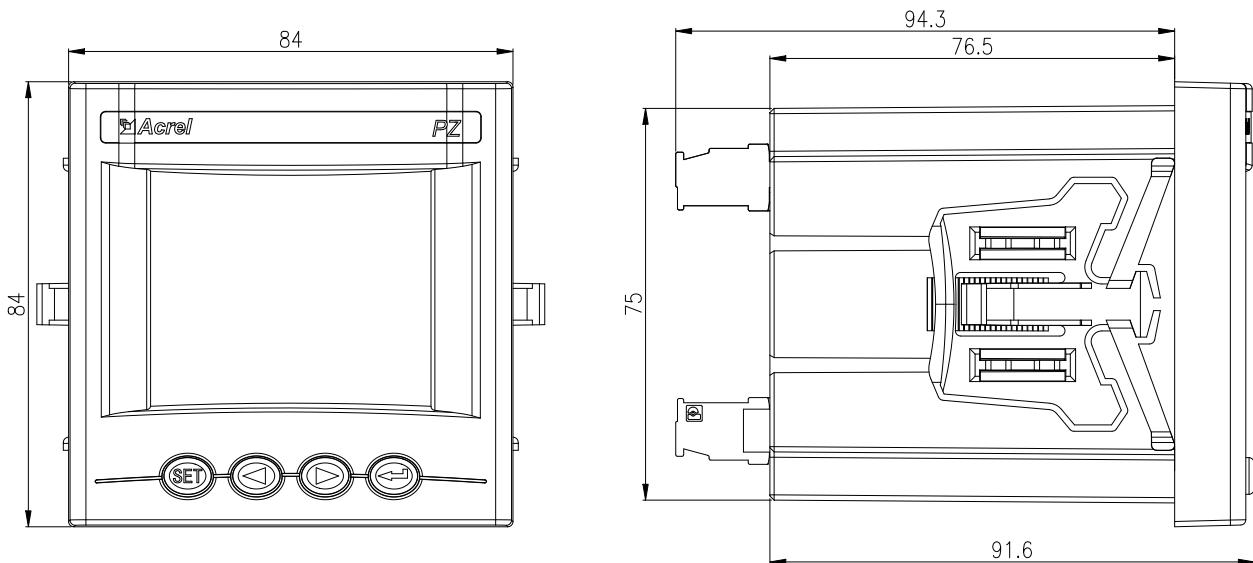


Figure 2 PZ80 appearance size

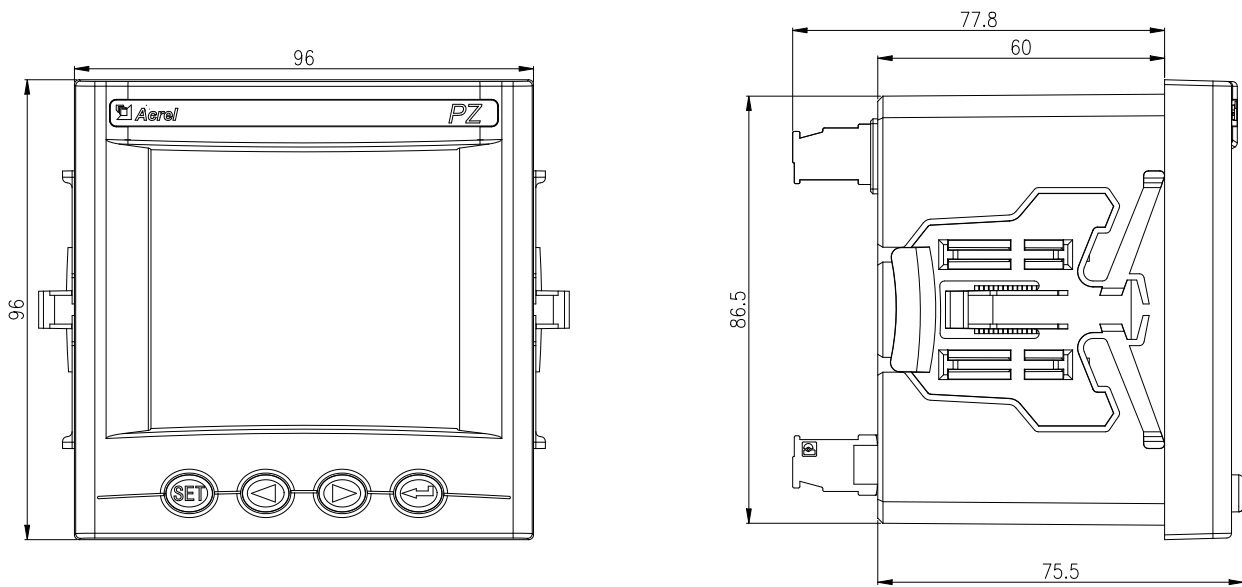


Figure 3 PZ96 appearance size

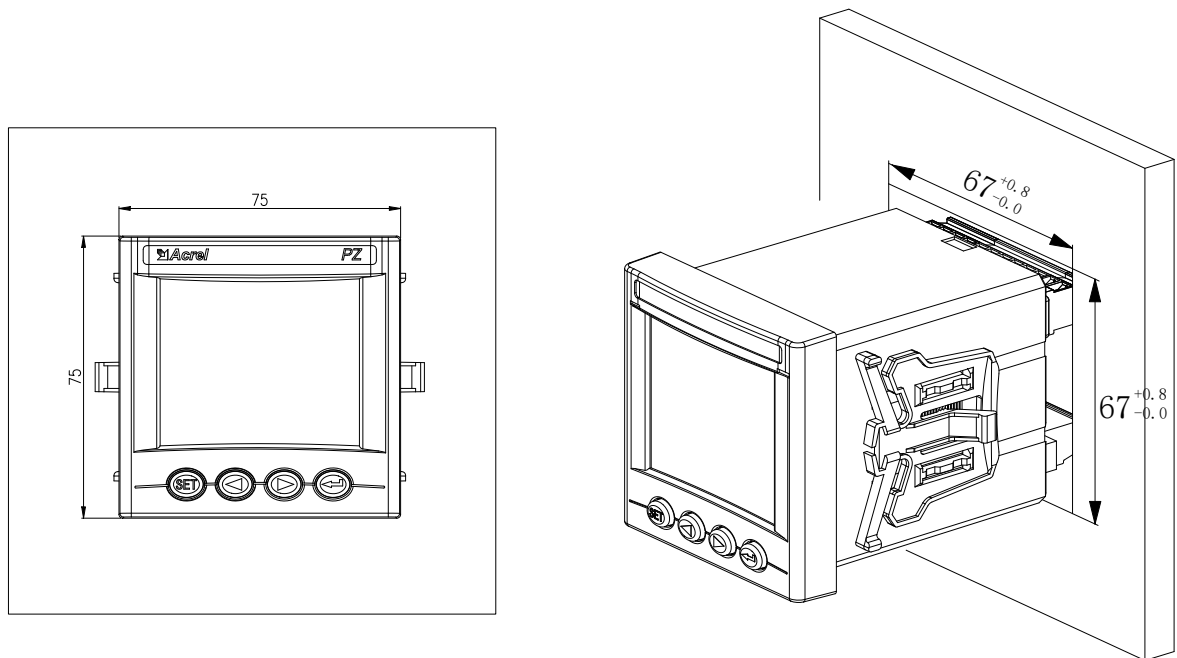


Figure 4 PZ72 installation dimensions

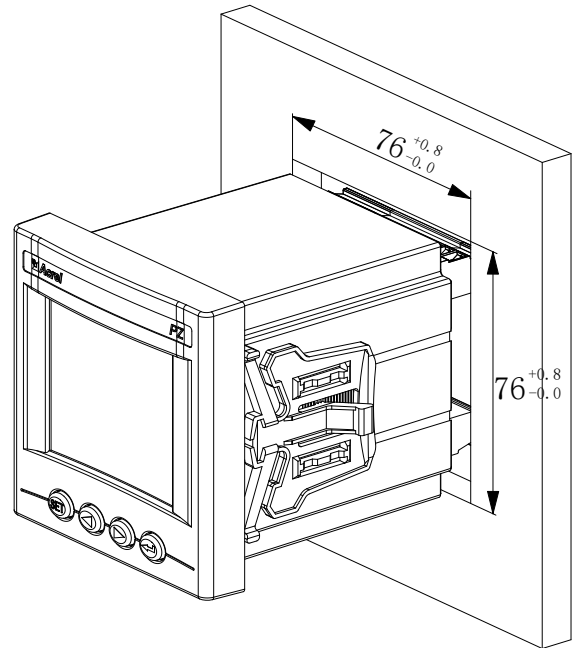
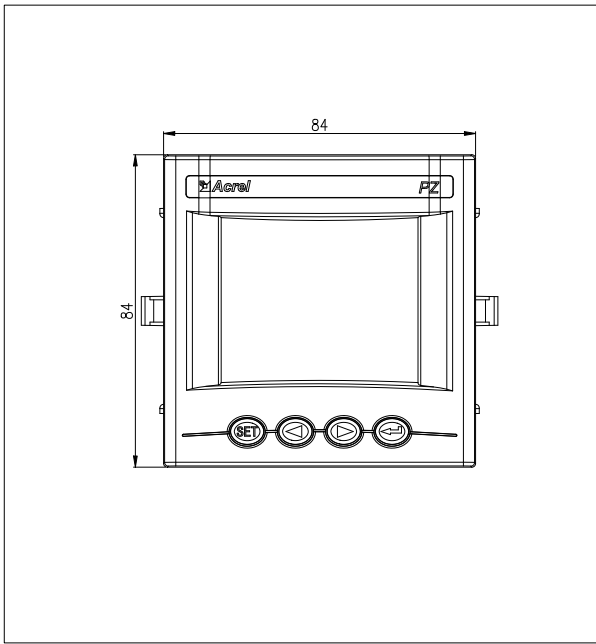


Figure 5 PZ80 installation dimensions

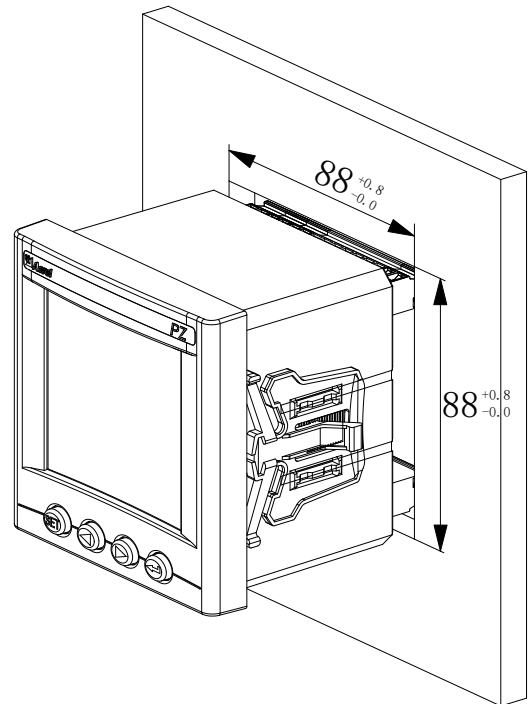
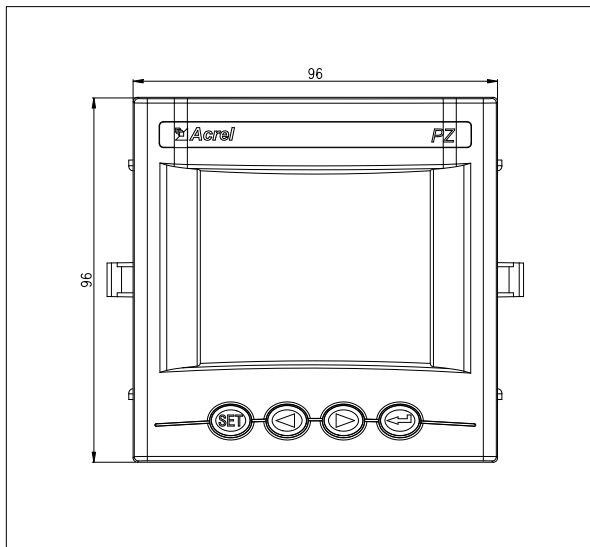


Figure 6 PZ96 installation dimensions

4.2 Installation method

- 1) Opening in fixed distribution cabinet
- 2) Take out the instrument and take out the clip
- 3) The instrument is mounted from the Front to the mounting hole, as shown in figure 7
- 4) Insert the instrument clasp to secure the instrument, as shown in figure 8

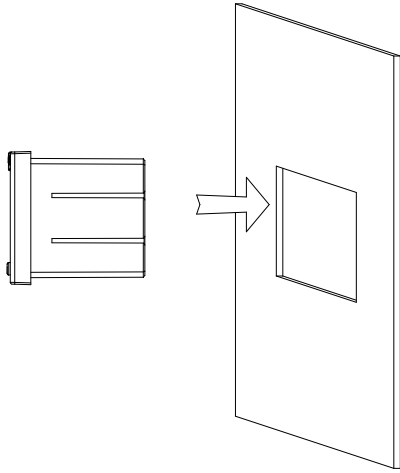


Figure 7


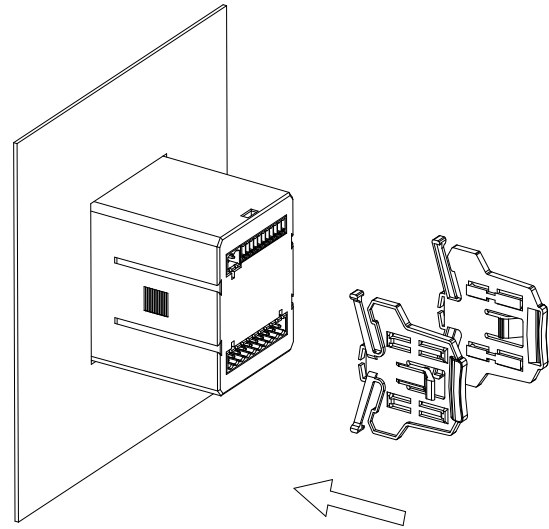


Figure 8

4.3 Wiring method

According to varied design requirements, power and voltage input terminals are recommended with fuse(BS88 1A gG) to meet with the safety performance requirements of prevailing electric codes.

4.3.1 Instrument terminal block and wiring method

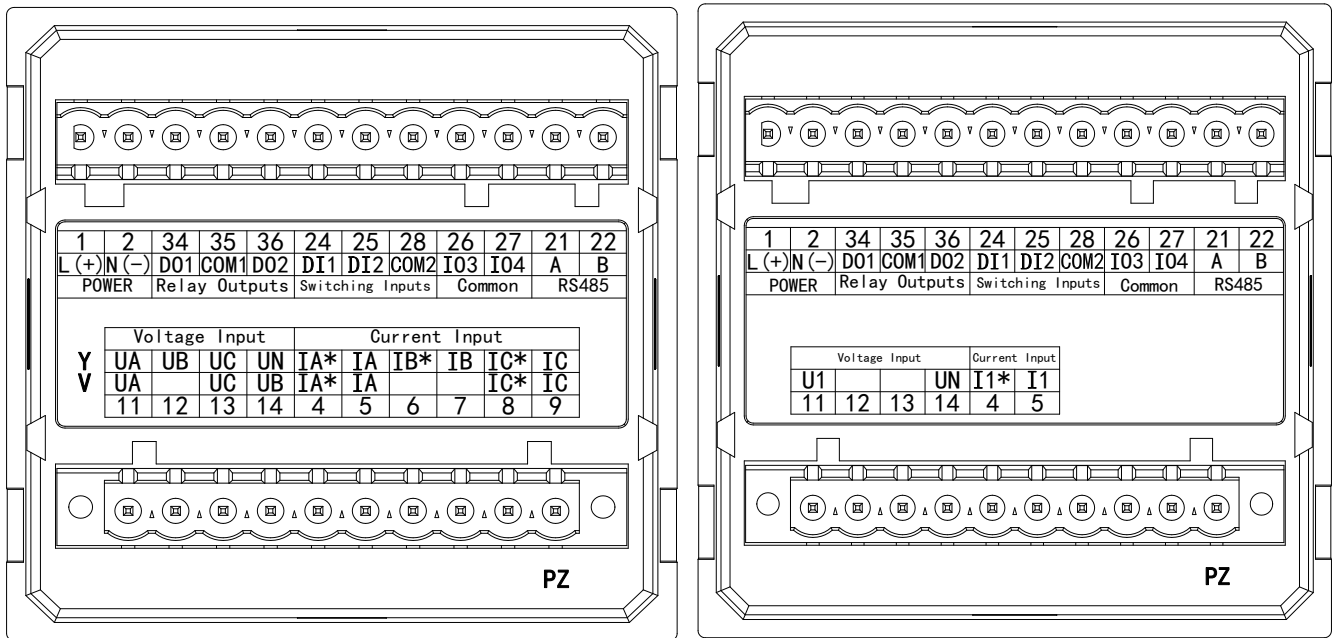

three-phase

single-phase

Figure 9 PZ72 series terminal block diagram

Note: Switching input: 26 - DI3, 27 - DI4.

pulse output: 26 - EP+, 27 - EP-.

Analog output: 26-AO, 27-COM3.

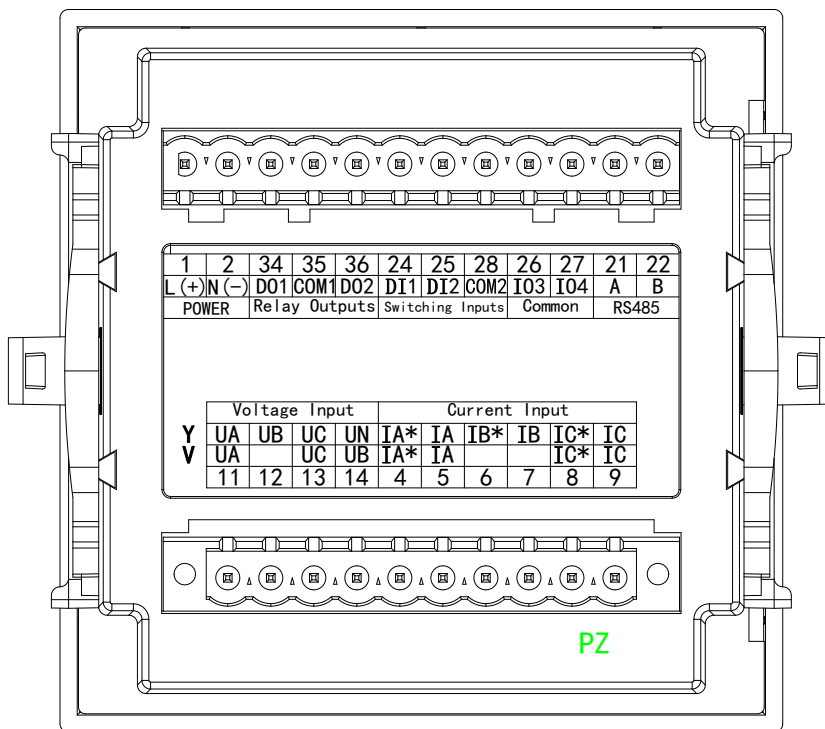


Figure 10 PZ80 series terminal block diagram

Note: Switching input: 26 - DI3, 27 - DI4.

pulse output: 26 - EP+, 27 - EP-.

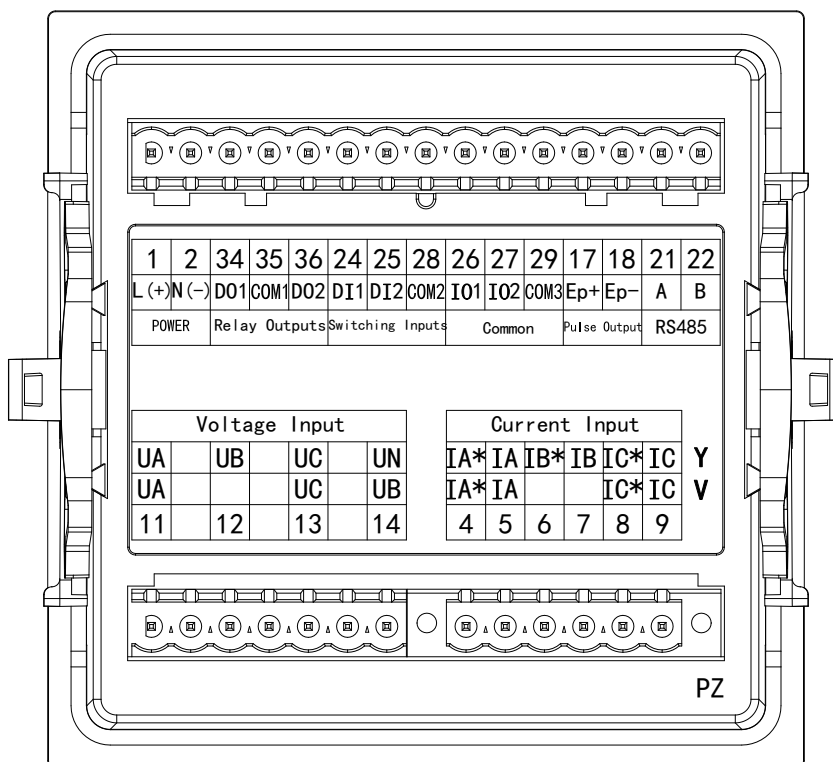


Figure 11 PZ96 series terminal block diagram

Note:



Switching input: 26—DI3, 27—DI4, 29—COM3;

pulse output: 26—AO1, 27—AO2, 29—COM3.





4.3.2 Instrument signal terminal wiring method

Signal terminal: "4,5,6,7,8,9" is the terminal number of the current input; "11,12,13,14" is the terminal number of the voltage input.

Single-phase:

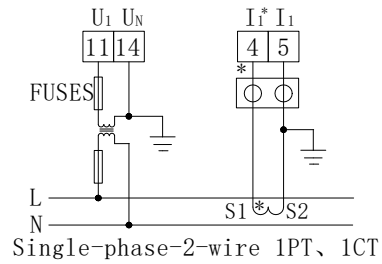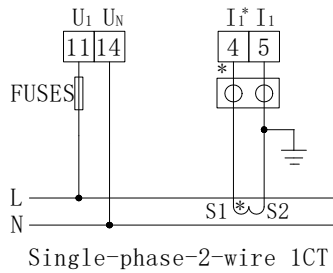

Three-phase

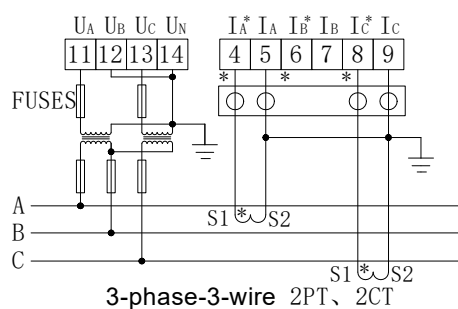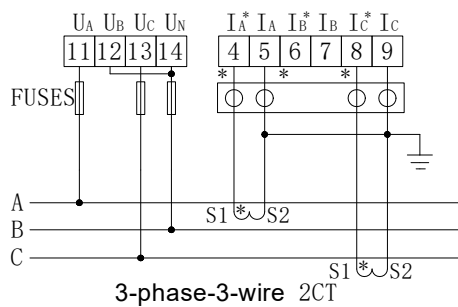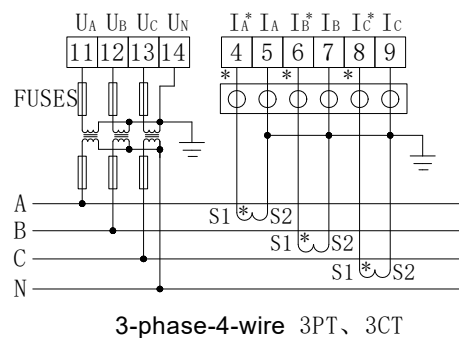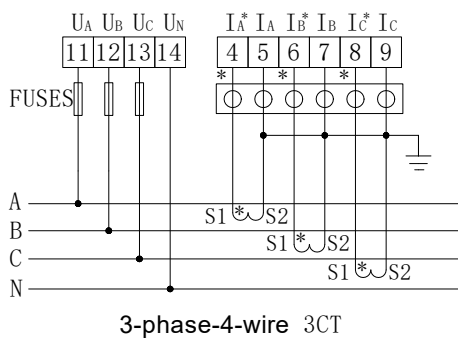

NOTE:  is the test terminal for CT secondary side short circuit.

Figure 12 Schematic diagram of instrument signal wiring

An example of wiring for the communication part is shown below:

Correct wiring method: the communication cable shield is connected to the earth.

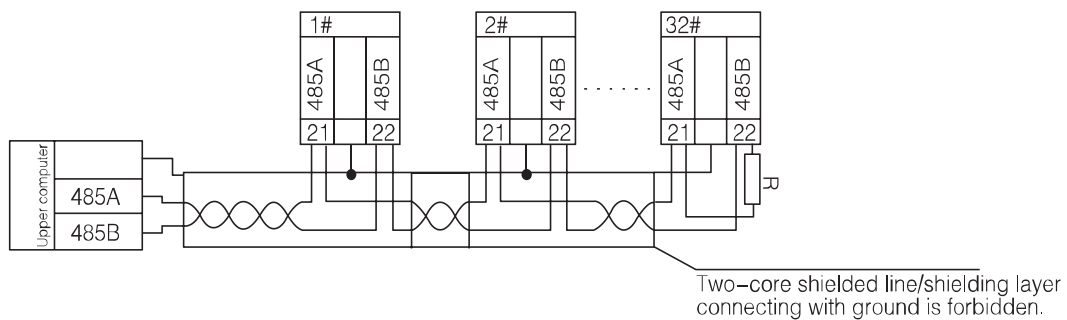


Figure 13 RS485 communication wiring diagram

It is recommended to add a matching resistor between A and B of the end meter, and the resistance range is 120Ω~10 kΩ.

5. Operating instructions

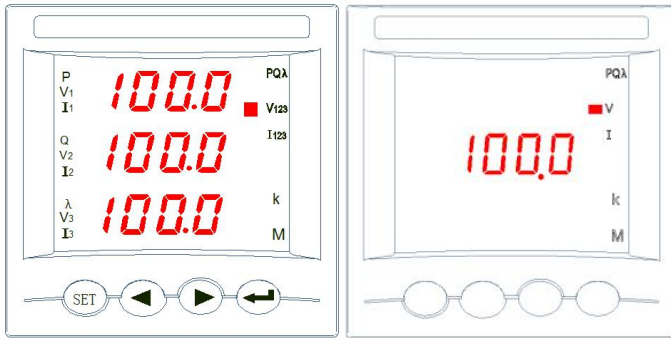


Figure 14 LED front panel

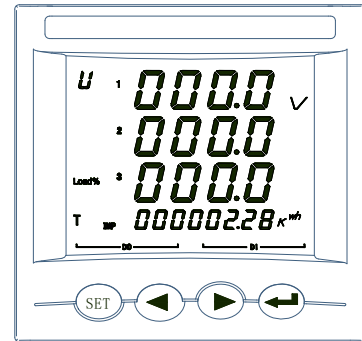


Figure 15 LCD front panel

5.1 Explanation for keypad functionality

Four keys of PZ series programmable intelligent meter separately indicate SET key, LEFT key, RIGHT key, ENTER key from left to right.

Table 4 key function description

| Panel key category | Key Function |
|-----------------------------|---|
| SET key (SET) | Under measurement mode, Press This key enter programming mode, meters hint Input password PASS, after Input correct password, set up meters programming; Under programming mode, used for Return to previous menu. |
| Left key(◀) | Under measurement mode, used for switching Display item; Under programming mode, used for switching same class menu or ones place reduced. |
| Right key(▶) | Under measurement mode, used for switching Display item; Under programming mode, used for switching same class menu or ones place increase. |
| ENTER key(↵) | Under measurement mode, when Displaying Electric energy data, press This key can look over time sharing multi-rate Electric energy(if any); Programming mode, used for menu item selection confirm and parameter revision confirm. |
| Left key+ENTER key(◀+ ↵) | Programming mode, this key combination is used for the reduction of hundreds of digits. |
| Right key+ENTER key(▶+ ↵) | Programming mode, this key combination is used to increase the hundred digits. |

Note: When using the combination key, you can hold down the Left and Right key and then press the Enter key.

5.2 Display Example

5.2.1 The operation steps of checking the current, voltage, power, electric energy and frequency of PZ72/80/96 are shown in FIG. 16 and FIG. 17.

PZ72/80/96 three phase watt hour meter:

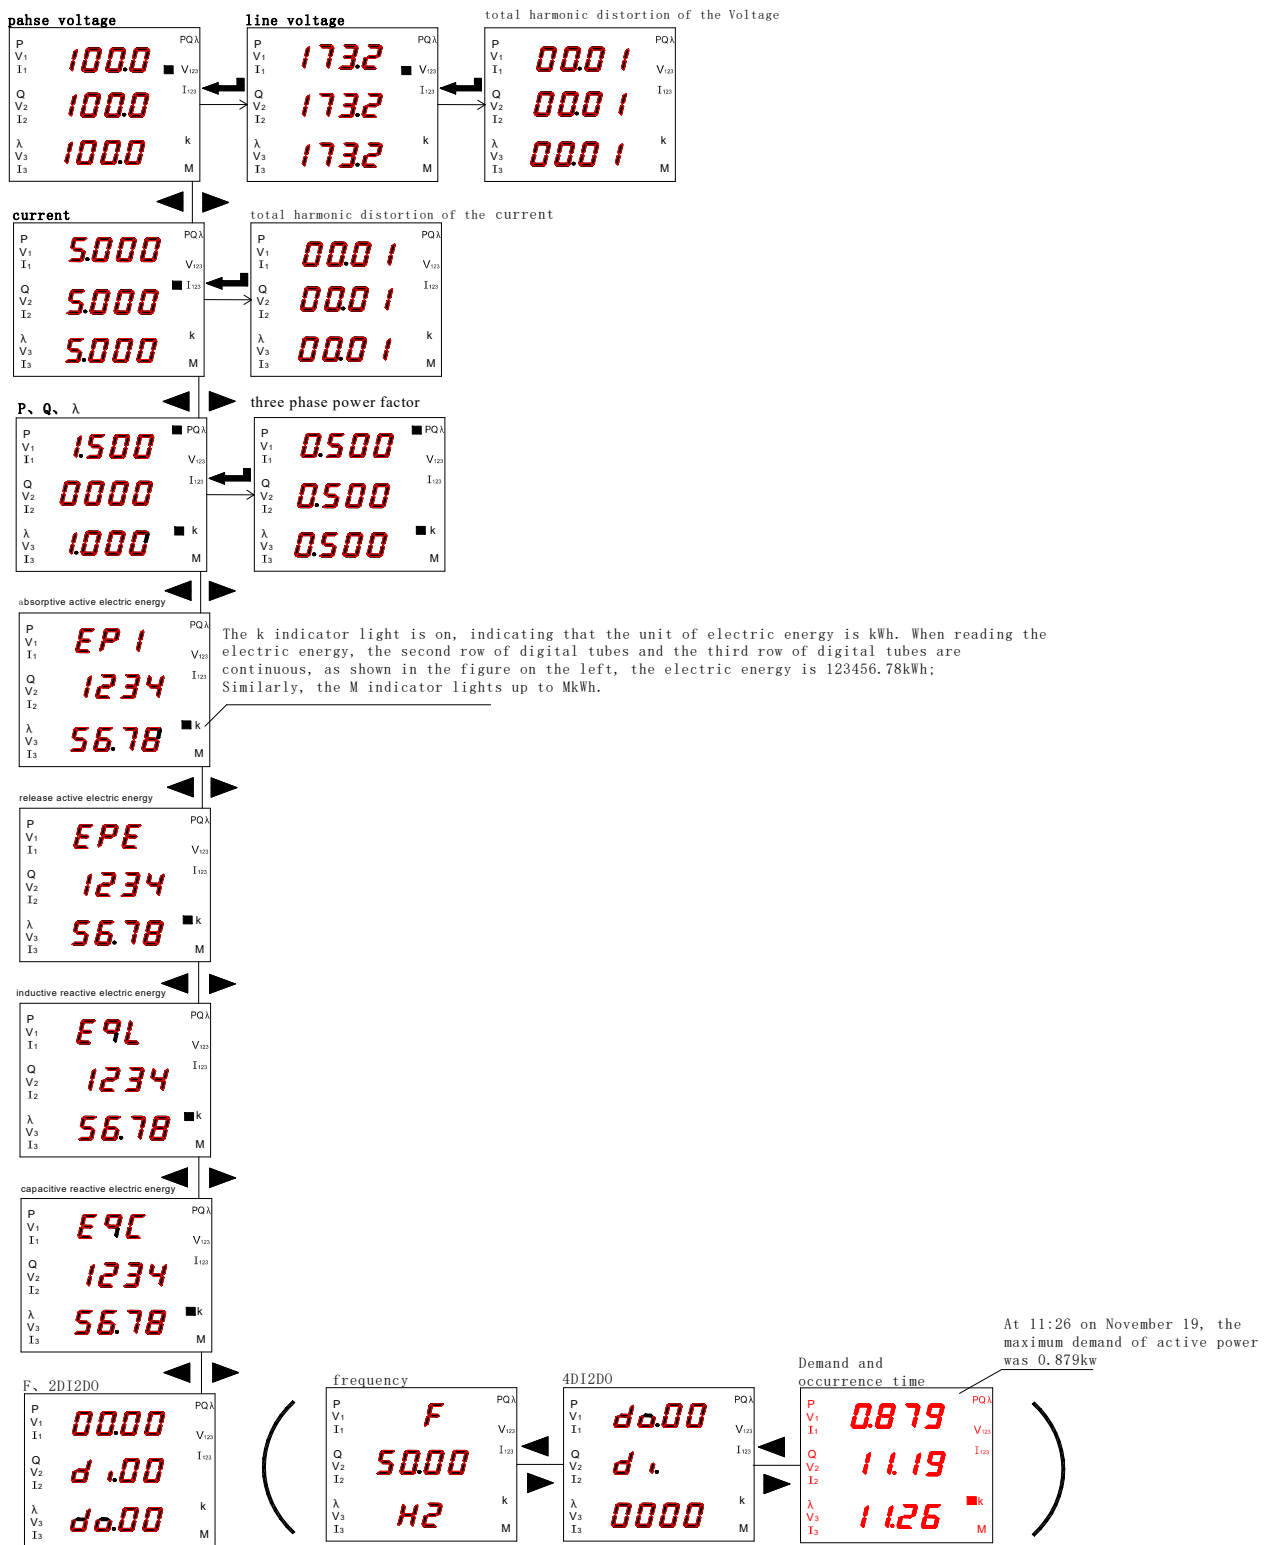


Figure 16

PZ72 single phase watt hour meter:

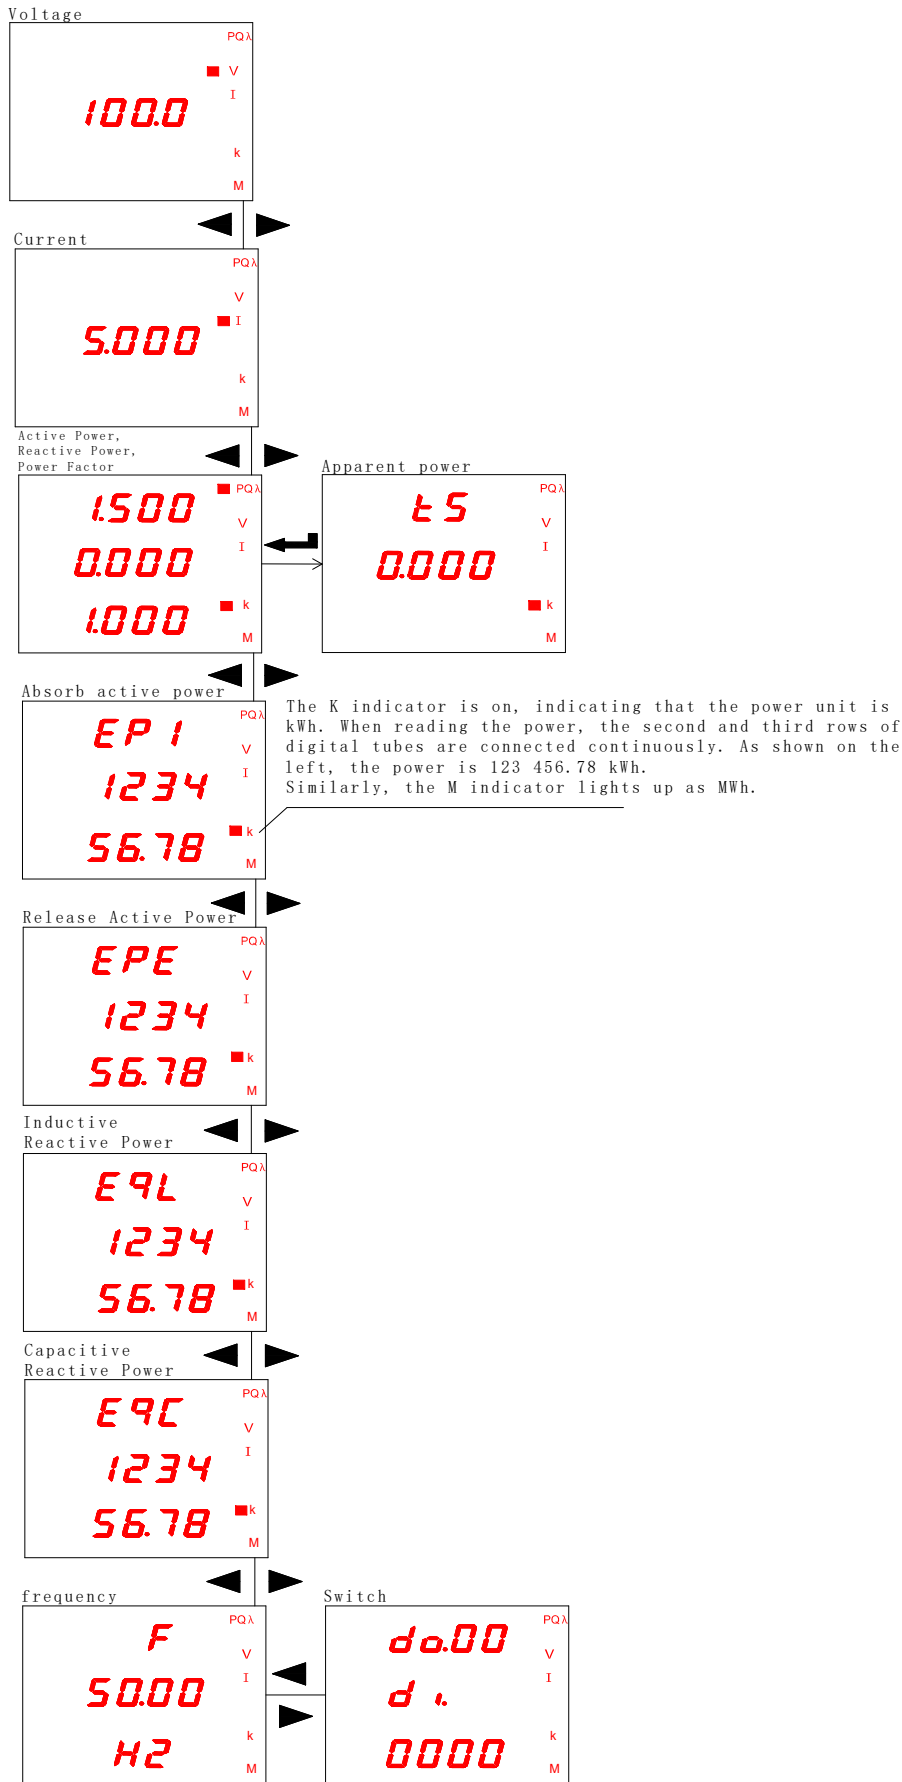


Figure 17

5.2.2 The steps to view the event record of PZ72/ 80/ 96 are shown in Figure 18.

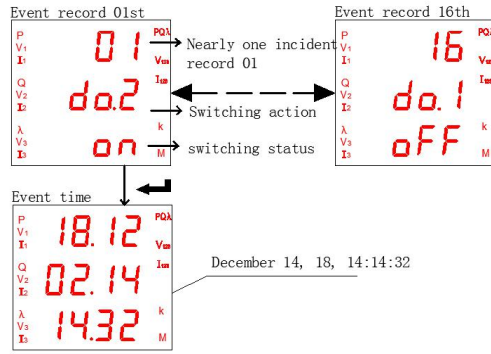


Figure 18

Note: The event record (SOE) can be viewed by pressing the SET key on any interface.

5.2.3 The steps for viewing various types of power parameters of the PZ72L/80L/96L are shown in Figure 16,17.

PZ72L/80L/96L three-phase power meter:

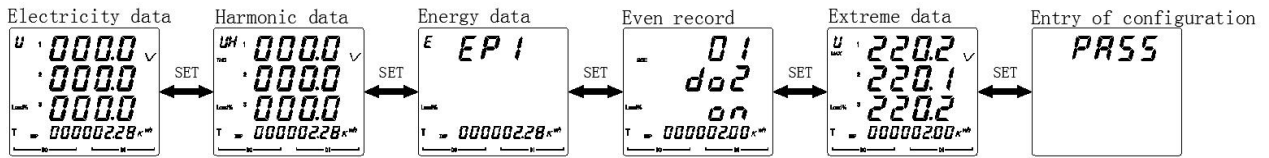


Figure 19

PZ72L single-phase power:

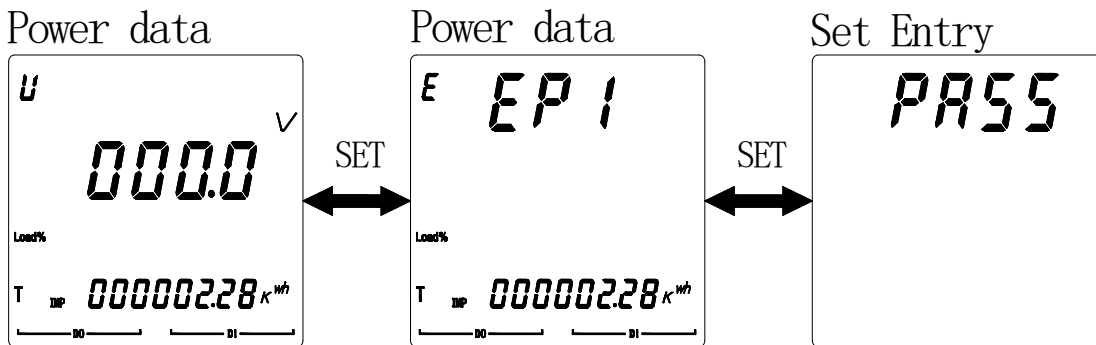


Figure 20

Note: The SET key can be used to switch various types of data, event record (SOE) and extreme value data exist only when SOE function is selected.

5.2.4 View the power parameters of the PZ72L/80L/96L as shown in Figure 21,22.

PZ72L/80L/96L three-phase power meter:

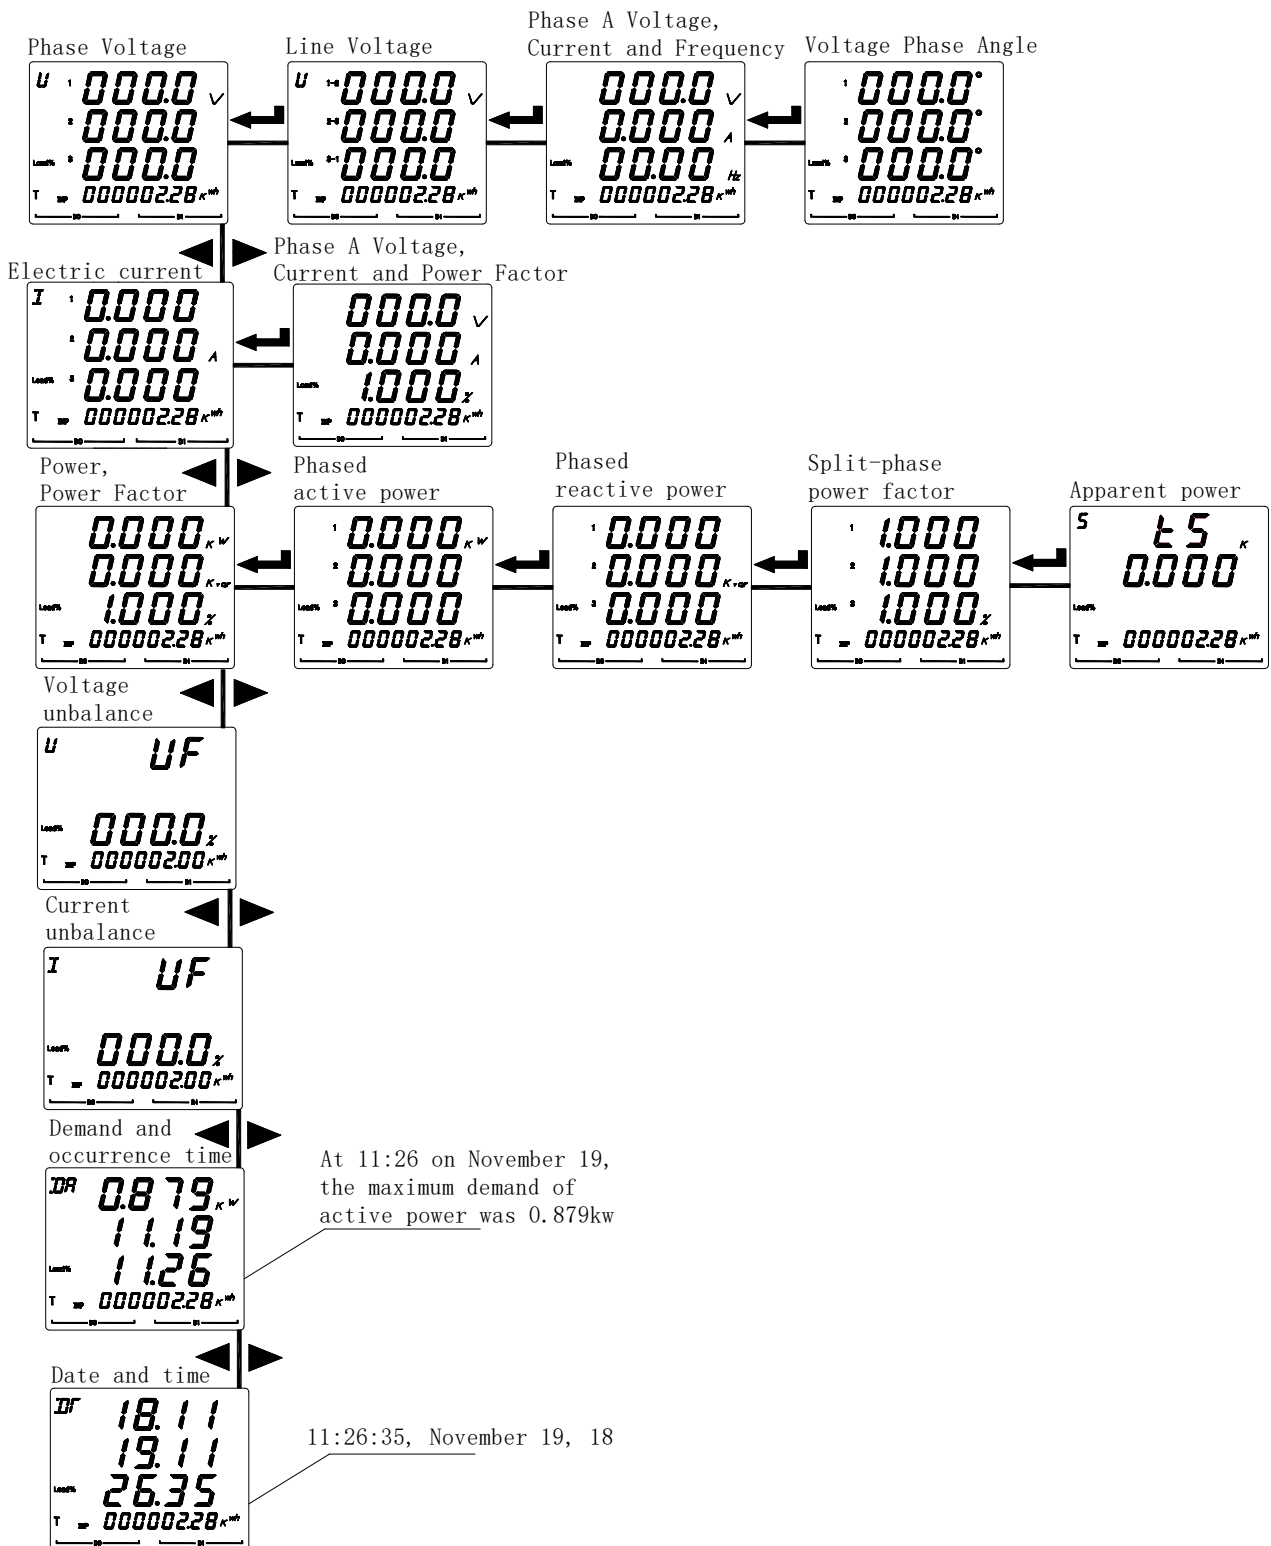


Figure 21

Note: If the meter has an event record (SOE) function, the date and time interface is displayed.

PZ72L single phase electric energy:

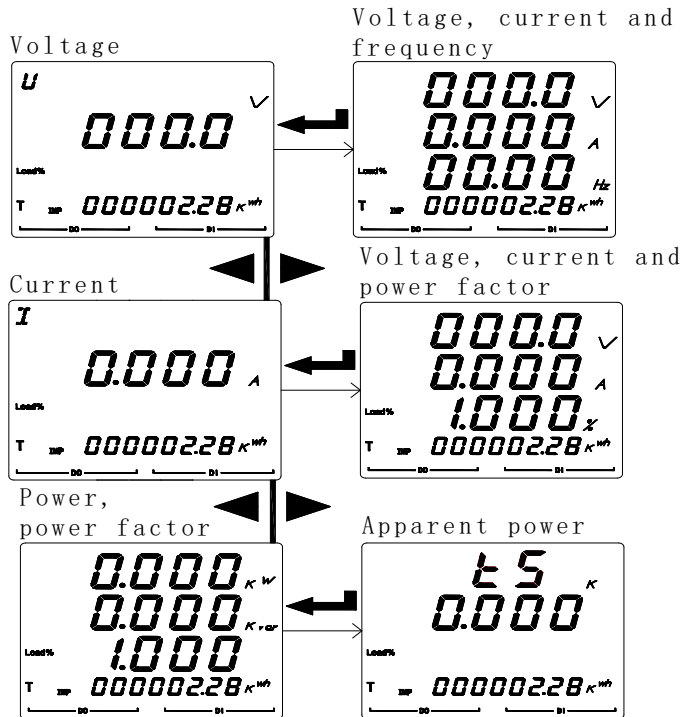


Figure 22

5.2.5 View the harmonic parameters of the PZ72L/80L/96L meter as shown in Figure 23.

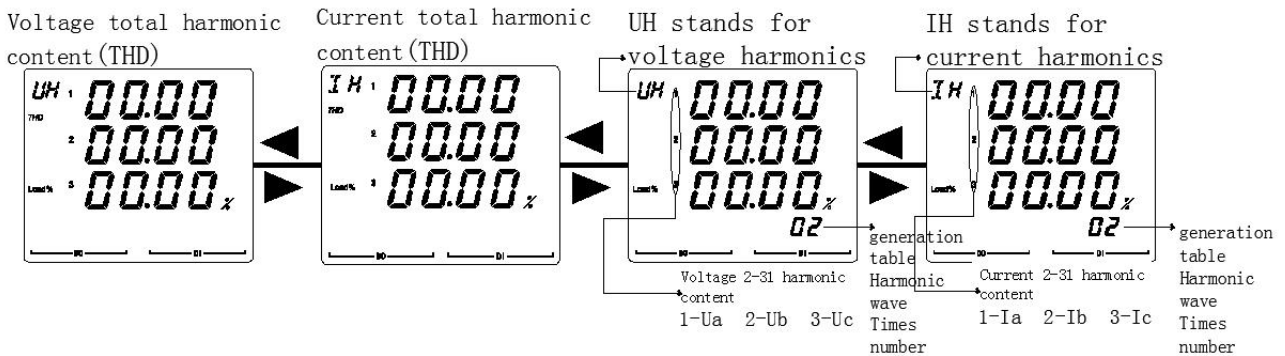


Figure 23

Note: Only the 96 shape has the function of fractional harmonics; press the left and right buttons to switch the harmonic content of 2-31 times.

5.2.6 View the power parameters of the PZ72L/80L/96L as shown in Figure 24.

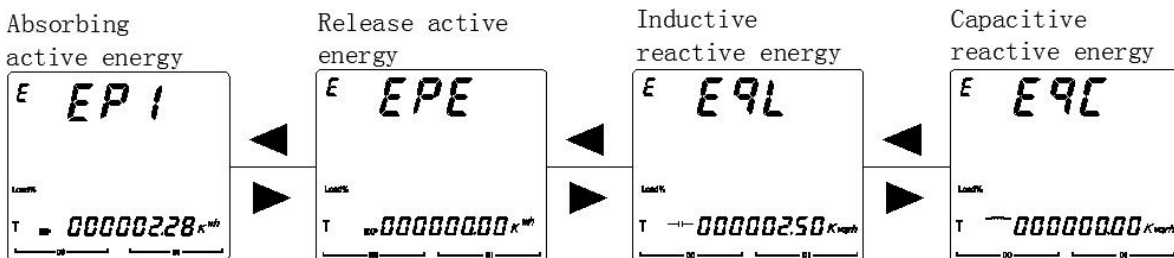


Figure 24

5.2.7 View the PZ72L/80L/96L event record parameters as shown in Figure 25.

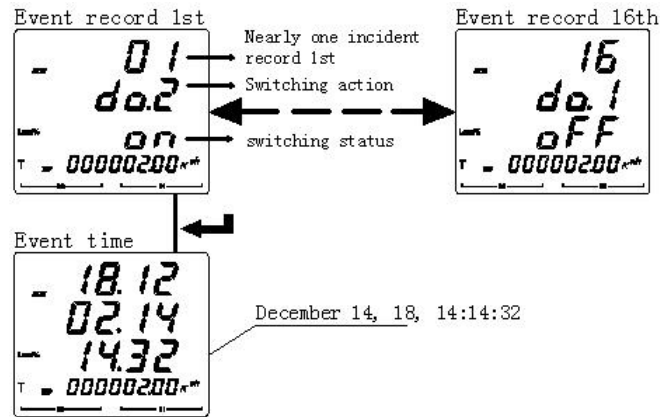


Figure 25

5.2.8 View the extreme value parameters of the PZ72L/80L/96L as shown in Figure 26.

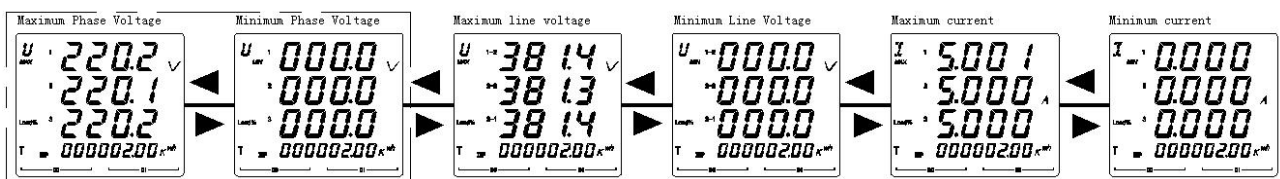


Figure 26

Note: There are no interface voltage maximum value and phase voltage minimum value interface for three-phase three-wire.

5.3 Programming menu

5.3.1 Meter general programming menu

Table 5

| First menu | Second menu | Tertiary menu | Description |
|------------|-------------|---------------|---|
| 545 | d 15P | | Start-up display selection: 0-automatic page turning; other page numbers correspond to the current meter model power parameter interface. |
| | Code | 0~9999 | Password setting (Initial password 0001) |
| | CLr.E | | Press ENTER key Electric energy clear |
| | CLr.d | | Press Enter key, clear demand record |
| | CLr.ā | | Press Enter key, clear demand record |
| | EP.E9 | E1/E2 | Primary(EI) or secondary(E2) energy display option,The default is E1. |
| | PLUS | 1.6-160.0 | Constant of Energy plus(e.g:10.0-10000imp/kWh) |
| | CF | EP | Active pulse (EP) |

| | | | |
|------------------|--------------|-------------------------------------|--|
| <i>In</i> | <i>Line</i> | 3P3L、3P4L | Connection mode(Three-phase-three-wire Three-phase-four-wire) |
| | <i>In.U</i> | 100V、400V、660V | Input voltage range |
| | <i>In.I</i> | 1A、5A | Input current range |
| | <i>In.Pt</i> | 0~9999 | Voltage ratio |
| | <i>In.Ct</i> | 0~9999 | Current ratio |
| <i>bUS</i> | <i>Addr</i> | 1~247 | Communication address |
| | <i>bAUD</i> | 1200、2400、4800、 9600、19200、38400 | Communication baud rate |
| | <i>mode</i> | None/2bit/odd/even | Communication data mode |
| <i>tr.1-tr.2</i> | <i>SEL</i> | See 5.4.2 for details. | Analog output item selection |
| | <i>TYPE</i> | <u>4~20mA</u> Or <u>0~ 20mA</u> | Output range |
| | <i>Ro.Hi</i> | <u>-9999~9999</u> | High change value setting |
| | <i>Ro.Lo</i> | <u>-9999~9999</u> | Low change value setting |
| <i>do.1-do.2</i> | <i>SEL</i> | See 5.4.3for details. | Alarm item selection |
| | <i>dLY</i> | <u>0000~9999</u> | Alarm delay or remote control delay |
| | <i>bAnd</i> | <u>0000~9999</u> | Hysteresis setting |
| | <i>AL.Hi</i> | <u>-9999~9999</u> | High alarm value setting |
| | <i>AL.Lo</i> | <u>-9999~9999</u> | Low alarm value setting |
| | <i>In.=0</i> | | Whether low alarm is allowed when the signal is 0 |
| <i>DATE</i> | Year | Month,day | Set current time |
| <i>TIME</i> | Time | Minutes, seconds | |
| <i>VER</i> | | | Meter version number and number |

5.3.2 LCD display instrument backlight control menu

Table 6

| First menu | Second menu | Tertiary menu | Description |
|------------|-------------|---------------|---|
| 545 | b.LCd | 0-9999 | When set to 0, the backlight is always on. When set to 1-9999, the backlight is off after 1-9999 seconds. |

5.4 Programming example

The programming example use flow chart to introduce how to change some options of programming menu such as current times, transducer setting etc.

Note: After completing setting or selecting, press ENTER button to confirm, after confirming, pressing SET key until SAVE/YES page appear, now, the ENTER button must be pressed to confirm, otherwise, the setting is invalid.

5.4.1 How to modify the current ratio

For example: the signal is 1000A/5A meter, the ratio setting is shown in Figure 27.

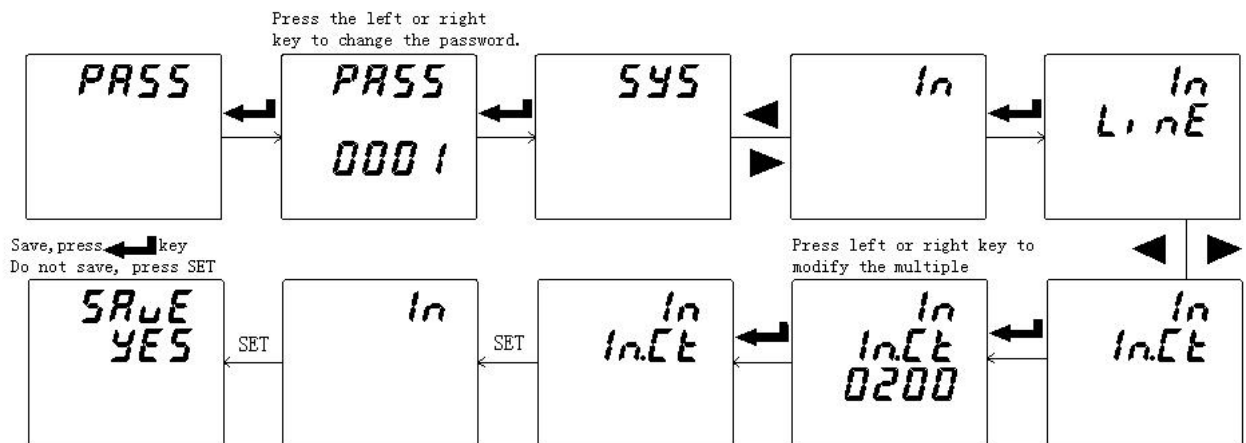


Figure 27

5.4.2 How to modify the analog output settings

For example: set the line voltage Uab to correspond to the first analog 0-20mA output at 19-381V, The settings are shown in Figure 28.

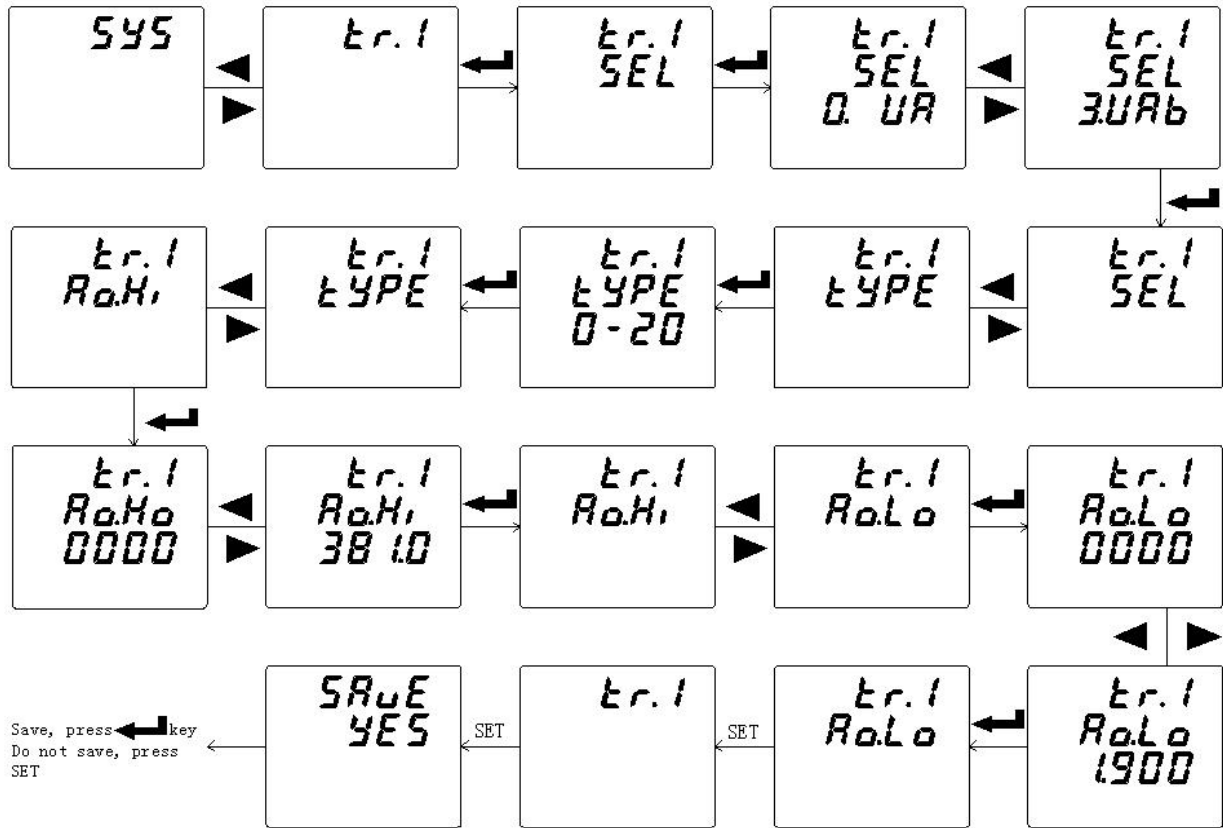


Figure 28

Table 7

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--------------|---|----|----|------|-----|-----|-----|----|----|----|----|----|----|-----|-----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|------|----|----|----|----|----|----|----|----|----|----|----|------|----|----|----|------|-----|-----|-----|----|----|--|--|--|--|--|--|----|---|--|--|--|--|--|--|
| <i>Er.1</i> | First channel analog output | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <i>SEL</i> | Analog output item selection <table border="1" style="margin-left: 40px;"> <tr> <td>00</td><td>01</td><td>02</td><td>03</td><td>04</td><td>05</td><td>06</td><td>07</td> </tr> <tr> <td>UA</td><td>UB</td><td>UC</td><td>UB</td><td>UBC</td><td>UCA</td><td>IA</td><td>IB</td> </tr> <tr> <td>08</td><td>09</td><td>10</td><td>11</td><td>12</td><td>13</td><td>14</td><td>15</td> </tr> <tr> <td>IC</td><td>PA</td><td>PB</td><td>PC</td><td>Psum</td><td>QA</td><td>QB</td><td>QC</td> </tr> <tr> <td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td> </tr> <tr> <td>Qsum</td><td>SA</td><td>SB</td><td>SC</td><td>Ssum</td><td>PFA</td><td>PFB</td><td>PFC</td> </tr> <tr> <td>24</td><td>25</td><td colspan="6"></td> </tr> <tr> <td>PF</td><td>F</td><td colspan="6"></td> </tr> </table> | 00 | 01 | 02 | 03 | 04 | 05 | 06 | 07 | UA | UB | UC | UB | UBC | UCA | IA | IB | 08 | 09 | 10 | 11 | 12 | 13 | 14 | 15 | IC | PA | PB | PC | Psum | QA | QB | QC | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | Qsum | SA | SB | SC | Ssum | PFA | PFB | PFC | 24 | 25 | | | | | | | PF | F | | | | | | |
| 00 | 01 | 02 | 03 | 04 | 05 | 06 | 07 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| UA | UB | UC | UB | UBC | UCA | IA | IB | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 08 | 09 | 10 | 11 | 12 | 13 | 14 | 15 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| IC | PA | PB | PC | Psum | QA | QB | QC | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Qsum | SA | SB | SC | Ssum | PFA | PFB | PFC | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 24 | 25 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| PF | F | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <i>TYPE</i> | 4~20mA Or 0~20mA | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <i>Ao.Hi</i> | When the analog output is 20mA, the corresponding electrical parameter is taken as the highest four-digit integer (the decimal point is ignored) and the last bit is zero. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <i>Ao.Lo</i> | Similar to Ao.Hi | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

Note: The analog output setting includes the analog output selection, the analog output full scale corresponding value and the analog output zero corresponding value.

The analog output selects different values for different signals, and refers to the analog output item selection. The analog output full scale corresponds to the signal primary side value, that is, the 20 mA output corresponds to the displayed value of the power, and the highest four-digit integer (the decimal point is ignored) is less than 0. If the input is 220V, 100A/5A, three-phase three-wire, the total power is $220\text{kV} \times 100\text{A} \times \sqrt{3} = 38.10\text{kW}$, the output type is 4-20mA; if 100% total power, the first analog output is 20mA, 0% total power The first analog output 4mA, the first analog output selection (register address 0005H) is set to 12, the first output fullness corresponding value (register address 0006H) can be set to 38.10; the first output zero corresponding value (Register address 0007H) can be set to 0.

5.4.3 Switching/Relay alarm output setting

For example: when the total active power is lower than 3.3kW or higher than 66kW, the first alarm will act after 10 seconds, and Hysteresis setting is 1kW. When the power is 0, the alarm is allowed. The setting is shown in Figure 29.

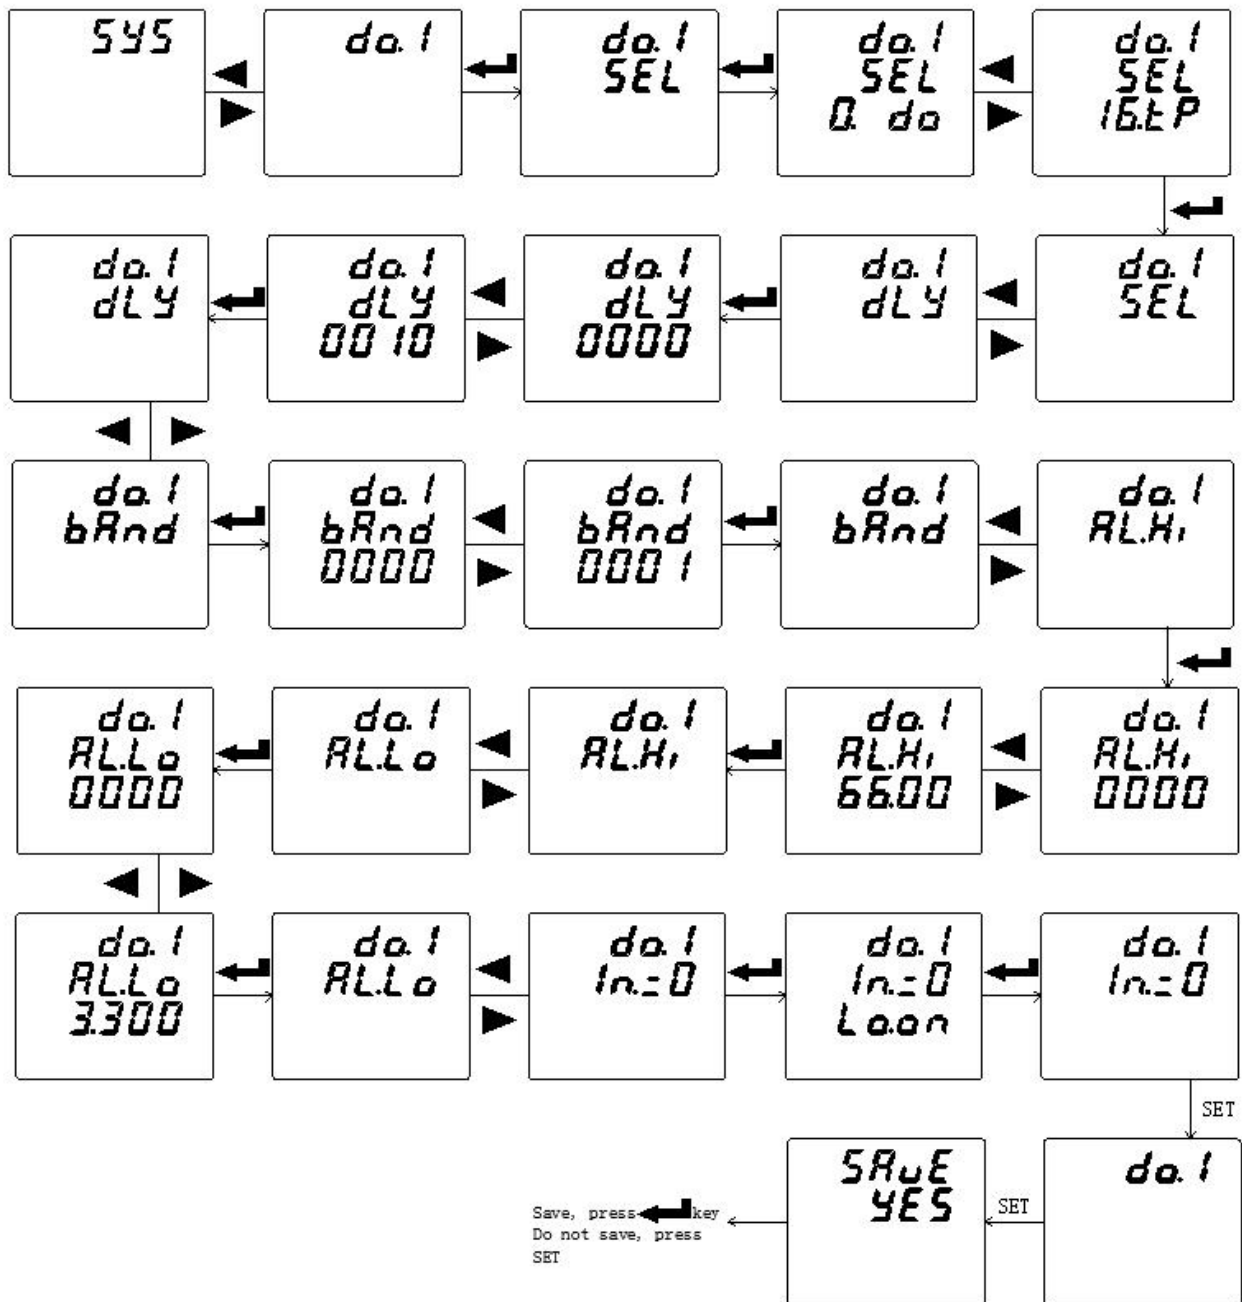


Figure 29

Table 8

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--|---|------------|---------------------|---|------------------------------|----------------------------|----------------------|-----------|-----------|----------------|-----------|-----------|-----------|---|------------|------------|------------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|--|--|-----------|-----------|-----------|---|-----------|-----------|--|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-------------|-----------|-----------|-----------|-------------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-------------|------------|------------|------------|-----------|----------|----------------------|----------------------|-----------|-----------|-----------|--|--|--|--|--|---------------------|--|--|---------------------|--|--|----------------------------|--|--|--|--|--|--|------------------------------|--|--|
| <i>do.1</i> | The first switching/relay alarm output | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <i>SEL</i> | <p>Alarm item setting</p> <table border="1"> <tr> <td><u>00</u></td> <td><u>01</u></td> <td><u>02</u></td> <td><u>03</u></td> <td><u>04</u></td> <td><u>05</u></td> <td><u>06</u></td> <td><u>07</u></td> </tr> <tr> <td>Remote control</td> <td><u>UA</u></td> <td><u>UB</u></td> <td><u>UC</u></td> <td>Three-phase phase voltage maximum value</td> <td><u>UAB</u></td> <td><u>UBC</u></td> <td><u>UCA</u></td> </tr> <tr> <td><u>08</u></td> <td><u>09</u></td> <td><u>10</u></td> <td><u>11</u></td> <td><u>12</u></td> <td><u>13</u></td> <td><u>14</u></td> <td></td> </tr> <tr> <td>hree-phase line voltage maximum value</td> <td><u>IA</u></td> <td><u>IB</u></td> <td><u>IC</u></td> <td>Three-phase current maximum value</td> <td><u>PA</u></td> <td><u>PB</u></td> <td></td> </tr> <tr> <td><u>15</u></td> <td><u>16</u></td> <td><u>17</u></td> <td><u>18</u></td> <td><u>19</u></td> <td><u>20</u></td> <td><u>21</u></td> <td><u>22</u></td> </tr> <tr> <td><u>PC</u></td> <td><u>Psum</u></td> <td><u>QA</u></td> <td><u>QB</u></td> <td><u>QC</u></td> <td><u>Qsum</u></td> <td><u>SA</u></td> <td><u>SB</u></td> </tr> <tr> <td><u>24</u></td> <td><u>25</u></td> <td><u>26</u></td> <td><u>27</u></td> <td><u>28</u></td> <td><u>29</u></td> <td><u>30</u></td> <td><u>31</u></td> </tr> <tr> <td><u>Ssum</u></td> <td><u>PFA</u></td> <td><u>PFB</u></td> <td><u>PFC</u></td> <td><u>PF</u></td> <td><u>F</u></td> <td>Voltage imbalance</td> <td>Current imbalance</td> </tr> <tr> <td><u>32</u></td> <td><u>33</u></td> <td><u>34</u></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td colspan="3"><u>DI1(Linkage)</u></td> <td colspan="3"><u>DI2(Linkage)</u></td> <td colspan="2"><u>FL (Combined alarm)</u></td> </tr> <tr> <td colspan="5">The corresponding channel "In.=0" needs to be set to "Lo.on"</td> <td colspan="3">The second way DO can be set</td> </tr> </table> | <u>00</u> | <u>01</u> | <u>02</u> | <u>03</u> | <u>04</u> | <u>05</u> | <u>06</u> | <u>07</u> | Remote control | <u>UA</u> | <u>UB</u> | <u>UC</u> | Three-phase phase voltage maximum value | <u>UAB</u> | <u>UBC</u> | <u>UCA</u> | <u>08</u> | <u>09</u> | <u>10</u> | <u>11</u> | <u>12</u> | <u>13</u> | <u>14</u> | | hree-phase line voltage maximum value | <u>IA</u> | <u>IB</u> | <u>IC</u> | Three-phase current maximum value | <u>PA</u> | <u>PB</u> | | <u>15</u> | <u>16</u> | <u>17</u> | <u>18</u> | <u>19</u> | <u>20</u> | <u>21</u> | <u>22</u> | <u>PC</u> | <u>Psum</u> | <u>QA</u> | <u>QB</u> | <u>QC</u> | <u>Qsum</u> | <u>SA</u> | <u>SB</u> | <u>24</u> | <u>25</u> | <u>26</u> | <u>27</u> | <u>28</u> | <u>29</u> | <u>30</u> | <u>31</u> | <u>Ssum</u> | <u>PFA</u> | <u>PFB</u> | <u>PFC</u> | <u>PF</u> | <u>F</u> | Voltage imbalance | Current imbalance | <u>32</u> | <u>33</u> | <u>34</u> | | | | | | <u>DI1(Linkage)</u> | | | <u>DI2(Linkage)</u> | | | <u>FL (Combined alarm)</u> | | The corresponding channel "In.=0" needs to be set to "Lo.on" | | | | | The second way DO can be set | | |
| <u>00</u> | <u>01</u> | <u>02</u> | <u>03</u> | <u>04</u> | <u>05</u> | <u>06</u> | <u>07</u> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Remote control | <u>UA</u> | <u>UB</u> | <u>UC</u> | Three-phase phase voltage maximum value | <u>UAB</u> | <u>UBC</u> | <u>UCA</u> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <u>08</u> | <u>09</u> | <u>10</u> | <u>11</u> | <u>12</u> | <u>13</u> | <u>14</u> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| hree-phase line voltage maximum value | <u>IA</u> | <u>IB</u> | <u>IC</u> | Three-phase current maximum value | <u>PA</u> | <u>PB</u> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <u>15</u> | <u>16</u> | <u>17</u> | <u>18</u> | <u>19</u> | <u>20</u> | <u>21</u> | <u>22</u> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <u>PC</u> | <u>Psum</u> | <u>QA</u> | <u>QB</u> | <u>QC</u> | <u>Qsum</u> | <u>SA</u> | <u>SB</u> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <u>24</u> | <u>25</u> | <u>26</u> | <u>27</u> | <u>28</u> | <u>29</u> | <u>30</u> | <u>31</u> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <u>Ssum</u> | <u>PFA</u> | <u>PFB</u> | <u>PFC</u> | <u>PF</u> | <u>F</u> | Voltage imbalance | Current imbalance | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <u>32</u> | <u>33</u> | <u>34</u> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <u>DI1(Linkage)</u> | | | <u>DI2(Linkage)</u> | | | <u>FL (Combined alarm)</u> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| The corresponding channel "In.=0" needs to be set to "Lo.on" | | | | | The second way DO can be set | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <i>dLy</i> | <p>When the alarm item SEL is 00 (remote control), DLY indicates the duration after the switching amount is activated.</p> <p>When the alarm item SEL is not 00 (alarm), DLY indicates the delay time before the switching action.</p> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <i>bAnd</i> | Hysteresis setting | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <i>ALHi</i> | High alarm value setting (do not set the maximum 9999) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <i>ALLo</i> | Low alarm value setting (do not set minimum -9999) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <i>In.=0</i> | Whether low alarm is allowed when the signal is 0, Lo.on is enabled, Lo.of is forbidden | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

Note:

1. Hysteresis setting, high alarm value setting and low alarm value setting correspond to the display value of the battery, and the display contains a decimal point.e.g. input 220V 100A/5A, three phase four wire, 100% P total as $220 \times 100 \times 3 = 66\text{kW}$, e.g. 100% power high alarm, "AL.Hi" taken as 66.00; 100% voltage high alarm, "AL.Hi" taken as 220.0; 100% current high alarm, "AL.Hi" taken as 100.0

2.Indication of three phase XX maximum/minimum value: high alarm represents maximum value of three phase; low alarm represents minimum value of three phase

3.Secondary DO to be set as "34.FL" combination alarm function; after setting, level II menu changed as "SEL" (function selection), "dLy" (delay), "H-U" (high voltage), "L-U" (low voltage), "H-F" (high frequency), "L-F" (low frequency), "H-P" (high frequency), "L-P" (low frequency), "H-I" (high current), "L-PF" (low power factor), " H-b.U " (over voltage unbalance, set as -1 phase miss, judgment condition at least one phase $>0.5U_e$, at least one phase $<0.1U_e$), " H-b.I " (over current unbalance, set as -1 phase miss, judgment condition at least one phase $>0.2I_e$, at least one phase $<0.01I_e$).

4.Unbalance calculation

(Difference between maximum deviation from the mean value and mean value)/mean value *100%,if the mean value of denominator is less than the rated value, the denominator is rated value.

voltage rated value U_e ; 3 phase 4 wire U_e as the phase voltage, menu setting 400V instrument as 220V*PT, 100V instrument as 57V*PT.

Current rated value I_e : 5A instrument as 5A*CT, 1A instrument as 1A*CT.

Unbalance set parameter in percentage, e.g. 20 means 20%.

6 Communication

6.1 Register listing(MODBUS-RTU)

Table 9

| Address | Parameter | Read or write | Value range | Data type |
|-----------------|---|---------------|---|-----------|
| 0000H | Password saved | R/W | 0001-9999 | Uint16 |
| 0001H high byte | Communication address | R/W | 0001-0247 | Uint16 |
| 0001H low byte | Communication baud rate | R/W | 0-3: 38400、19200、9600、4800bps | |
| 0002H | Control character | R/W | 8th bit-connection mode (0-3-phase-4-we, 1-3-phase-3-wire) 7th bit-input voltage range (0-400V, 1-100V) second bit-input current range (0-5A, 0-1 A) | Uint16 |
| 0003H | PT transformation ratio | R/W | 1-9999 | Uint16 |
| 0004H | CT transformation ratio | R/W | 1-9999 | Uint16 |
| 0005H | First analog output parameter setting Analog output selection | R/W | The low byte is valid, and the corresponding parameter refers to the SEL correspondence in 5.4.2. | Uint16 |
| 0006H | First analog output parameter setting Analog output full scale corresponding value | R/W | -9999~9999(Same as analog output setting menu 5.4.2 in Ao.Hi) | Int16 |
| 0007H | First analog output parameter setting Analog output zero point corresponding value | R/W | -9999~9999(Same as analog output setting menu 5.4.2 in Ao.Lo) | Int16 |
| 0008H-000AH | Second analog output parameter setting | R/W | Same as the first analog output parameter setting | Uint16 |
| 000BH-000DH | Third analog output parameter setting | R/W | Same as the first analog output parameter setting | Uint16 |
| 000EH-0010H | Fourth analog output parameter setting | R/W | Same as the first analog output parameter setting | Uint16 |
| 0011H high byte | Backlight control | R/W | Only applied to LCD Display meters 0= lights | Uint16 |
| 0012H | rt-1 hour, rt-1 minute | R/W | high byte:rt-1 hour, low byte:rt-1 minute | Uint16 |
| 0013H | rt-1 multiple rate, rt-2 hour | R/W | high byte:rt8-rt1 multiple rate(1 sharp, 2 peak, | Uint16 |

| | | | | |
|---|-----------------------------------|-----|--|--------|
| | | | 3 flat, 4 valley), low byte:rt-2 hour | |
| 0014H | rt-2 minute, rt-2 multiple rate | R/W | high byte:rt-2 minute, low byte:rt1-rt2 multiple rate(1 sharp, 2 peak, 3 flat, 4 valley) | Uint16 |
| 0015H-0017H | Rt-3, rt4 setting | R/W | Same as rt-1, rt-2 setting | Uint16 |
| 0018H-001AH | rt-5, rt6 setting | R/W | Same as rt-1, rt-2 setting | Uint16 |
| 001BH-001DH | rt-7, rt8 setting | R/W | Same as rt-1, rt-2 setting | Uint16 |
| 001EH~0020H | Date time setting | R/W | Year, Month, Day, Hour, Minute, Second | Uint16 |
| 0021H high byte | Automatic meter reading day | R/W | Month, day | Uint16 |
| 0021H low byte | Current time rate | R/W | 1 sharp, 2 peak, 3 flat, 4 valley | |
| 0022H | Switching input and output status | R/W | See 6.2.1 | Uint16 |
| 0023H high byte | Decimal point U (DPT) | R | 3~7 | Uint16 |
| 0023H low byte | Decimal point I (DCT) | R | 1~5 | |
| 0024H high byte | Decimal point PQ (DPQ) | R | 4~10 | Uint16 |
| 0024H low byte | Symbol PQ | R | High byte-low byte:Q、Qc、Qb、Qa、P、Pc、Pb、Pa; 0 is positive and 1 is negative | |
| The following is the primary side power parameter | | | | |
| 0025H | UAN | R | 0-9999 (see 6.2.2 for conversion formula) | Uint16 |
| 0026H | UBN | R | 0-9999 (see 6.2.2 for conversion formula) | Uint16 |
| 0027H | UCN | R | 0-9999 (see 6.2.2 for conversion formula) | Uint16 |
| 0028H | UAB | R | 0-9999 (see 6.2.2 for conversion formula) | Uint16 |
| 0029H | UBC | R | 0-9999 (see 6.2.2 for conversion formula) | Uint16 |
| 002AH | UCA | R | 0-9999 (see 6.2.2 for conversion formula) | Uint16 |
| 002BH | IA | R | 0-9999 (see 6.2.2 for conversion formula) | Uint16 |
| 002CH | IB | R | 0-9999 (see 6.2.2 for conversion formula) | Uint16 |
| 002DH | IC | R | 0-9999 (see 6.2.2 for conversion formula) | Uint16 |
| 002EH | PA | R | 0-9999 (see 6.2.2 for conversion formula) | Uint16 |
| 002FH | PB | R | 0-9999 (see 6.2.2 for conversion formula) | Uint16 |
| 0030H | PC | R | 0-9999 (see 6.2.2 for conversion formula) | Uint16 |
| 0031H | Psum | R | 0-9999 (see 6.2.2 for conversion formula) | Uint16 |
| 0032H | QA | R | 0-9999 (see 6.2.2 for conversion formula) | Uint16 |

| | | | | |
|---|--|---|--|--------|
| 0033H | QB | R | 0-9999 (see 6.2.2 for conversion formula) | Uint16 |
| 0034H | QC | R | 0-9999 (see 6.2.2 for conversion formula) | Uint16 |
| 0035H | Qsum | R | 0-9999 (see 6.2.2 for conversion formula) | Uint16 |
| 0036H | PFA | R | 0-1000 (see 6.2.2 for conversion formula) | Uint16 |
| 0037H | PFB | R | 0-1000 (see 6.2.2 for conversion formula) | Uint16 |
| 0038H | PFC | R | 0-1000 (see 6.2.2 for conversion formula) | Uint16 |
| 0039H | PFsum | R | 0-1000 (see 6.2.2 for conversion formula) | Uint16 |
| 003AH | SA | R | 0-9999 (see 6.2.2 for conversion formula) | Uint16 |
| 003BH | SB | R | 0-9999 (see 6.2.2 for conversion formula) | Uint16 |
| 003CH | SC | R | 0-9999 (see 6.2.2 for conversion formula) | Uint16 |
| 003DH | Ssum | R | 0-9999 (see 6.2.2 for conversion formula) | Uint16 |
| 003EH | F | R | 4500-6500(see 6.2.2 for conversion formula) | Uint16 |
| The following is the energy address table | | | | |
| 003FH~ 0040H | Absorptive active electric energy secondary side | R | 0-999999999(see 6.2.2 for conversion formula) | Uint32 |
| 0041H~ 0042H | Release active electric energy secondary side | R | 0-999999999(see 6.2.2 for conversion formula) | Uint32 |
| 0043H~ 0044H | Inductive reactive electric energy secondary side | R | 0-999999999(see 6.2.2 for conversion formula) | Uint32 |
| 0045H~ 0046H | Capacitive reactive electric energy secondary side | R | 0-999999999(see 6.2.2 for conversion formula) | Uint32 |
| 0047H~ 0048H | absorptive active electric energy primary side | R | (see 6.2.2 for conversion formula) | Float |
| 0049H~ 004AH | Release active electric energy primary side | R | (see 6.2.2 for conversion formula) | Float |
| 004BH~ 004CH | Inductive reactive electric energy primary side | R | (see 6.2.2 for conversion formula) | Float |
| 004DH~ 004EH | Capacitive reactive electric energy primary side | R | (see 6.2.2 for conversion formula) | Float |
| The following is the primary side zero sequence voltage and current address table | | | | |
| 0074H | Zero sequence voltage | R | 0-9999(see 6.2.2 for conversion formula) | Uint16 |
| 0075H | Zero sequence current | R | 0-9999(see 6.2.2 for conversion formula) | Uint16 |
| 0076H | Current percentage | R | Unit 0.01% | Uint16 |
| 0077H | Voltage current phase sequence state | R | 高位: 电流, 低位: 电压 0: 正常 1: 错误 | Uint16 |
| 0078H-0079H | Running time | R | Unit 1min | Uint32 |
| 007AH~ 007DH | Data time | R | Year、mouth、day、hour、min、second、millisecond | Uint16 |
| The following is the voltage phase parameter address table | | | | |
| 008CH | Voltage UA phase angle | R | 0-9999 (1 decimal place, example 1200 means 120.0) | Uint16 |

| | | | | |
|--|------------------------|---|--|--------|
| 008DH | Voltage UB phase angle | R | 0-9999 (1 decimal place, example 1200 means 120.0) | Uint16 |
| 008EH | Voltage UC phase angle | R | 0-9999 (1 decimal place, example 1200 means 120.0) | Uint16 |
| The following is the event record address table. | | | | |
| 008FH~ 0094H | Event record 1st | R | See 6.2.3 event record table 10 for details | Uint16 |
| 0095H~ 009AH | Event record 2nd | R | See 6.2.3 event record table 10 for details | Uint16 |
| 009BH~ 00A0H | Event record 3rd | R | See 6.2.3 event record table 10 for details | Uint16 |
| 00A1H~ 00A6H | Event record 4th | R | See 6.2.3 event record table 10 for details | Uint16 |
| 00A7H~ 00ACH | Event record 5th | R | See 6.2.3 event record table 10 for details | Uint16 |
| 00ADH~ 00B2H | Event record 6th | R | See 6.2.3 event record table 10 for details | Uint16 |
| 00B3H~ 00B8H | Event record 7th | R | See 6.2.3 event record table 10 for details | Uint16 |
| 00B9H~ 00BEH | Event record 8th | R | See 6.2.3 event record table 10 for details | Uint16 |
| 00BFH~ 00C4H | Event record 9th | R | See 6.2.3 event record table 10 for details | Uint16 |
| 00C5H~ 00CAH | Event record 10th | R | See 6.2.3 event record table 10 for details | Uint16 |
| 00CBH~ 00D0H | Event record 11th | R | See 6.2.3 event record table 10 for details | Uint16 |
| 00D1H~ 00D6H | Event record 12th | R | See 6.2.3 event record table 10 for details | Uint16 |
| 00D7H~ 00DCH | Event record 13th | R | See 6.2.3 event record table 10 for details | Uint16 |
| 00DDH~ 00E2H | Event record 14th | R | See 6.2.3 event record table 10 for details | Uint16 |
| 00E3H~ 00E8H | Event record 15th | R | See 6.2.3 event record table 10 for details | Uint16 |
| 00E9H~ 00EEH | Event record 16th | R | See 6.2.3 event record table 10 for details | Uint16 |
| 0130H~ 0137H | Event record 1st | R | See 6.2.3 event record table 11 for details | Uint16 |

| | | | | |
|--|-------------------|---|---|--------|
| 0138H~ 013EH | Event record 2nd | R | See 6.2.3 event record table 11 for details | Uint16 |
| 013FH~ 0145H | Event record 3rd | R | See 6.2.3 event record table 11 for details | Uint16 |
| 0146H~ 014CH | Event record 4th | R | See 6.2.3 event record table 11 for details | Uint16 |
| 014DH~ 0153H | Event record 5th | R | See 6.2.3 event record table 11 for details | Uint16 |
| 0154H~ 015AH | Event record 6th | R | See 6.2.3 event record table 11 for details | Uint16 |
| 015BH~ 0161H | Event record 7th | R | See 6.2.3 event record table 11 for details | Uint16 |
| 0162H~ 0168H | Event record 8th | R | See 6.2.3 event record table 11 for details | Uint16 |
| 0169H~ 016FH | Event record 9th | R | See 6.2.3 event record table 11 for details | Uint16 |
| 0170H~ 0176H | Event record 10th | R | See 6.2.3 event record table 11 for details | Uint16 |
| 0177H~ 017DH | Event record 11th | R | See 6.2.3 event record table 11 for details | Uint16 |
| 017EH~ 0184H | Event record 12th | R | See 6.2.3 event record table 11 for details | Uint16 |
| 0185H~ 018BH | Event record 13th | R | See 6.2.3 event record table 11 for details | Uint16 |
| 018CH~ 0192H | Event record 14th | R | See 6.2.3 event record table 11 for details | Uint16 |
| 0193H~ 018FH | Event record 15th | R | See 6.2.3 event record table 11 for details | Uint16 |
| 019AH~ 0190H | Event record 16th | R | See 6.2.3 event record table 11 for details | Uint16 |
| The following is the secondary side power parameters | | | | |
| 0100H | UAN | R | 0-9999 (1 decimal place, unit V) | Uint16 |
| 0101H | UBN | R | 0-9999 (1 decimal place, unit V) | Uint16 |
| 0102H | UCN | R | 0-9999 (1 decimal place, unit V) | Uint16 |
| 0103H | UAB | R | 0-9999 (1 decimal place, unit V) | Uint16 |
| 0104H | UBC | R | 0-9999 (1 decimal place, unit V) | Uint16 |
| 0105H | UCA | R | 0-9999 (1 decimal place, unit V) | Uint16 |
| 0106H | IA | R | 0-9999 (3 decimal places, unit I) | Uint16 |
| 0107H | IB | R | 0-9999 (3 decimal places, unit I) | Uint16 |

| | | | | |
|------------------------------------|------------------------|-----|--|--------|
| 0108H | IC | R | 0-9999 (3 decimal places, unit I) | Uint16 |
| 0109H | PA | R | 0-9999 (3 decimal places, unit kw) | Int16 |
| 010AH | PB | R | 0-9999 (3 decimal places, unit kw) | Int16 |
| 010BH | PC | R | 0-9999 (3 decimal places, unit kw) | Int16 |
| 010CH | Psum | R | 0-9999 (3 decimal places, unit kw) | Int16 |
| 010DH | QA | R | 0-9999 (3 decimal places, unit kvar) | Int16 |
| 010EH | QB | R | 0-9999 (3 decimal places, unit kvar) | Int16 |
| 010FH | QC | R | 0-9999 (3 decimal places, unit kvar) | Int16 |
| 0110H | Qsum | R | 0-9999 (3 decimal places, unit kvar) | Int16 |
| 0111H | PFA | R | -1000 to 1000 (3 decimal places) | Int16 |
| 0112H | PFB | R | -1000 to 1000 (3 decimal places) | Int16 |
| 0113H | PFC | R | -1000 to 1000 (3 decimal places) | Int16 |
| 0114H | PFsum | R | -1000 to 1000 (3 decimal places) | Int16 |
| 0115H | SA | R | 0-9999 (3 decimal places, unit VA) | Uint16 |
| 0116H | SB | R | 0-9999 (3 decimal places, unit VA) | Uint16 |
| 0117H | SC | R | 0-9999 (3 decimal places, unit VA) | Uint16 |
| 0118H | Ssum | R | 0-9999 (3 decimal places, unit VA) | Uint16 |
| 0119H | F | R | 4500-6500 (2 decimal places) | Uint16 |
| 011AH | Zero sequence voltage | R | 0-9999 (1 decimal place, unit V) | Uint16 |
| 011BH | Zero sequence current | R | 0-9999 (3 decimal places, unit I) | Uint16 |
| DO setting and status read address | | | | |
| 025DH | Communication mode | R/W | 0: None 1: 2 Stop 2: Odd 3: Even | Uint16 |
| 025EH | Pulse constant setting | R/W | 16-1600 100 stands for 10000imp/kWh | Uint16 |
| 025FH | DIDO status | R | | Uint16 |
| 0260H | DO1 alarm selection | R/W | 0000-9999 (same as DO setting menu 5.3.3 in SEL) | Uint16 |
| 0261H | DO1 alarm delay | R/W | 0000-9999 (same as DO setting menu 5.3.3 DLY) | Uint16 |
| 0262H | DO1 hysteresis setting | R/W | 0000-9999 (same as DO setting menu 5.4.3 bAnd) | Uint16 |
| 0263H | DO1 high alarm value | R/W | -9999~9999 (with the DO setting menu 5.3.3 AL.Hi) | Int16 |
| 0264H | DO1 low alarm value | R/W | -9999 ~ 9999 (along with DO setting menu 5.3.3 AL.Lo) | Int16 |
| 0265H | DO1 low alarm enable | R/W | Enable at 0 (same as DO setting menu 5.4.3 in In.=0) | Uint16 |
| 0266H-026BH | DO2 alarm settings | R/W | Same as DO1 alarm setting, high and low voltage value and voltage value in DO2 combination alarm | Uint16 |

| | | | | |
|-------------|---|-----|---|--------|
| 026CH-0271H | DO3 alarm settings | R/W | Same as DO1 alarm setting | Uint16 |
| 0272H-0277H | DO4 alarm settings | R/W | Same as DO1 alarm setting | Uint16 |
| 0278H | DLT645 address setting | R/W | High four-bit address, hex form | Uint16 |
| 0279H | DLT645 address setting | R/W | Medium four-bit address, hex form | Uint16 |
| 027AH | DLT645 address setting | R/W | Low four-bit address, hex form | Uint16 |
| 027BH | DO2 combination alarm over frequency value | R/W | 0000-9999 (same as DO2 setting menu 5.4.3 H-F) | Uint16 |
| 027CH | DO2 combination alarm underfrequency value | R/W | 0000-9999 (same as DO2 setting menu 5.5.3 L-F) | Uint16 |
| 027DH | DO2 combination alarm over power value | R/W | -9999 ~ 9999 (the same as the DO2 setting menu 5.4.3 H-P) | Int16 |
| 027EH | DO2 combination alarm underpower value | R/W | -9999 ~ 9999 (L-P in the same DO2 setting menu 5.4.3) | Int16 |
| 027FH | DO2 combination alarm over current value | R/W | 0000-9999 (the same as the DO2 setting menu 5.4.3 H-I) | Uint16 |
| 0280H | DO2 combination alarm underpower factor value | R/W | -1000 to 1000 (L-PF in the same setting as the DO2 setting menu 5.4.3) | Int16 |
| 0281H | DO2 combination alarm overvoltage imbalance value | R/W | -1 to 999 (H-b.U in the same setting as the DO2 setting menu 5.4.3) | Int16 |
| 0282H | DO2 combination alarm overcurrent imbalance value | R/W | -1 to 999 (H-b.I in the same setting as the DO2 setting menu 5.4.3) | Int16 |
| 03E8H | Alarm status of DO2 combined alarm | R | bit0="H- U" (high voltage) bit1="L- U" (low voltage) bit2="H- F" (high frequency) bit3="L- F" (low frequency) bit4="H- P" (high power) bit5="L- P" (low power) bit6="H- I" (high current) bit7="L- PF" (low power factor) bit8="H- b.U" (over voltage unbalance, set as -1 phase miss) bit9="H- b.I" (Current imbalance) | Uint16 |
| 03E9H | DO1 current alarm value | R | 0000-9999 | Uint16 |
| 03EAH | DO2 current alarm value | R | 0000-9999 | Uint16 |
| 03EBH | DO3 current alarm value | R | 0000-9999 | Uint16 |
| 03ECH | DO4 current alarm value | R | 0000-9999 | Uint16 |

| | | | | |
|---|--|---|--|--------|
| 03EDH | DO2 combination alarm current overvoltage value | R | 0000-9999 | UInt16 |
| 03EEH | DO2 combination alarm current undervoltage value | R | 0000-9999 | UInt16 |
| 03EFH | DO2 combination alarm current over frequency value | R | 0000-9999 | UInt16 |
| 03F0H | DO2 combination alarm current underfrequency value | R | 0000-9999 | UInt16 |
| 03F1H | DO2 combination alarm current overpower value | R | 0000-9999 | UInt16 |
| 03F2H | DO2 combination alarm current underpower value | R | 0000-9999 | UInt16 |
| 03F3H | DO2 combination alarm current overcurrent value | R | 0000-9999 | UInt16 |
| 03F4H | DO2 combination alarm underpower factor value | R | 0000-9999 | UInt16 |
| 03F5H | DO2 combination alarm overvoltage imbalance value | R | 0000-9999 | UInt16 |
| 03F6H | DO2 combination alarm overcurrent imbalance value | R | 0000-9999 | UInt16 |
| The following is an address table with H function | | | | |
| 0400H | A Phase voltage total harmonic distortion rate | R | 0-9999 (2 decimal places, example 200 means 2%) | UInt16 |
| 0401H | B Phase voltage total harmonic distortion rate | R | 0-9999 (2 decimal places, example 200 means 2%) | UInt16 |
| 0402H | C Phase voltage total harmonic distortion rate | R | 0-9999 (2 decimal places, example 200 means 2%) | UInt16 |
| 0403H | A Phase current total harmonic distortion rate | R | 0-9999 (2 decimal places, example 200 means 2%) | UInt16 |
| 0404H | B Phase current total harmonic distortion rate | R | 0-9999 (2 decimal places, example 200 means 2%) | UInt16 |
| 0405H | C Phase current total harmonic distortion rate | R | 0-9999 (2 decimal places, example 200 means 2%) | UInt16 |
| 0406H | A Phase voltage harmonic value | R | 0-9999 (secondary side value, decimal point 1 bit, unit V) | UInt16 |

| | | | | |
|--|--|---|---|--------|
| 0407H | B Phase voltage harmonic value | R | 0-9999 (secondary side value, decimal point 1 bit, unit V) | Uint16 |
| 0408H | C Phase voltage harmonic value | R | 0-9999 (secondary side value, decimal point 1 bit, unit V) | Uint16 |
| 0409H | A Phase current harmonic value | R | 0-9999 (secondary side value, decimal point 3 bits, unit A) | Uint16 |
| 040AH | B Phase current harmonic value | R | 0-9999 (secondary side value, decimal point 3 bits, unit A) | Uint16 |
| 040BH | C Phase current harmonic value | R | 0-9999 (secondary side value, decimal point 3 bits, unit A) | Uint16 |
| 040CH-0429H | A Phase voltage 2-31 harmonic distortion rate | R | 0-9999 (2 decimal places, example 200 means 2%) | Uint16 |
| 042AH-0447H | B Phase voltage 2-31 harmonic distortion rate | R | 0-9999 (2 decimal places, example 200 means 2%) | Uint16 |
| 0448H-0465H | C Phase voltage 2-31 harmonic distortion rate | R | 0-9999 (2 decimal places, example 200 means 2%) | Uint16 |
| 0466H-0483H | A Phase current 2-31 harmonic distortion rate | R | 0-9999 (2 decimal places, example 200 means 2%) | Uint16 |
| 0484H-04A1H | B Phase current 2-31 harmonic distortion rate | R | 0-9999 (2 decimal places, example 200 means 2%) | Uint16 |
| 04A2H-04BFH | C Phase current 2-31 harmonic distortion rate | R | 0-9999 (2 decimal places, example 200 means 2%) | Uint16 |
| 04C0H-04DDH | A Phase voltage 2-31 harmonic value | R | 0-9999 (secondary side value, decimal point 1 bit, unit V) | Uint16 |
| 04DEH-04FBH | B Phase voltage 2-31 harmonic value | R | 0-9999 (secondary side value, decimal point 1 bit, unit V) | Uint16 |
| 04FCH-0519H | C Phase voltage 2-31 harmonic value | R | 0-9999 (secondary side value, decimal point 1 bit, unit V) | Uint16 |
| 051AH-0537H | A Phase current 2-31 harmonic value | R | 0-9999 (secondary side value, decimal point 3 bits, unit A) | Uint16 |
| 0538H-0555H | B Phase current 2-31 harmonic value | R | 0-9999 (secondary side value, decimal point 3 bits, unit A) | Uint16 |
| 0556H-0573H | C Phase current 2-31 harmonic value | R | 0-9999 (secondary side value, decimal point 3 bits, unit A) | Uint16 |
| The following is the extreme value address table | | | | |
| 0600H | A Phase voltage maximum | R | 0-9999 (secondary side value) | Uint16 |
| 0601H | A phase voltage maximum value occurs year, month | R | High bit:year, low bit:month | Uint16 |

| | | | | |
|-------------|--|---|---|--------|
| 0602H | A phase voltage maximum value occurs day, hour | R | High bit:day, low bit:hour | Uint16 |
| 0603H | A maximum value of the phase voltage occurs minutes, seconds | R | High bit:minute, low bit:second | Uint16 |
| 0604H-0607H | B phase voltage maximum value and occurrence time | R | (The same as the A phase voltage extreme value) | Uint16 |
| 0608H-060BH | C phase voltage maximum value and occurrence time | R | (The same as the A phase voltage extreme value) | Uint16 |
| 060CH-060FH | A line voltage maximum value and occurrence time | R | (The same as the A phase voltage extreme value) | Uint16 |
| 0610H-0613H | B line voltage maximum value and occurrence time | R | (The same as the A phase voltage extreme value) | Uint16 |
| 0614H-0617H | C line voltage maximum value and occurrence time | R | (The same as the A phase voltage extreme value) | Uint16 |
| 0618H-061BH | A phase current maximum value and occurrence time | R | (The same as the A phase voltage extreme value) | Uint16 |
| 061CH-061FH | B phase current maximum value and occurrence time | R | (The same as the A phase voltage extreme value) | Uint16 |
| 0620H-0623H | C phase current maximum value and occurrence time | R | (The same as the A phase voltage extreme value) | Uint16 |
| 0680H-0683H | A phase voltage minimum value and occurrence time | R | (The same as the A phase voltage extreme value) | Uint16 |
| 0684H-0687H | B phase voltage minimum value and occurrence time | R | (The same as the A phase voltage extreme value) | Uint16 |
| 0688H-068BH | C phase voltage minimum value and occurrence time | R | (The same as the A phase voltage extreme value) | Uint16 |
| 068CH-068FH | A line voltage minimum value and occurrence time | R | (The same as the A phase voltage extreme value) | Uint16 |
| 0690H-0693H | B line voltage minimum value and occurrence time | R | (The same as the A phase voltage extreme value) | Uint16 |
| 0694H-0697H | C line voltage minimum value and occurrence time | R | (The same as the A phase voltage extreme value) | Uint16 |
| 0698H-069BH | A phase current minimum value and occurrence time | R | (The same as the A phase voltage extreme value) | Uint16 |
| 069CH-069FH | B phase current minimum value and occurrence time | R | (The same as the A phase voltage extreme value) | Uint16 |
| 06A0H-06A3H | C phase current minimum value and occurrence time | R | (The same as the A phase voltage extreme value) | Uint16 |

| | | | | |
|-------|-------------------|---|---|--------|
| 0700H | Voltage imbalance | R | 0-9999 (1 decimal place, example 20 means 2%) | Uint16 |
| 0701H | Current imbalance | R | 0-9999 (1 decimal place, example 20 means 2%) | Uint16 |

6.2 Communication application

The PZ series programmable intelligent meter has unified planning of the communication address table during design. The user can conveniently realize the functions of telemetry, remote signaling and remote control according to the following description.

6.2.1 Switching input and output

The switching input of the PZ series programmable intelligent meter adopts dry contact switch signal input mode. The instrument is equipped with working power supply, no external power supply is required. When the external contact is closed or disconnected, the meter displays the switch status locally, and the remote transmission function can be realized through the communication port of the meter, that is, the "remote message" function.

The switching output of the PZ series programmable intelligent meter is relay output, which can be remotely controlled by the host computer (the remote control has two modes: 1, level trigger; 2, pulse trigger) to realize the "remote control" function, or according to customer requirements. Implement the corresponding alarm function (such as over current, under voltage).

The communication address of the PZ series programmable intelligent meter and the digital switching input and switching output is 0022H, and its correspondence with the digital input and output is as follows:

| | | | | | | | | | |
|-------|----|----|-----|-----|-----|-----|-----|-----|----------|
| 0022H | 16 | 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8~1 |
| | | | DO2 | DO1 | DI4 | DI3 | DI2 | DI1 | Reserved |

6.2.2 Power parameters and electrical energy

The series of measured values are read by the command No. 03 of the Modbus-RTU communication protocol. The correspondence between the communication value and the actual value is as follows: (Agreed Val_t is the communication read value, Val_s is the actual value).

1. Phase voltage UA, UB, UC, line voltage UAB, UBC, UCA, zero sequence voltage:

$$\text{Val}_s = \text{Val}_t \times 10^{\text{DPT}-4}, \text{ Unit volt V, DPT is read from the high byte of 0023H.}$$

2. Current IA, IB, IC, zero sequence current:

$$\text{Val}_s = \text{Val}_t \times 10^{\text{DCT}-4}, \text{ Unit Ampere A, DCT is read from the low byte of 0023H.}$$

3. Power PA, PB, PC, Psum, QA, QB, QC, Qsum:

$$\text{Val}_s = \text{Val}_t \times 10^{\text{DPQ}-4}, \text{ Active power unit watt W, reactive power unit var, DPQ read from 0024H high byte, active power and reactive power symbols from 0024H low byte (from high to low, Q, Qc, Qb, Qa, P, Pc, Pb, Pa) read.}$$

4. Power factor values PFA, PFB, PFC, PFsum:

$$\text{Val}_s = \text{Val}_t / 1000, \text{ No unit}$$

5. Frequency:

$$\text{Val}_s = \text{Val}_t / 100, \text{ Unit Hertz Hz}$$

6. Electrical energy:

For the PZ series programmable intelligent meter, the following a and b methods can be used to read the electric energy, and the user can select according to the actual situation.

a) Read address 003FH~0040H (absorbed active energy), 0041H~0042H (release active energy), 0043H~0044H (inductive reactive energy), 0045H~0046H (capacitive reactive energy) secondary energy, read again PT, CT, calculated according to the following formula:

Electrical energy communication readout value $Val_t = \text{first word} \times 65536 + \text{second word}$

The primary value of electric energy is $Val_s = Val_t / 1000 \times PT \times CT$, the unit of active energy: kilowatt hour (kWh), and the unit of reactive energy: kilowatt hour (kvarh). The PT is read from the address 0003H, and the CT is read from the address 0004H.

Note: In general, the user reads the absorbed active energy.

b) Read the primary side energy in 0047H~004EH. This value uses the floating point variable data type. It uses the sign bit to represent the sign of the number, and the exponent and mantissa to represent the size of the number. The data format adopted by the meter is IEEE754 data format, with 24-bit precision. The high order of the mantissa is always "1", so it is not saved. The bit distribution is as follows:

1-bit sign bit, 8-bit exponent bit, 23-bit mantissa, the sign bit is the highest bit, and the mantissa is the lowest 23 bits.

Specific examples are as follows:

Read number (such as 047H 048H, 2word, from high to low, total 4byte, 32bit):

| | | |
|--------------|---------------------|--|
| <u>0</u> | <u>10001110</u> | <u>100 1011 1010 1100 0000 0000b</u> |
| Sign bit S | Index position E | mantissa M |

The sign bit S=0, "1" is negative and "0" is positive;

Calculate the index E=10001110, and convert it to a decimal number 142;

Calculate the mantissa M=100 1011 1010 1100 0000 0000, and convert it to decimal number 4959232.

Calculation formula: primary side charge

$$= (-1)^S \times 2^{(E-127)} \times \left(1 + \frac{M}{2^{23}} \right)$$

The calculation result in the above example is:

$$\left(-1 \right)^0 \times 2^{(142 - 127)} \times \left(1 + \frac{4959232}{2^{23}} \right) = 52140 \text{Wh} = 52.14 \text{kWh}$$

6.2.3 Event Record

Event record 1st - Event record 16th, recorded in order of time, that is, event record 1st records the data of the event that occurred recently, and event record 16th records the data of the early event. The data format of each event record is shown in Table 10:

Table 10 Event record data format 1

| | High 8 bits | Low 8 bits |
|-----------|---|---|
| Address 1 | Bit 0 (lowest bit): 0 is DO, 1 is DI 7th bit (highest bit): 0 is open and 1 is closed | Switching serial number: 0 is the first road, 1 is the second road, and so on. |
| Address 2 | Alarm type: see 5.4.3 | Combined alarm type ^{note} |
| Address 3 | Year | Month |
| Address 4 | Day | Hour |
| Address 5 | Minute | Second |
| Address 6 | The value at the time of the alarm (the minimum value of the three phases is recorded when the phase is broken) | |

Note: 0-high voltage, 1-low voltage, 2-high frequency, 3-low frequency, 4-high power, 5-low power, 6-high current, 7-low power factor, 8-high voltage Balanced, 9-high current imbalance

Table 11 Event record data format 2

| | High 8 bits | Low 8 bits |
|-------------|---|---|
| Address 1 | Bit 0 (lowest bit): 0 is DO, 1 is DI 7th bit (highest bit): 0 is open and 1 is closed | Switching serial number: 0 is the first road, 1 is the second road, and so on. |
| Address 2 | Alarm type: see 5.4.3 | Combined alarm type |
| Address 3 | Year | Month |
| Address 4 | Day | Hour |
| Address 5 | Minute | Second |
| Millisecond | | |
| Address 6 | The value at the time of the alarm (the minimum value of the three phases is recorded when the phase is broken) | |

Example: DO1 is the A-phase voltage alarm. When the under-voltage alarm occurs at 14:56:32 on January 22, 15th, the alarm value is 172.2V, the corresponding register value is shown in Table.

| | High 8 bits | Low 8 bits |
|-----------|-------------|------------|
| Address 1 | 128 | 0 |
| Address 2 | 1 | 0 |
| Address 3 | 15 | 1 |
| Address 4 | 22 | 14 |

| | | |
|-----------|------|----|
| Address 5 | 56 | 32 |
| Address 6 | 1722 | |

7 Common fault analysis

Common fault analysis and elimination

| Fault content | Analysis | Remarks |
|--|---|---------|
| No display after power on | Check if the power supply voltage is within the operating voltage range | |
| Voltage, current, power, etc. readings are incorrect | Check if the voltage-to-current ratio setting is correct Check if the wiring mode setting is consistent with the actual Check if voltage transformer, current transformer is intact | |
| Power or power factor is incorrect | Check if the wiring mode setting is consistent with the actual Check if the voltage and current phase sequence is correct Check if the wiring is correct | |
| Communication is not normal | Check whether the address, baud rate, check digit, etc. in the communication settings are consistent with the host computer. Check if the RS485 converter is normal Parallel connection of 120 ohms or more at the end of communication Check if the wiring is correct | |

Headquarters: Acrel Co., LTD.

Address: No.253 Yulv Road Jiading District, Shanghai, China

TEL.: 0086-21-69158338 0086-21-69156052 0086-21-59156392 0086-21-69156971

Fax: 0086-21-69158303

Web-site: www.acrel-electric.com

mail: ACREL008@vip.163.com

Postcode: 201801

Manufacturer: Jiangsu Acrel Electrical Manufacturing Co., LTD.

Address: No.5 Dongmeng Road,Dongmeng industrial Park, Nanzha Street,Jiangyin City,Jiangsu Province,China

TEL: 0086-510-86179966

Fax: 0086-510-86179975

Web-site: www.jsacrel.com

Postcode: 214405

E-mail: sales@email.acrel.cn