

T307



# ADL Series DIN-Rail Mounted Electric Energy Meter

Installation and Operation Instructions V1.0

Acrel Electric Co., Ltd.

## Statement

All rights reserved. Without the written permission of the Company, any paragraph or section of this manual shall not be extracted, copied or reproduced or distributed in any form. Otherwise, all consequences shall be borne by the violator.

The Company reserves all legal rights.

Our Company reserves the right to modify the product specifications described in this manual without further notice. Please consult your local agent for the current specifications of this product before placing an order.

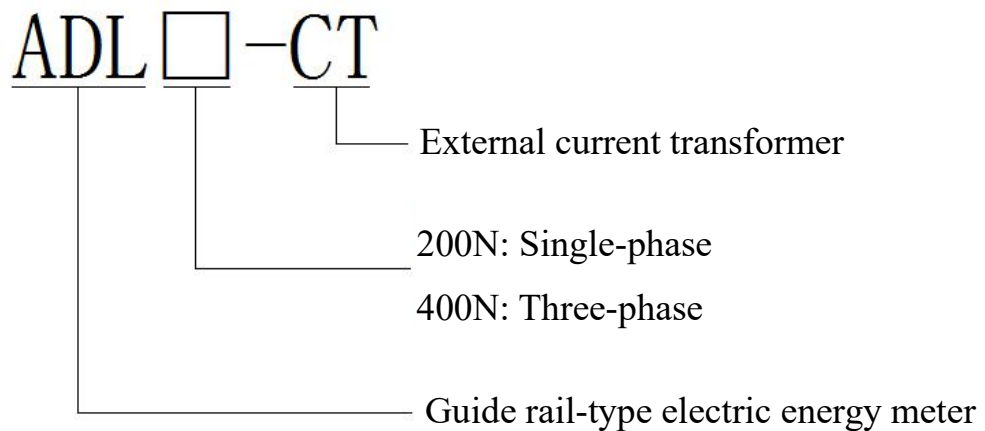
# Contents

1 Overview.....	1
2 Description of Model.....	1
3 List of Functions.....	1
4 Technical Parameters.....	1
5 Overall Dimensions.....	3
6 Connection and Installation.....	4
6.1 Schematic Diagram of Voltage and Current Connection.....	4
6.2 Functional Terminal.....	5
7 Main Functional Features.....	6
7.1 Measurement Function.....	6
7.2 Metering Function.....	6
8 Operation and Display.....	6
8.1 Key Function Description.....	6
8.2 Display Interface.....	6
8.3 Programming Interface.....	9
8.4 Settable Data Items.....	10
9 Communication Instructions.....	10
9.1 Address Table.....	11

# 1 Overview

ADL series DIN-rail mounted multifunctional electric energy meter is an intelligent instrument mainly designed for new energy power generation systems such as photovoltaic grid-connected system, micro inverter system, energy storage system, AC coupling system, etc. The product has the advantages of high precision, small volume, high respondent speed and convenient installation. The product has the features of sampling, metering and monitoring power parameters, communicating with an inverter or an energy management system (EMS), realizing the functions of preventing reverse flow, regulating power generation, charging and discharging batteries according to real-time power and accumulated electric energy, and realizing bidirectional metering and household distributed photovoltaic energy management.

## 2 Description of Model



## 3 List of Functions

Table 1 List of Function Descriptions

Function	Descriptions	ADL200N-CT	ADL400N-CT
Electric energy metering	Active energy metering (forward and reverse)	■	■
	Reactive energy metering (forward and reverse)	■	■
	Split-phase energy	□	■
Electric quantity measurement	U, I	■	■
	P, Q, S, PF, F	■	■
LCD display	Segmented LCD display	■	■
Key programming	ommunication, transformation ratio and other parameters can be programmable by the key	□	■
Pulse output	Active pulse output	■	■
LED alarm	Operation instructions	□	■
Communication	RS485: Modbus RTU	■	■

## 4 Technical Parameters

Table 2 Description of Technical Parameters

Item		Performance Parameters		
Model Series		ADL200N-CT	ADL400N-CT	
Measurement	Grid	Single-phase	Three-phase four-wire, three-phase three-wire, single-phase three-wire	
	Voltage	Rated voltage	230V	Three-phase: $3 \times 220/380V$ 、 $3 \times 230/400V$ 、 $3 \times 277/480V$
		Overload	1.2 times rating (continuous) 2 times the rating for 1 second	
		Power consumption	<0.2VA	
		Accuracy class	Error $\pm 0.5\%$	
	Current	Input current	120A	$3 \times 80A$
		Overload	1.2 times rating (continuous) 2 times the rating for 1 second	
		Power consumption	<0.2VA	
		Accuracy class	Error $\pm 0.5\%$	
	Power	Active, reactive, apparent power, error $\pm 0.5\%$		
	Grid frequency	45~65Hz, error $\pm 0.5\%$		
	Response rate	$\leq 100ms$ (voltage, current, power)		
		$\leq 1s$ (electrical energy)		
Metering	Electric energy	Active energy : Class B (split current transformer) Reactive energy (Class 2 accuracy)		
Electromagnetic compatibility	Electrostatic discharge immunity class III			
	Electrical fast transient burst immunity class IV			
	Surge (shock) immunity Class IV			
Security	Power frequency withstand voltage	Between communication and signal input, AC4kV 1min		
	Insulation resistance	Input and output terminals to casing $>100M\Omega$		
Communication	Interface and communication protocol	RS485 interface and Modbus RTU protocol		
	Communication address range	Modbus RTU:1~ 247;		
	Baud rate	Support 1200bps-38400bps		
Environment	Operating temperature	$-40^{\circ}C \sim +70^{\circ}C$		
	Storage temperature	$-40^{\circ}C \sim +70^{\circ}C$		
	Relative humidity	$\leq 95\%$ (without condensation)		
	Altitude	$\leq 3000m$		

## 5 Overall Dimensions

### 5.1 Instrument size

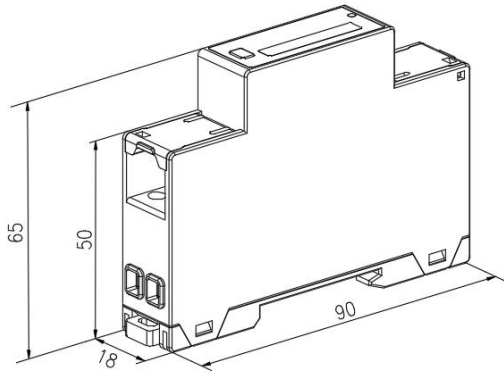


Figure 1 ADL200N-CT


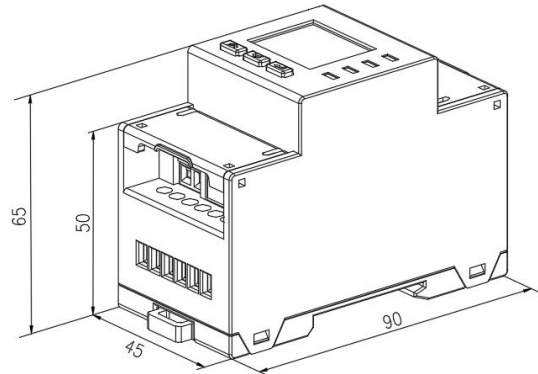


Figure 2 ADL400N-CT

### 5.2 Transformer size

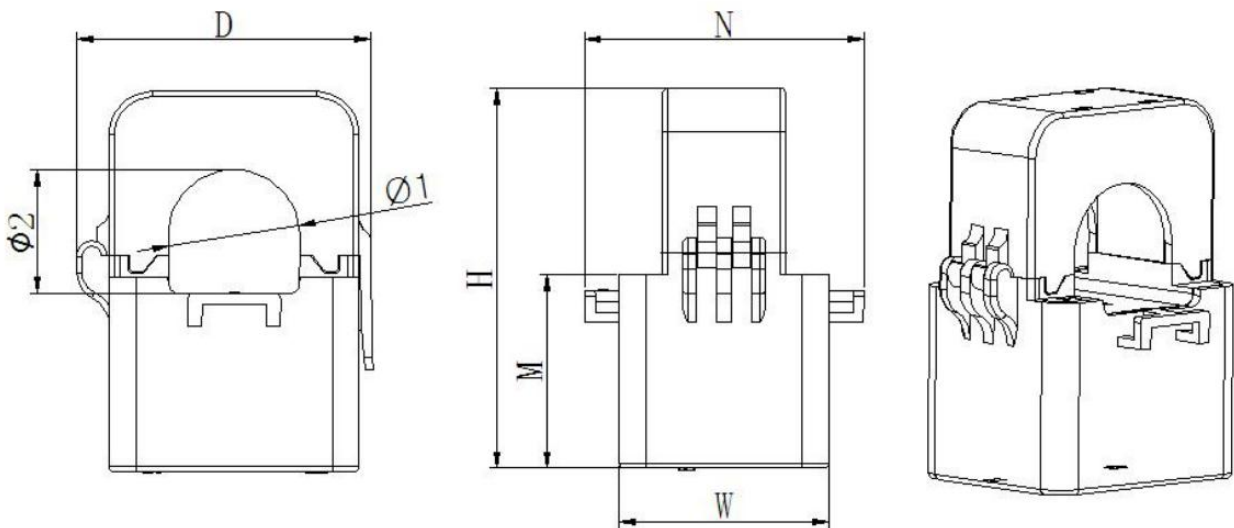

measur specifications	outline dimension (mm)					perforation size (mm)		Tolerance (mm)
	W	H	D	M	N	Φ1	Φ2	
K-Φ16	31	50	36	27	42	16	17	±1

Note: The secondary lead wire of the transformer is a 2464 26AWG single lead wire with a standard wire length of 5m±10cm and a cold ferrule.

## 6 Connection and Installation

### 6.1 Schematic Diagram of Voltage and Current Connection

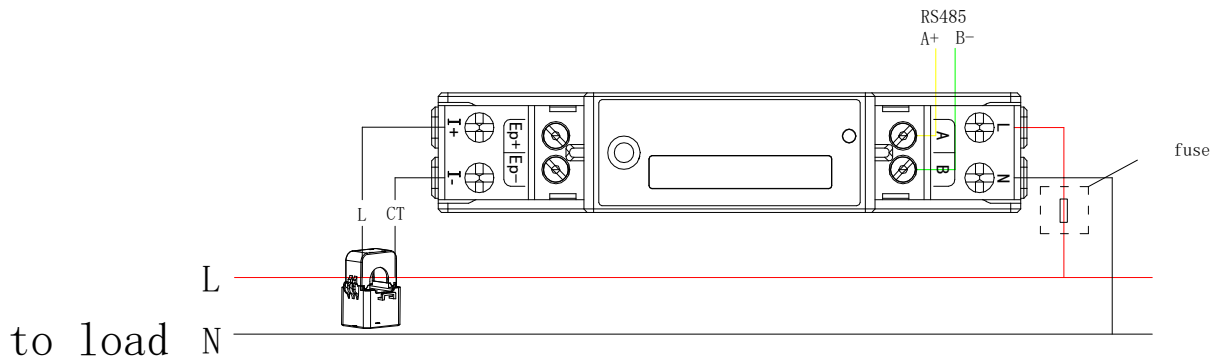


Figure 3 ADL200N-CT

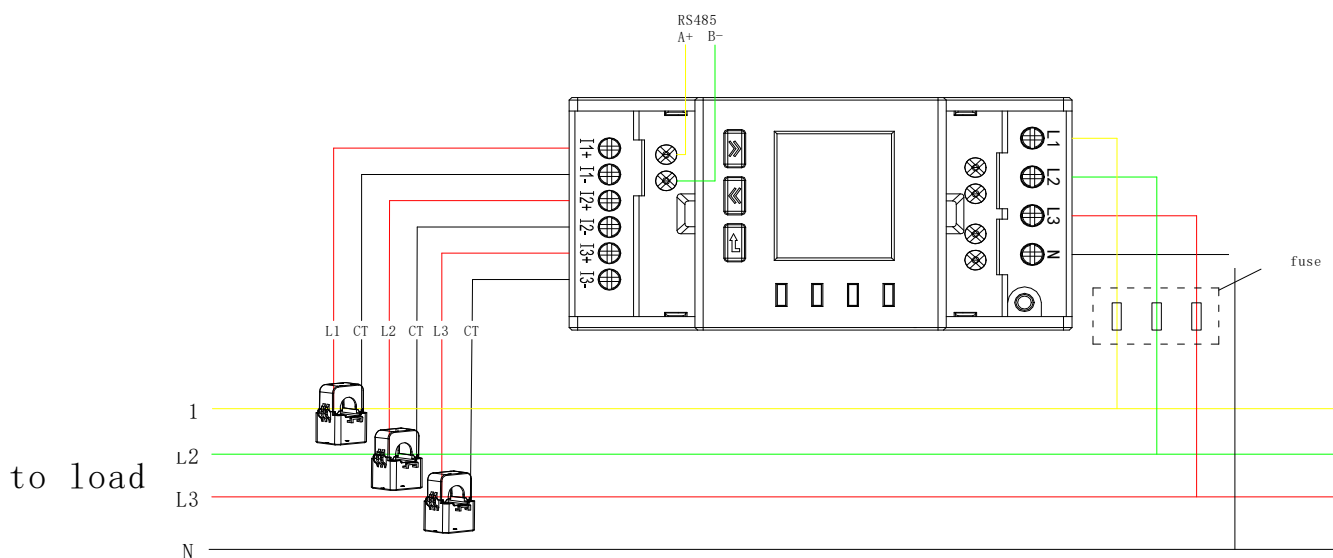


Figure 4 ADL400N-CT Three-phase Four-wire Connection Through Current Transformer

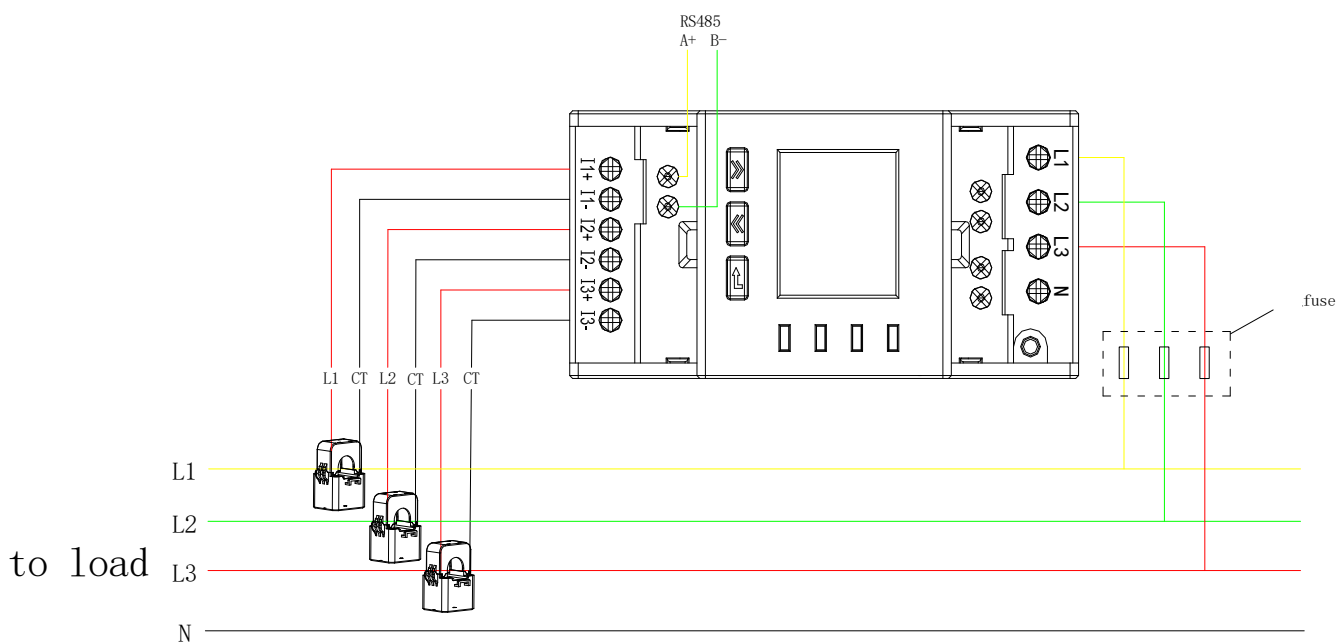


Figure 5 ADL400N-CT Three-phase Three-wire Connection Through Current Transformer (this connection method is

limited to three-phase balance) (instrument is set as 3P4L)

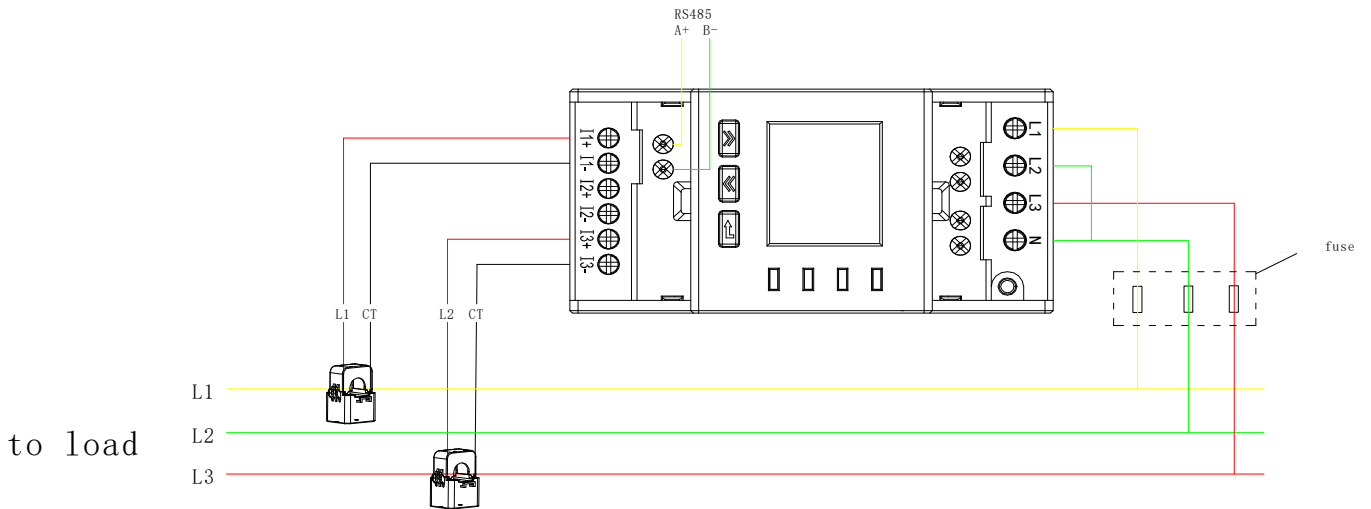


Figure 6 ADL400N-CT Three-phase Three-wire Connection Through Current Transformer (instrument is set as 3P3L)

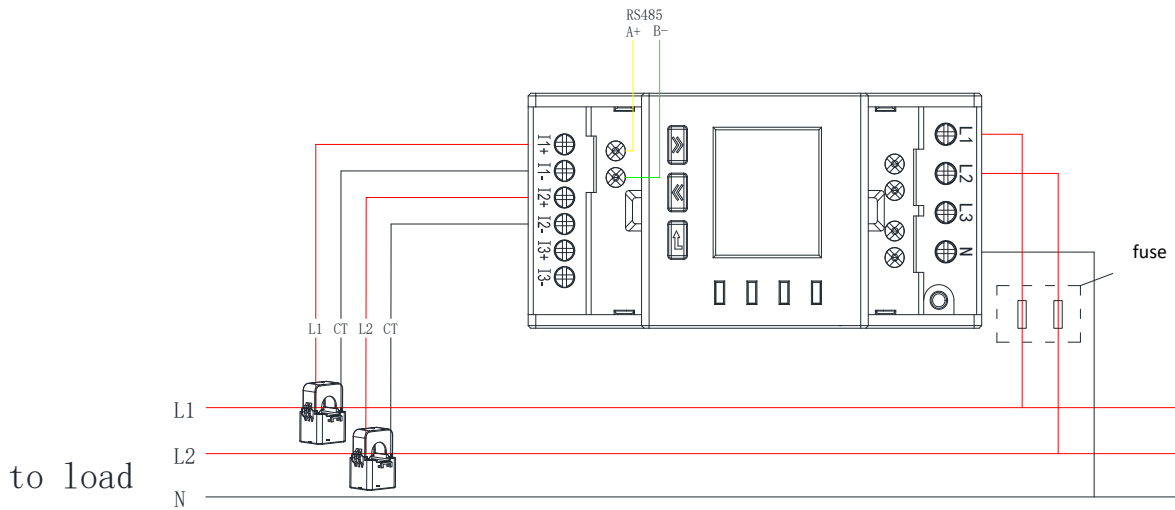


Figure 7 ADL400N-CT Single-phase Three-wire Connection Through Current Transformer

**Note:for safty reasons,a fuse with a rated current of 5A needs to be connected to the voltage input terminal.**

## 6.2 Functional Terminal

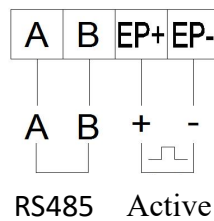


Figure 8 Communication and Pulse Connection



## 7 Main Functional Features

### 7.1 Measurement Function

It can measure total power parameters including voltage U, current I, active power P, reactive power Q, apparent power S, power factor PF and frequency. Wherein, the voltage U is reserved with 1 decimal place, the frequency F is reserved with 2 decimal places, the current I is reserved with 2 decimal places, and the power P is reserved with 3 decimal places.

For example,  $U = 220.1V$ ,  $f = 49.98Hz$ ,  $I = 1.99A$ ,  $P = 0.439kW$

The above electrical parameter high-speed response registers are also provided with the instrument, see Chapter 9 “Communication Instructions”.




### 7.2 Metering Function

It can measure the current combined active electric energy, forward active electric energy, reverse active electric energy, forward reactive electric energy and reverse reactive electric energy.

## 8 Operation and Display


### 8.1 Key Function Description

Table 4 Key Function Description

Key Icon	Key Name	Key Functions
	Up	When switching the interface to the left, show left shift and flicker shift in programming interface
	Down	When switching the interface to the right, show right shift and modify flicker in programming interface
	Programming confirmation	View submenu, confirm the saving setting in the programming interface

### 8.2 Display Interface

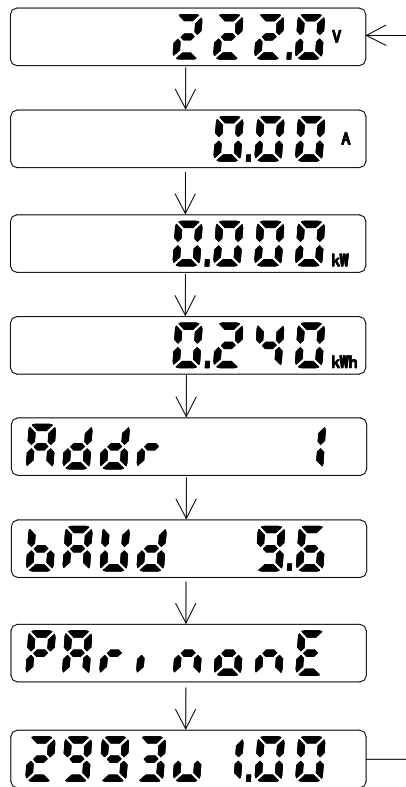**ADL200N:**



The interface can be switched by pressing the key or the interface can be displayed automatically and circularly

**ADL400N:**

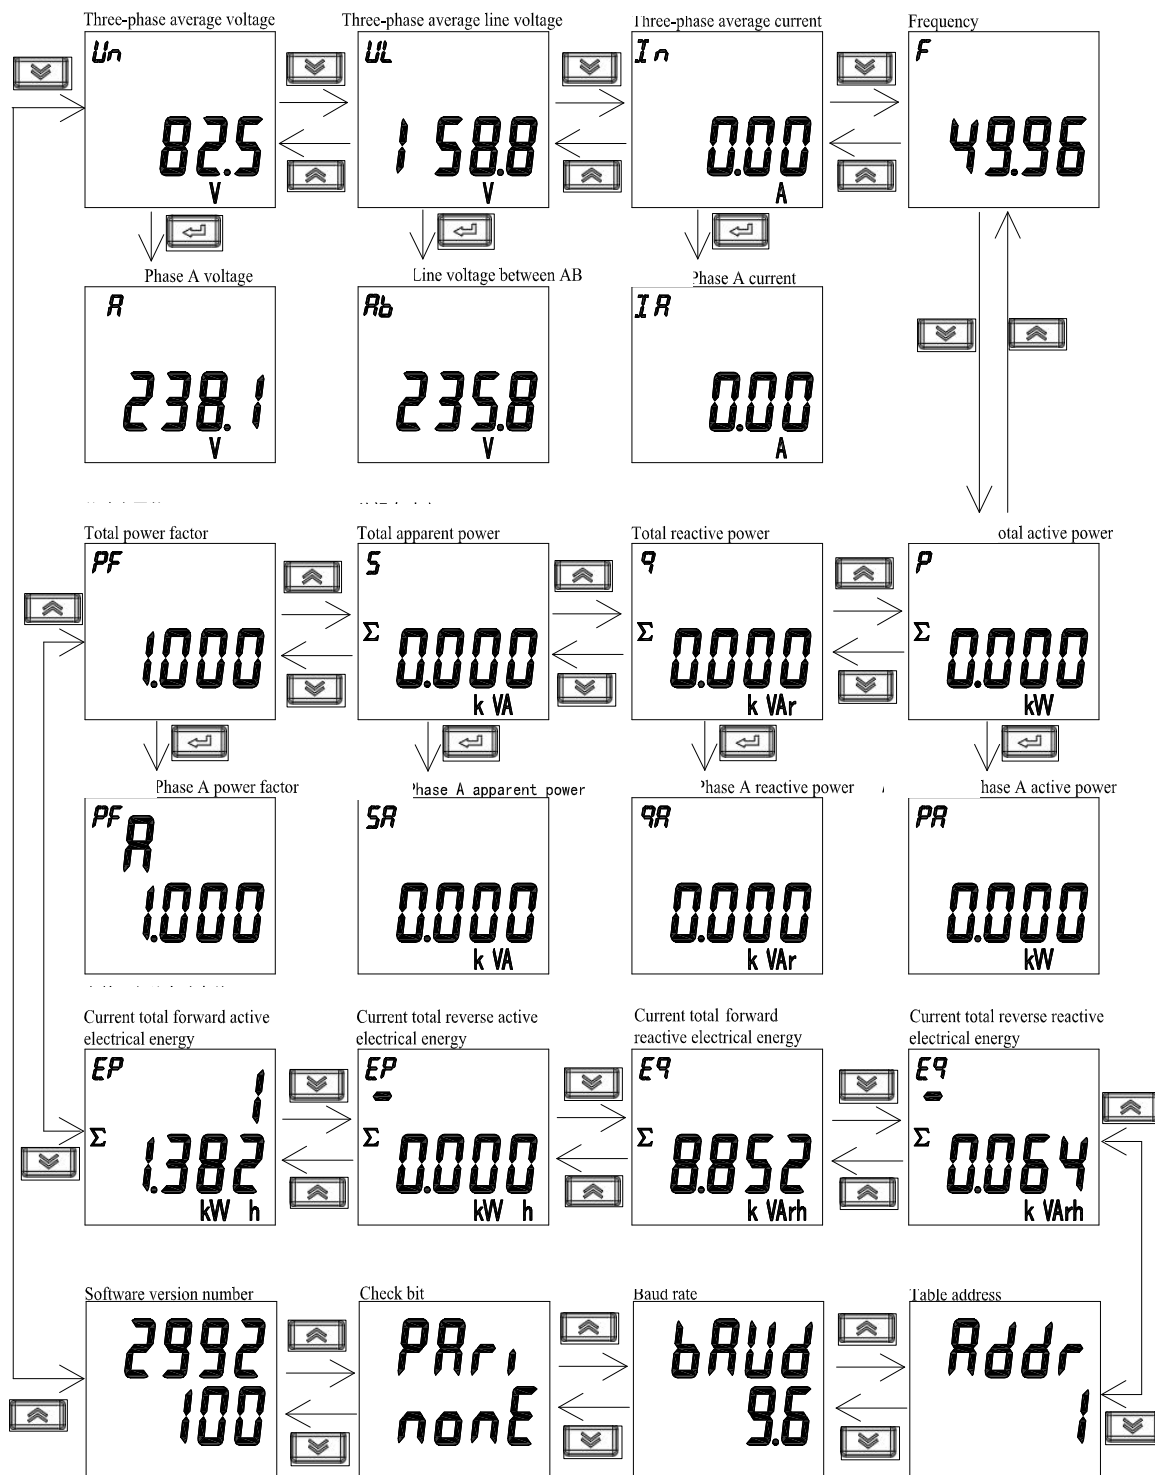






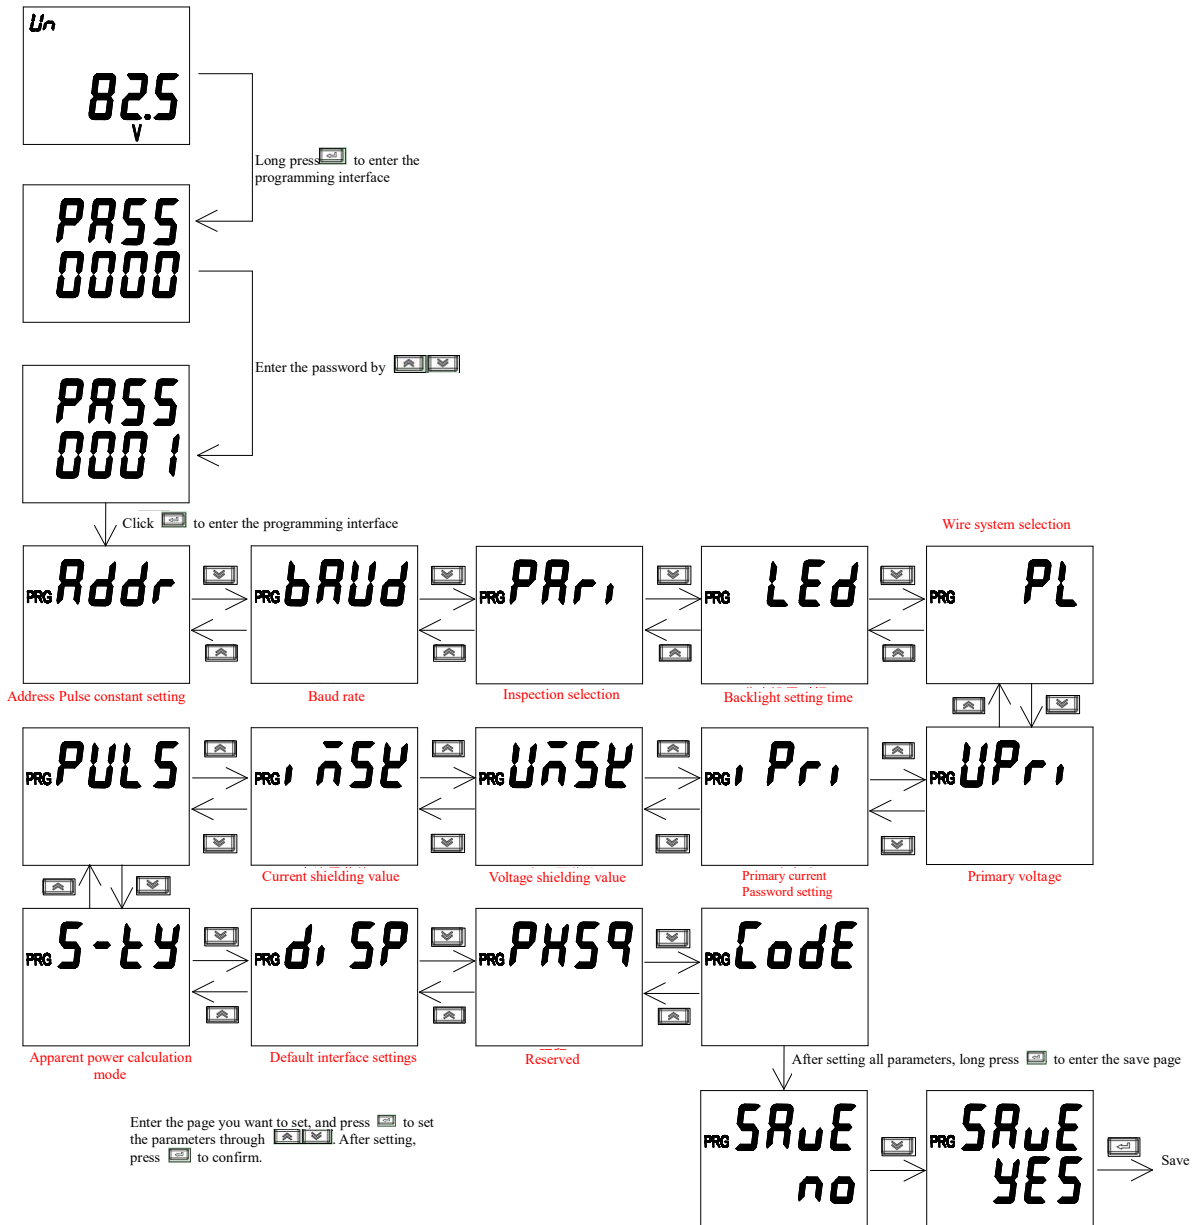


Figure 9 Description of Display Interface

Note: The above is only a part of the display interface. Phase A, B and C can be switched by Enter key (phases between AB, BC and AC are for the same reason). The display mode of other interfaces is similar to that shown in the above figure. The display meaning can be judged according to the information displayed in the interface.

### 8.3 Programming Interface

When in any display item, press  for a long time to enter the "PASS" interface. There is a prompt for password, and the default password is 0001, and then press  again. If the password is incorrectly entered, return to "0000" to re-enter; If the password is entered correctly, the parameters can be set. Press  for a long time to enter the "SAVE" interface, press  to switch to "YES", then press  to SAVE and exit, and press  when switching to "NO" to exit directly, with no need to "SAVE".



## 8.4 Settable Data Items

Table 7 Description of Setting Menu

Symbol	Meaning	Scope
Addr	slave address	1-247
bAud	Baud rate	38.4: 38400 19.2: 19200 9.6: 9600 4.8: 4800 2.4: 2400 1.2: 1200
PAri	parity	None、 Even、 Odd
LEd	Backlight time (reserved)	0-999s
PL	Grid	3P4L: Three-phase four-wire 3P3L: Three-phase three-wire
UPri	Primary voltage	0.1-9999999.9V
iPri	Primary current	0.01-999999.99A
UMSK	Voltage shielding value	0-99.99%
iMSK	Current shielding value	0-99.99%
PULS	Pulse constant	1-99999
S-ty	Apparent power calculation mode	RMS: RMS calculation method PQS: PQS calculation method
diSP	Power-on default interface	Auto: Automatic wheel display Others: Other interfaces
PHSq	Reserved	
CoDE	Password	1-9999

## 9 Communication Instructions

ADL200N address is 1, baud rate is 9600, no parity. Program version V1.00.

ADL400N address is 2, baud rate is 9600, no parity. Program version V1.04.

The instrument RS485 communication interface supports MODBUS-RTU communication protocol. The baud rate of communication interface can be set between 1,200bps, 2,400 bps, 4,800 bps, 9,600bps, 19,200 bps and 38,400 bps, and the check bit is no check.

The RS485 communication interface of the instrument requires shielded twisted pair connection, and the layout of the whole grid should be considered when wiring: For example, the length and direction of communication cable, the position of upper computer, the matching resistance at the end of the grid, the communication converter, the scalability of the grid, the coverage of the grid, the electromagnetic interference of the environment and other factors should be considered comprehensively.

Note:

1. It shall strictly construct according to the requirements in the wiring project;
2. For instruments that do not need communication temporarily, they should be connected to RS-485 grid for diagnosis and test;
3. When connecting RS-485 cable, try to use two-color twisted pair. All 485 communication ports "A" are

terminated in the same color, and "B" is terminated in another color.

4. The length of RS-485 bus (from the communication interface of the upper computer to any connected instrument terminal communication interface) shall not exceed 1,000 meters.

## 9.1 Address Table

Meter supports 03H command and 10H command in MODBUS-RTU protocol, in which 03H for reading multiple registers and 10H for writing multiple registers. Please check the protocol data format by yourself. The following table is the register address table of the meter:

Table 8 Communication Address Table

Address	Name	R/W	Length (Bytes)	Type	Unit	Note
1000H	slave address	R/W	1	uint16		1-247
1001H	baud rate	R/W	1	uint16		1200, 2400, 4800, 9600, 19200, 38400,
1002H	parity	R/W	1	uint16		Low byte 0: None 1: Odd 2: Even High byte 0: 1stop 1: 1.5stop 2: 2stop
1010H	Grid	R/W	1	uint16		0:3P4L 1:3P3L
1011H	rated second voltage	R/W	1	uint16	0.1V	0.1-999.9V
1012H	rated second current	R/W	1	uint16	0.01A	0.01-999.99A
1015H	rated primary voltage	R/W	1	uint32	0.1V	0.1-99999.9V
1017H	rated primary current	R/W	1	uint32	0.01A	0.01-9999.99A
101DH	Password	R/W	1	uint16		1-9999
101EH	Pulse constant	R/W	1	uint16		1-99999
101FH	Voltage shielding value	R/W	1	uint16	0.01%	
1020H	Current shielding value	R/W	1	uint16	0.01%	
1023H	Power-on default interface	R/	1	uint16		0: Automatic wheel

		W				display Others: Other interfaces	
1035H	Apparent power calculation mode	R/ W	1	uint16		0: RMS 1: PQS	
2000H	A-phase voltage	R	2	float	V	1.Slow register 2.ADL200N only has A-phase data	
2002H	B-phase voltage	R	2	float	V		
2004H	C-phase voltage	R	2	float	V		
2006H	AB-line voltage	R	2	float	V		
2008H	BC-line voltage	R	2	float	V		
200AH	CA-line voltage	R	2	float	V		
200CH	A-phase current	R	2	float	A		
200EH	B-phase current	R	2	float	A		
2010H	C-phase current	R	2	float	A		
2012H	N-phase current	R	2	float	A		
2014H	A-phase active power	R	2	float	kW		
2016H	B-phase active power	R	2	float	kW		
2018H	C-phase active power	R	2	float	kW		
201AH	Total active power	R	2	float	kW		
201CH	A-phase reactive power	R	2	float	Kvar		
201EH	B-phase reactive power	R	2	float	Kvar		
2020H	C-phase reactive power	R	2	float	Kvar		
2022H	total reactive power	R	2	float	Kvar		
2024H	A-phase apparent power	R	2	float	KVA		
2026H	B-phase apparent power	R	2	float	KVA		
2028H	C-phase apparent power	R	2	float	KVA		
202AH	Total apparent power	R	2	float	KVA		
202CH	A-phase power factor	R	2	float			
202EH	B-phase power factor	R	2	float			
2030H	C-phase power factor	R	2	float			
2032H	Total power factor	R	2	float			
2034H	Frequency	R	2	float	Hz		
2100H	A-phase voltage	R	2	float	V		1.Slow register (response rate ≤100ms) 2.ADL200N only has A-phase data
2102H	B-phase voltage	R	2	float	V		
2104H	C-phase voltage	R	2	float	V		
2106H	AB-line voltage	R	2	float	V		
2108H	BC-line voltage	R	2	float	V		
210AH	CA-line voltage	R	2	float	V		
210CH	A-phase current	R	2	float	A		
210EH	B-phase current	R	2	float	A		

2110H	C-phase current	R	2	float	A	
2112H	N-phase current	R	2	float	A	
2114H	A-phase active power	R	2	float	kW	
2116H	B-phase active power	R	2	float	kW	
2118H	C-phase active power	R	2	float	kW	
211AH	Total active power	R	2	float	kW	
211CH	A-phase reactive power	R	2	float	Kvar	
211EH	B-phase reactive power	R	2	float	Kvar	
2120H	C-phase reactive power	R	2	float	Kvar	
2122H	total reactive power	R	2	float	Kvar	
2124H	A-phase apparent power	R	2	float	KVA	
2126H	B-phase apparent power	R	2	float	KVA	
2128H	C-phase apparent power	R	2	float	KVA	
212AH	Total apparent power	R	2	float	KVA	
212CH	A-phase power factor	R	2	float		
212EH	B-phase power factor	R	2	float		
2130H	C-phase power factor	R	2	float		
2132H	Total power factor	R	2	float		
2134H	Frequency	R	2	float	Hz	
3000H	active electric energy	R	4	double	kWh	
3004H	forward active electric energy	R	4	double	kWh	
3008H	reverse active electric energy	R	4	double	kWh	
300CH	reactive electric energy	R	4	double	kVarh	
3010H	forward reactive electric energy	R	4	double	kVarh	
3014H	reverse reactive electric energy	R	4	double	kVarh	
3018H	apparent electric energy	R	4	double	kVAh	
301CH	active electric energy of phase A	R	4	double	kWh	
3020H	forward active electric energy of phase A	R	4	double	kWh	
3024H	reverse active electric energy of phase A	R	4	double	kWh	
3028H	reactive electric energy of phase A	R	4	double	kVarh	
302CH	forward reactive electric energy of phase A	R	4	double	kVarh	
3030H	reverse reactive electric energy of phase A	R	4	double	kVarh	
3034H	active electric energy of phase B	R	4	double	kWh	
3038H	forward active electric energy of phase B	R	4	double	kWh	
303CH	reverse active electric energy of phase B	R	4	double	kWh	
3040H	reactive electric energy of phase B	R	4	double	kVarh	
3044H	forward reactive electric energy of phase B	R	4	double	kVarh	
3048H	reverse reactive electric energy of phase B	R	4	double	kVarh	



304CH	active electric energy of phase C	R	4	double	kWh	
3050H	forward active electric energy of phase C	R	4	double	kWh	
3054H	reverse active electric energy of phase C	R	4	double	kWh	
3058H	reactive electric energy of phase C	R	4	double	kVarh	
305CH	forward reactive electric energy of phase C	R	4	double	kVarh	
3060H	reverse reactive electric energy of phase C	R	4	double	kVarh	

Headquarter: Acrel Co., LTD.

Address: No.253 Yulv Road Jiading District, Shanghai, China

TEL.: 0086-21-69158338 0086-21-69156052 0086-21-59156392 0086-21-69156971

Fax: 0086-21-69158303

Web-site: [www.acrel-electric.com](http://www.acrel-electric.com)

Email: [ACREL008@vip.163.com](mailto:ACREL008@vip.163.com)

Postcode: 201801

Manufacturer: Jiangsu Acrel Electrical Manufacturing Co., LTD.

Address: No.5 Dongmeng Road, Dongmeng industrial Park, Nanzha Street, Jiangyin City, Jiangsu Province, China

TEL: 0086-510-86179966

Fax: 0086-510-86179975

Web-site: [www.jsacrel.com](http://www.jsacrel.com)

Email: [sales@email.acrel.cn](mailto:sales@email.acrel.cn)

Postcode: 214405